

Large Rectangle AquaPod™

Instructions for Setup and Care

Please read through all the instructions before setting up your AquaPod™




- Select a level grassy surface.
- Unfold the AquaPod and smooth it out.
- Insert the fish (small [A], large [B]) through the plug in the top.

- Insert a hose (remove any nozzle attachments first [C]).
- Lift up one side of the AquaPod while filling to allow bubbles to escape. (Note: parent supervision required while filling).
- Approximate fill times:
Small Rectangle: 8-10 minutes
Round: 30 minutes
Large Rectangle: 60 minutes
- When the AquaPod is completely full, close the plug tightly!



- To empty:
Small Rectangle and Round: Open the plug and lift up one side of the AquaPod to help the water flow out.
Large Rectangle: Open the plug on the bottom of the AquaPod and let the water flow out (D).

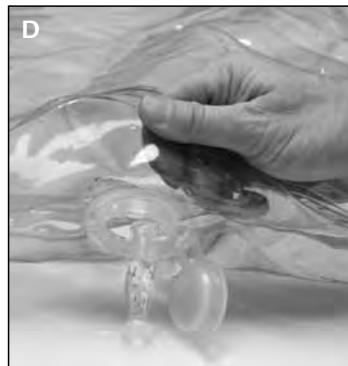

SUGGESTIONS FOR USE AND CARE:

- Empty the AquaPod when not in use.
- Avoid walking on the AquaPod's surface when it is empty. (An empty AquaPod may present a slipping hazard.)
- Keep the AquaPod out of the sun when not in use.
- Please note that the AquaPod is not intended for use as a water slide.
- Prevent (or treat) mold in the AquaPod's water with distilled white vinegar.

Small Rectangle and Round: add ½ cup vinegar to the water.

Large Rectangle: add 1 cup vinegar to the water.

REPAIR INSTRUCTIONS:

1. Make sure tear location is clean of dirt and debris. Cover tear area and provided patch with bonding adhesive.
2. Apply provided vinyl patch to tear. Use entire patch to ensure strongest possible repair.
3. Apply continuous pressure to patched area overnight.

Toys You'll Feel Good About Giving®

HearthSong

hearthsong.com

Item #730787 Made in China for HearthSong®.
©2016. HearthSong®, Madison, VA 22727 (800) 533-4397