
Assembly Instructions


Your couch comes packaged in one box.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.


Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching the finish.

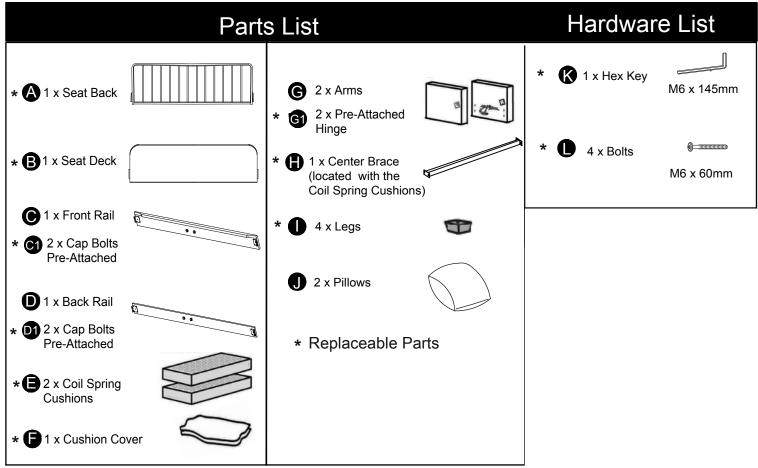




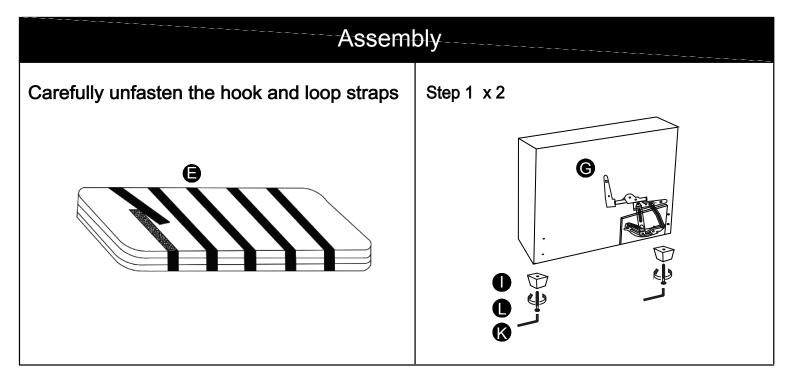


Assembly Step 2 **G** Hook and Loop Facing Down 0 Lip Facing Up Step 3 FRONT 01 0

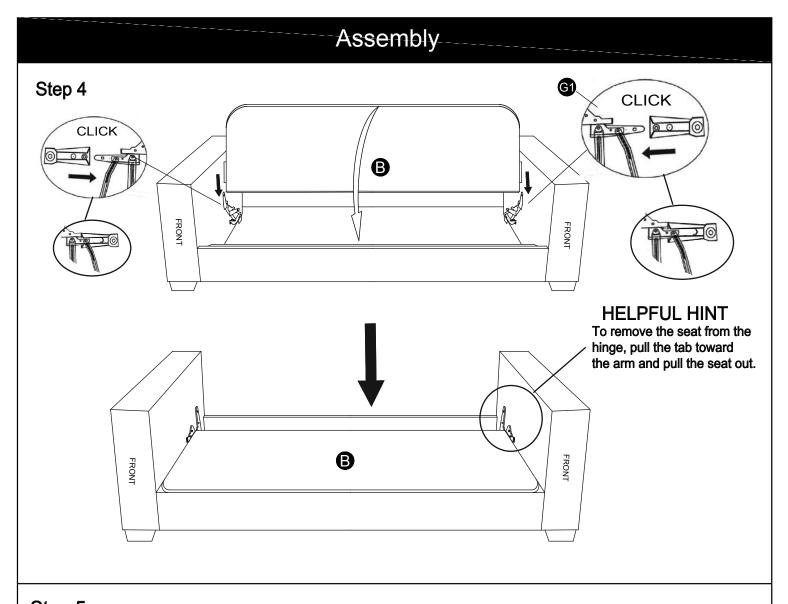


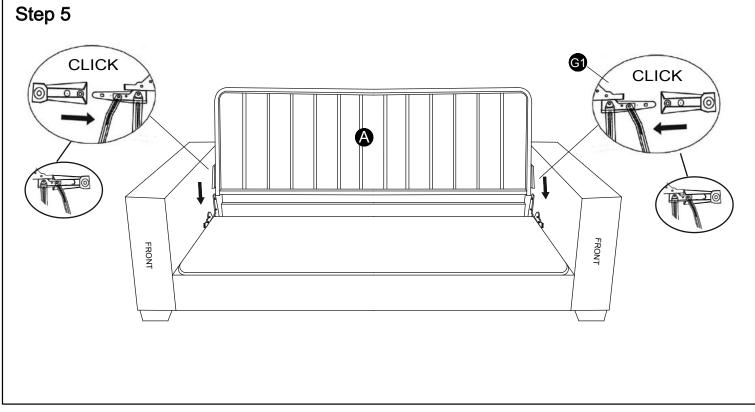


Assembly


Step 6

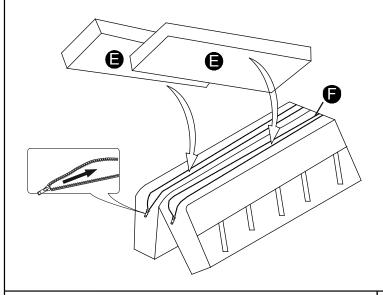

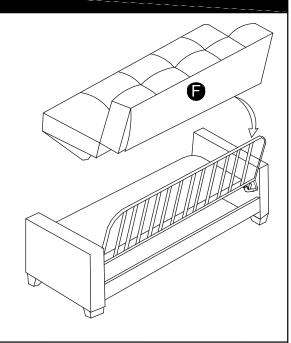


Step 7 Pull up on the seat until the back is lying flat

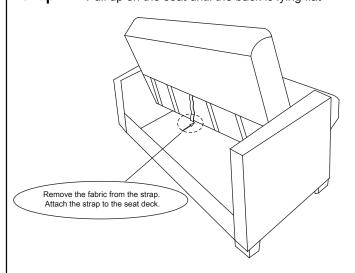


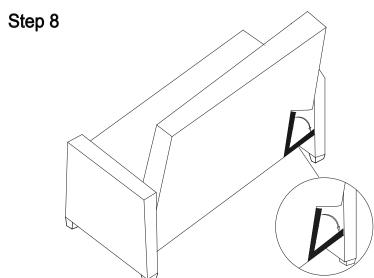


Step 9 If applicable

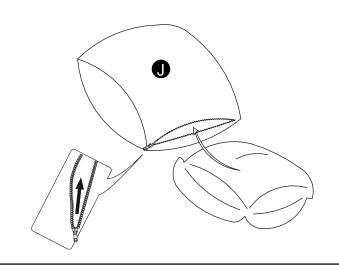

Step 10 If applicable

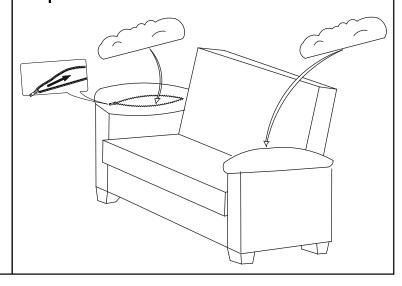


Convert the Couch to Bed

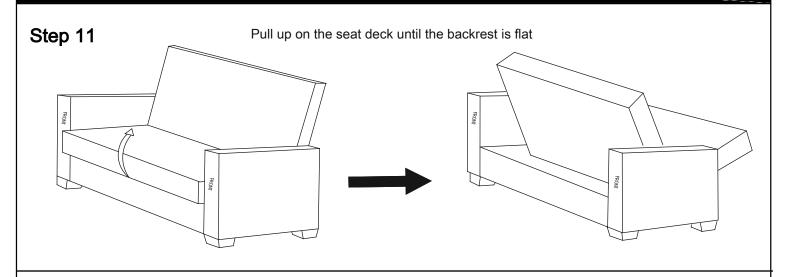


Step 12

Push against the vertical seat deck until it's past 12 o'clock and releases.

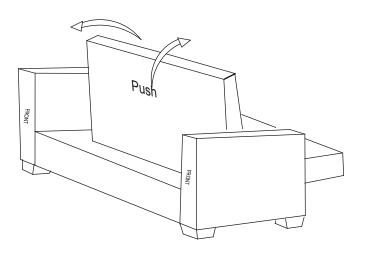

Step 13

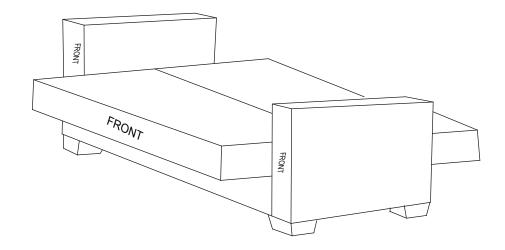


Gently let the unlocked vertical seat deck down so it is lying flat. It is now ready to sleep!

Convert the Bed to Couch


Step 14

Pull up on the seat deck until it clicks twice. Stop at one click if you want the seat to be more reclined.

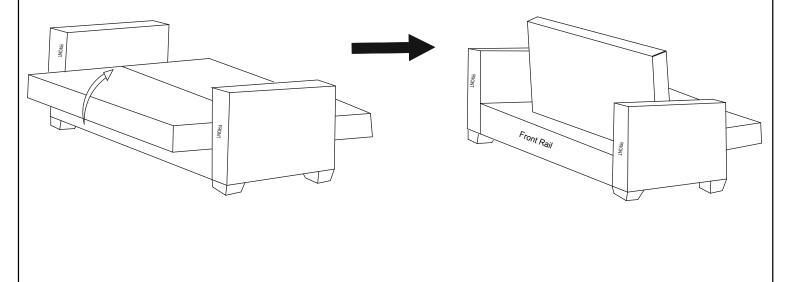

Step 15

Pull down on the seat deck toward the front rail until it is in the seated position.

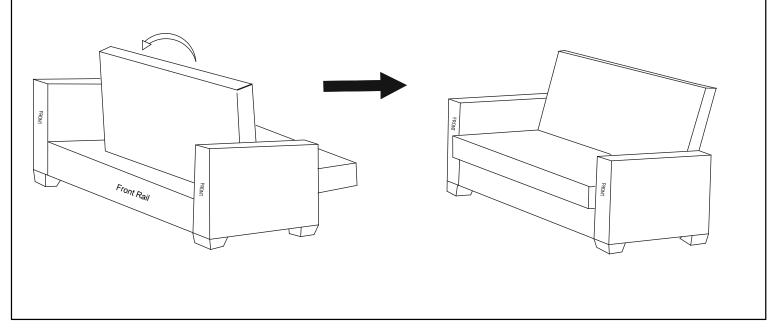

Your couch style may differ from images. Care for your furniture by periodically tightening all bolts using the included hex key.

One Year Warranty: The furniture is warranted against defects in workmanship and materials. Items covered would be seam slippage, frame structural integrity, fit and finish of parts. Items not covered would be product abused by the user, normal wear and tear, stains or discoloration due to use, damage in any transportation. Softening of foam is considered normal wear and tear and is not covered by warranty. Warranty is for PARTS ONLY and does not include transportation and labor costs associated with any warranty claim.

CAUTION: Tighten all components securely before use. Failure to do so may result in personal injury.