 


# Sunjoy L-GZ815PST Sonoma Wicker Gazebo

## Owner's Manual

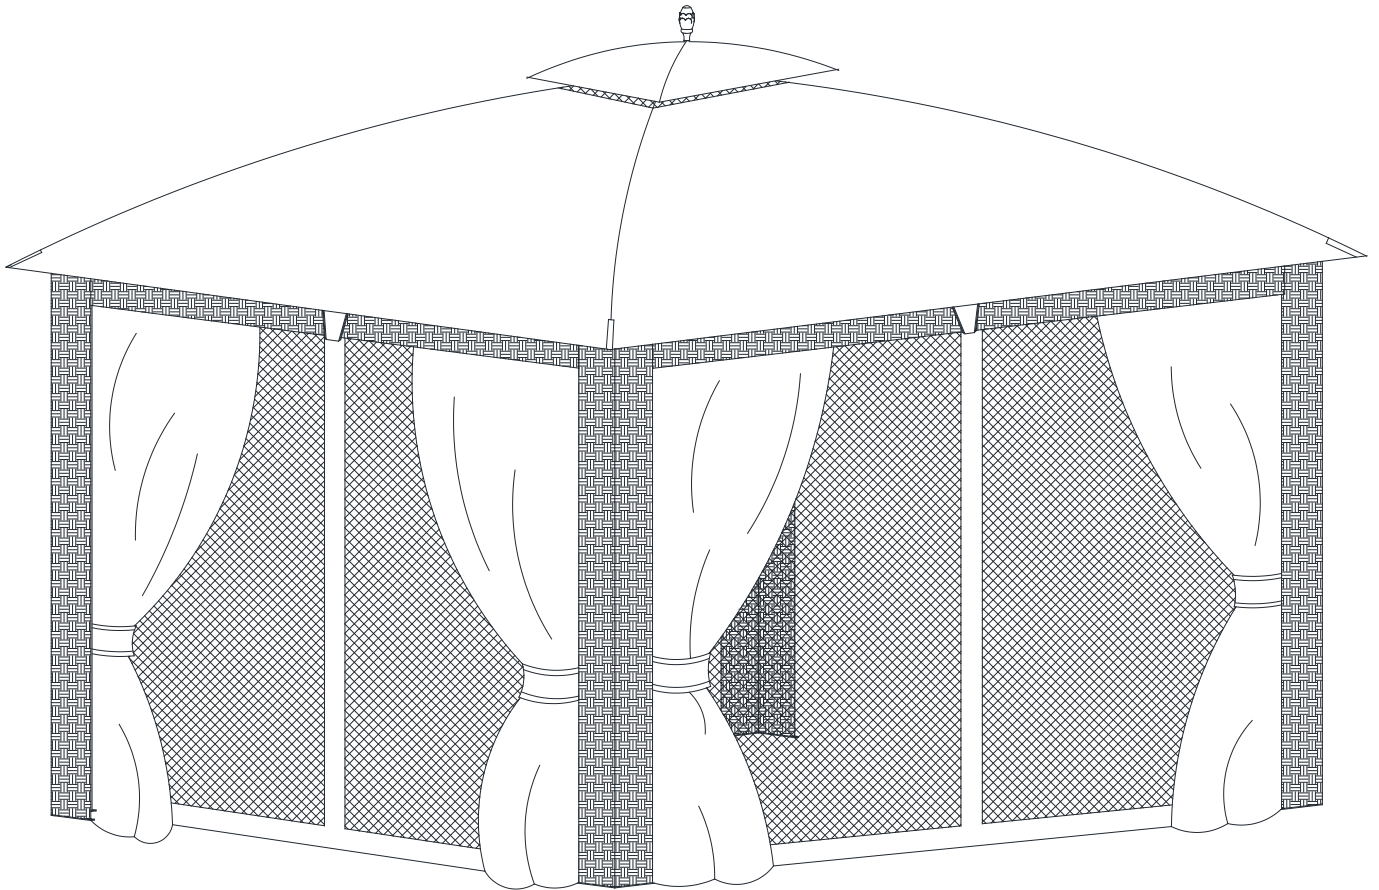

### **IMPORTANT**

Thank you very much for choosing Sunjoy Group.

Please take time to read these instructions thoroughly and follow each step carefully for safe and easy operation. Keep this manual for future reference.

We would like to hear from you with any comments or suggestions. You can call us toll-free at 1-866-578-6569 from 8:00 a.m. EST to 8:00 p.m. PST. You can also send the email to [customer.care@sunjoygroup.com](mailto:customer.care@sunjoygroup.com) or visit [www.sunjoyonline.com](http://www.sunjoyonline.com) to get tech. assistance or to place your replacement part order form.

### **Cautions:**

 
1. Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of gazebo construction.
2. The area for assembly should not be less than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry line or electrical wires.
3. This unit is heavy. Do not assemble this item alone. Four people are recommended for safe assembly.
4. Some parts may contain sharp edges. Wear protective gloves if necessary during assembly.
5. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.
6. For outdoor use only. Install on level ground. Do not cook inside the tent.
7. Check all bolts for tightness before and during usage
8. Pegs supplied must be used to hold this gazebo in place when upright.
9. WARNING: Please take down the gazebo during strong wind. The manufacturer or retailer is not liable for any loss of the product or other items due to the failure to take down the gazebo during strong wind.
10. Do not use candles, matches or open flames of any kind in or near a tent.
11. Build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night.
12. Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury
13. Extinguish or turn off all lanterns before going to sleep. Do not smoke in a tent.
14. KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made of flame-resistant fabric. It is not fireproof. The fabric will burn if left in continuous contact with a flame source.

### **Assembly Instructions:**





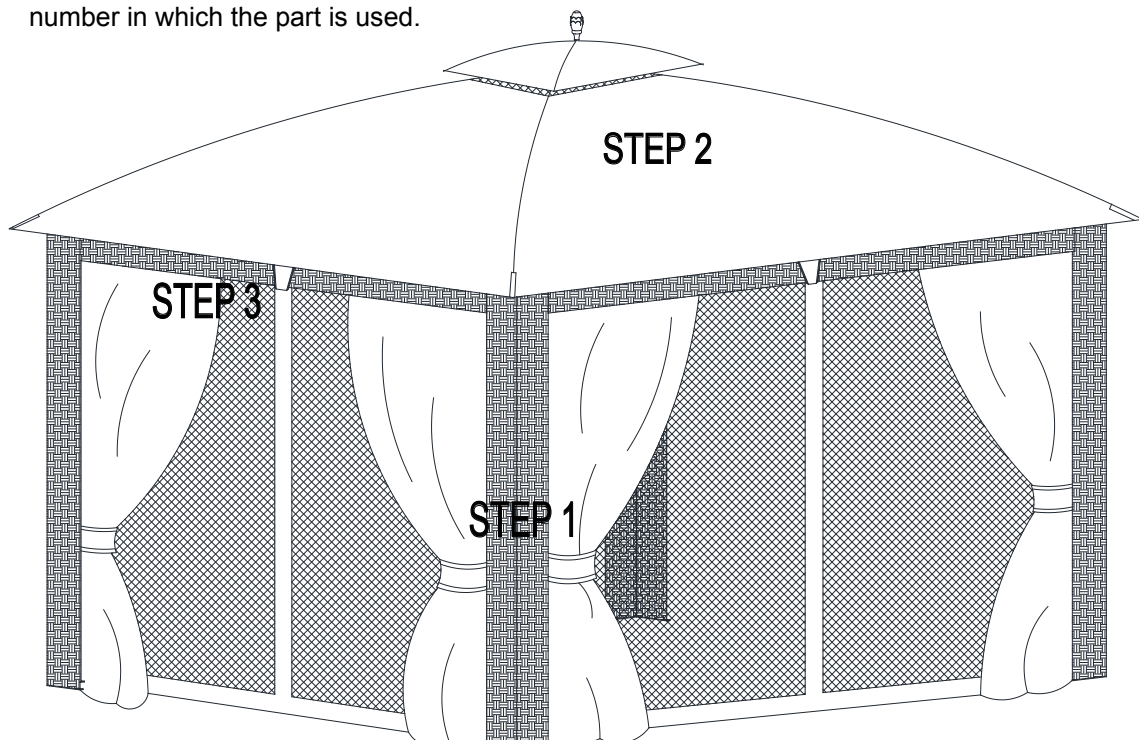


 

 


 




 

 





Our clear, easy-to-follow, step-by-step instructions will guide you through the project from start to finish.

Loading limit of the hook is 26 lbs.






Parts identification: For ease of identification, all parts are labeled to correspond to the Step number in which the part is used.





## Part List

 Post	A	4	
Long horizontal screen 1	B	2	
Long horizontal screen 2	C	2	
Short horizontal screen 1	D	2	
Short horizontal screen 2	E	2	
Cant beam	F	4	
Long middle beam	G	2	
Long middle beam down connector tube	G1	2	
Short middle beam	H	2	
Short middle beam down connector tube	H1	2	
Cant beam down tube	I	4	
Big top connector	J	1	
Small top cant beam	K	4	
Cant beam down connector	L	4	
Middle beam down connector	M	4	
Small top connector	N	1	
Finial	O	1	
Hook	P	1	
Ferrule	Q	4	
Long mosquito netting tube	R	4	
Short mosquito netting tube	S	4	
Small canopy	T	1	
Big canopy	U	1	
Mosquito netting	V	1	
Curtain	W	1	


## Hardware Pack 1

AA	M6x20 Bolt	72PCS	
BB	M6 Washer	80 PCS	
DD	M6 Nut	8 PCS	
FF	M6x20 Screw	8 PCS	
Z	Wrench	2 PCS	


### Step. 1

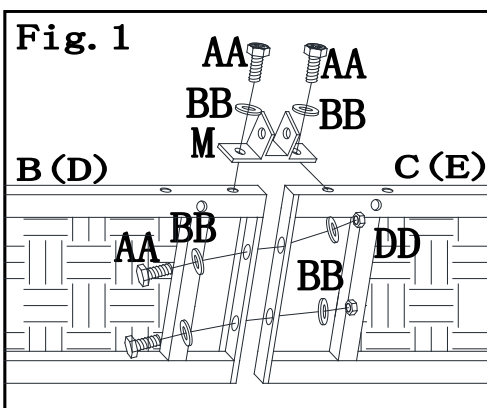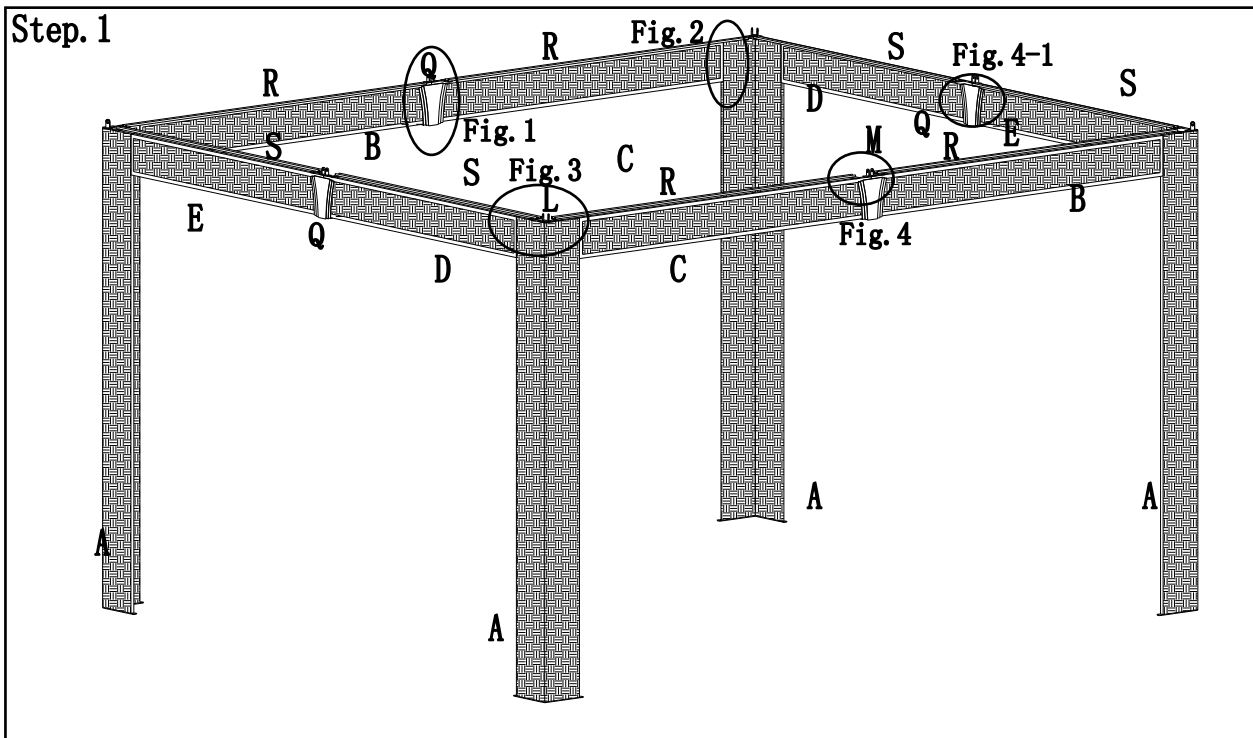    

 
**Fig.1** Attach long horizontal screen 1 (B) to long horizontal screen 2 (C) by bolt (AA), washer (BB) and nut (DD). Attach long screen (B & C) to middle beam down connector (M) by bolt (AA) and washer (BB). Use the same way to attach short horizontal screen.

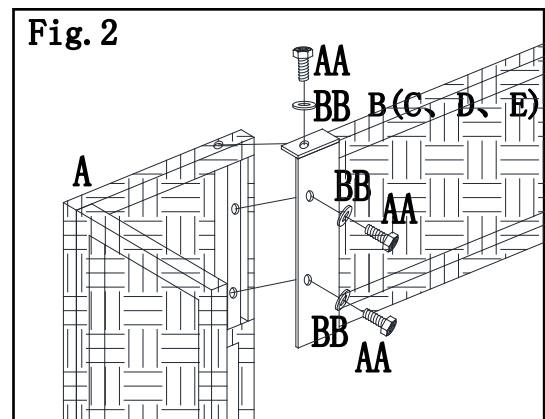


**Fig.2** Attach screen (B, C, D and E) to post (A) by bolt (AA) and washer (BB).

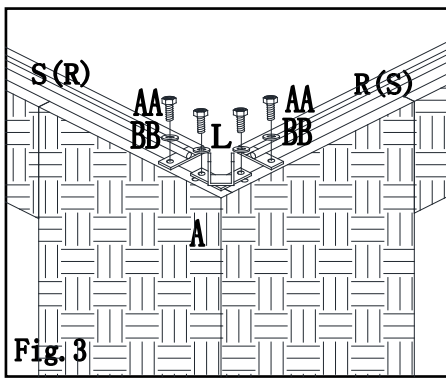

 **Fig.3** Attach cant beam down connector (L) and mosquito netting tube (S&R) to post (A) by bolt (AA) and washer (BB).

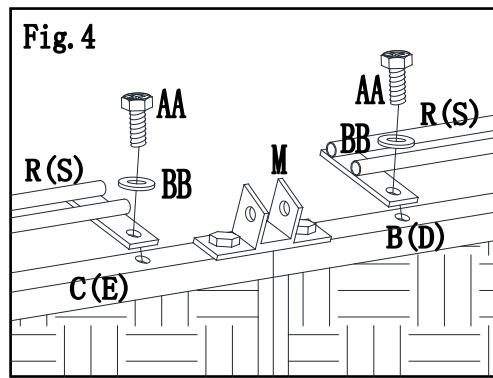
 
 



 
**Fig.4** Attach mosquito netting tube (R&S) to horizontal screen by bolt (AA) and washer (BB).

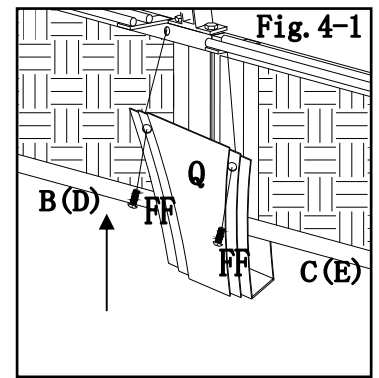


**Fig.4-1** Attach ferrule (Q) screen (B&C, D&E) by screw (FF).

## Hardware Pack 2


BB	M6 Washer	16 PCS	
EE	M6*35 Screw	8 PCS	
DD	M6 Nut	8 PCS	

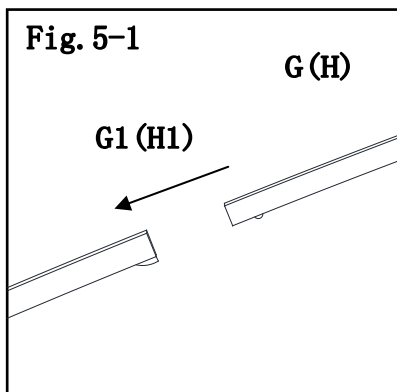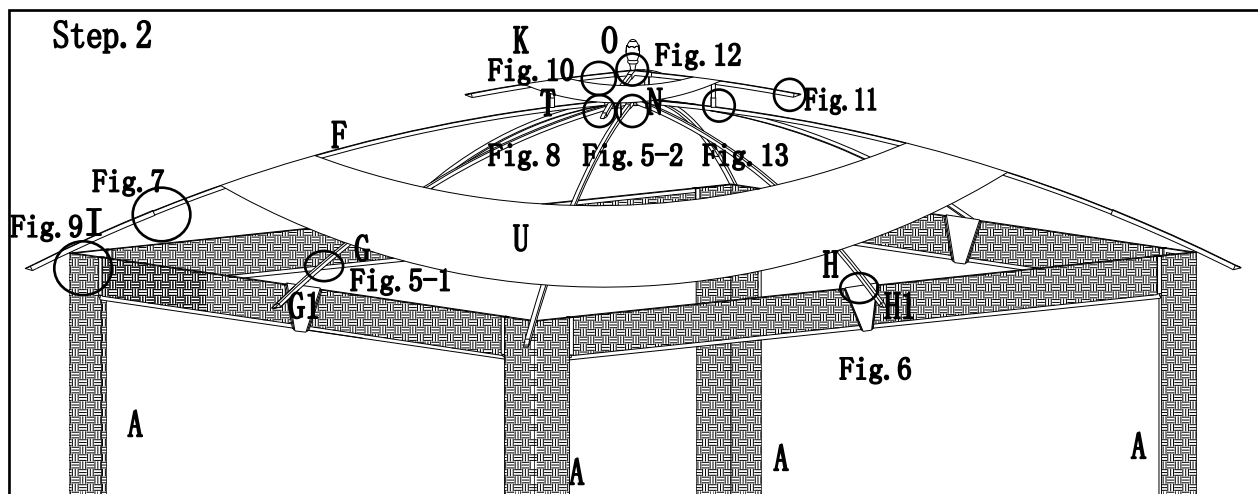 


**Fig.5-1:** Insert long middle beam (G) into the tube of long middle beam down tube (G1). Use the same way to attach H1 and H.

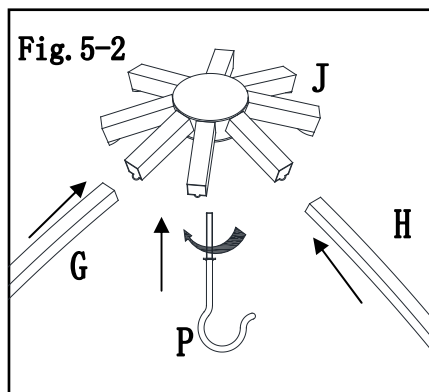 


**Fig.5-2** Attach hook (P) to big top connector (J) and then insert long middle beam (G) and short middle beam (H) into big top connector (J).

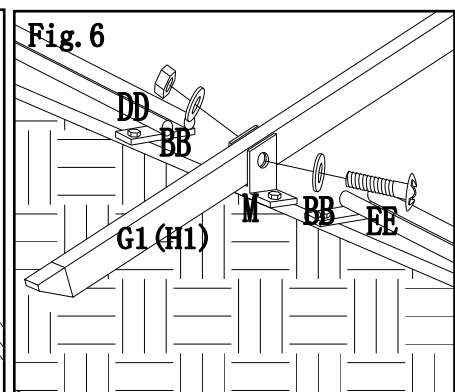 


**Fig.6** Attach middle beam (G1, H1) to middle beam down connector (M) by screw (EE) and washer (BB).

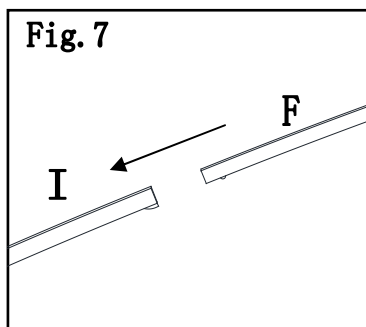 


**Fig.7** Insert cant beam (F) into cant beam down tube (I).

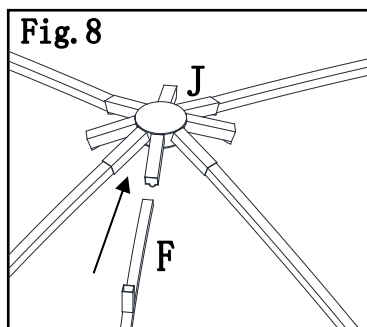 


**Fig.8** Insert the other end of cant beam (F) into big top connector (J).

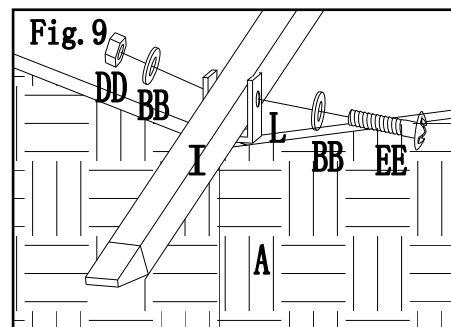 


**Fig.9** Attach cant beam down tube (I) to cant beam down connector (L) by screw (EE), washer (BB) and nut (DD).

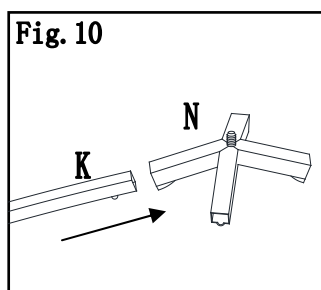   

 
**Fig.10** Attach small cant beam (K) into small top connector (N).

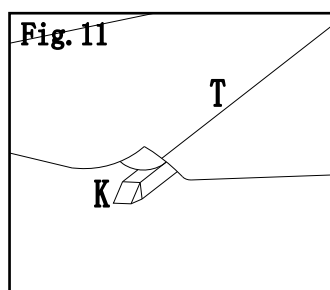

**Fig.11** Put small canopy (T) onto the small top and attach four corners of small canopy to small top cant beam (K).

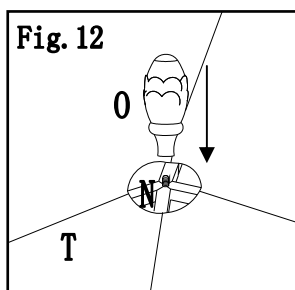

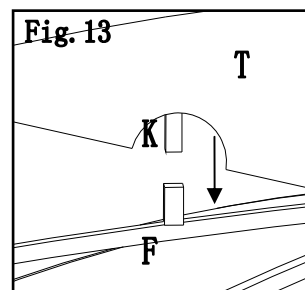

**Fig.12** Attach the finial (O) to small top connector (N).





**Fig.13** Put the big canopy (U) onto big top and do not spread out. Then insert the assembled small top into big top arch beam (F) through small top arch beam (K).

### Hardware Pack 3


GG	Plastic ring	104 PCS	
HH	Stake $\varnothing$ 6X230	12 PCS	




**Step. 3**

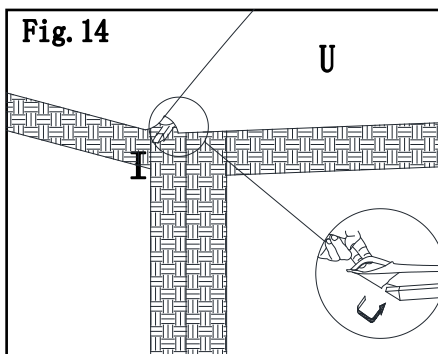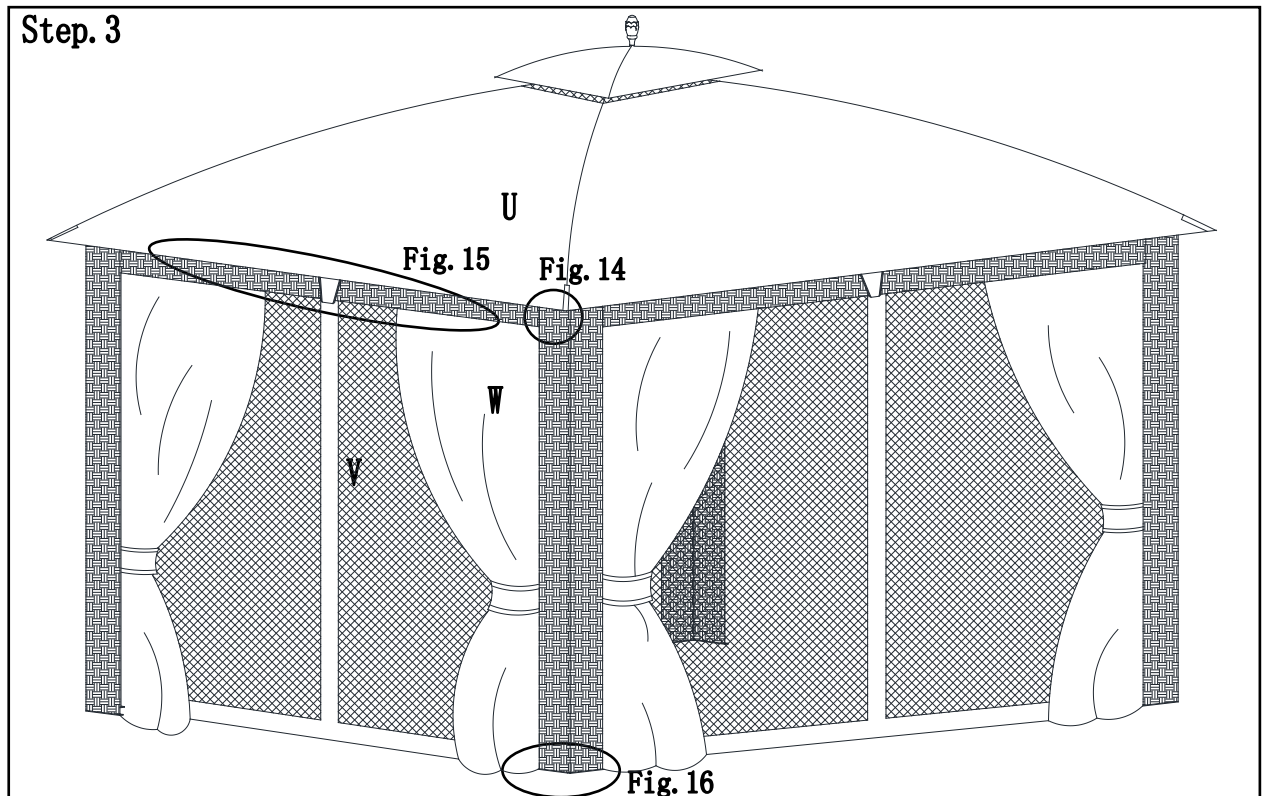  

**Fig.14** Spread big canopy (U) and attach four corners to cant beam down tube (I). Stick hook-and-loop fasteners.

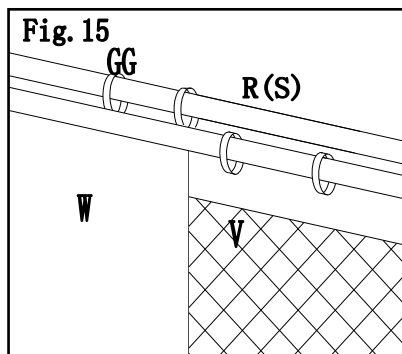 

**Fig.15** Hang mosquito (V) and curtain (W) onto netting pipe (R, S) by plastic ring (GG).

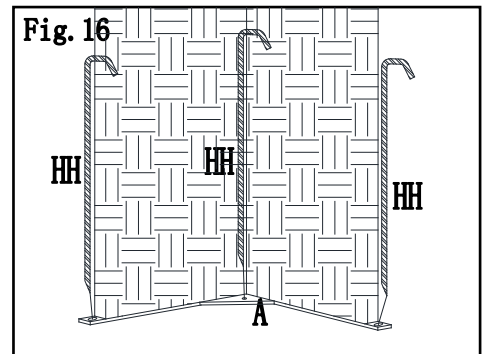 

**Fig.16:** Fix the gazebo to lawn by stake (HH).

**Now Gazebo is ready for use.**

### **Care & Maintenance:**

Our steel components for garden accessories and furniture are treated with rust inhibiting paint that protects it from rusting. However, due to the nature of steel, surface oxidation (rusting) will occur once these protective coatings are scratched. This is not a defect and thus not covered by the warranty.

To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint.

Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and caused damaging stains, which may be difficult to remove. This can be prevented if the above-mentioned measures are taken to keep the product from oxidizing.

### **Limited Manufacturer's Warranty:**

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **one (1) year**. We don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

### **Exclusions:**

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Made in China