

Thank you for purchasing a Wildkin Teepee! To get started, please first be sure you have all the necessary components. We suggest that you lay them all out on the carpet before assembling. If for any reason you think a component may be missing, please contact our customer service team.


Care Instructions: Surface wash only with non-bleach cloth.



WARNING:


**ADULT ASSEMBLY REQUIRED.
SMALL PARTS AND SHARP POINTS MAY BE
PRESENT PRIOR TO ASSEMBLY.
KEEP OUT OF BABY'S REACH.**

Components

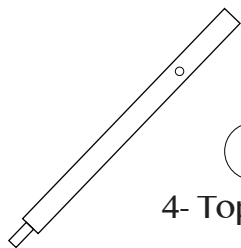


A

4- Top Poles

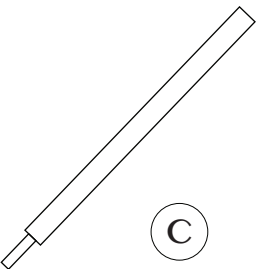


C

4- Bottom Poles

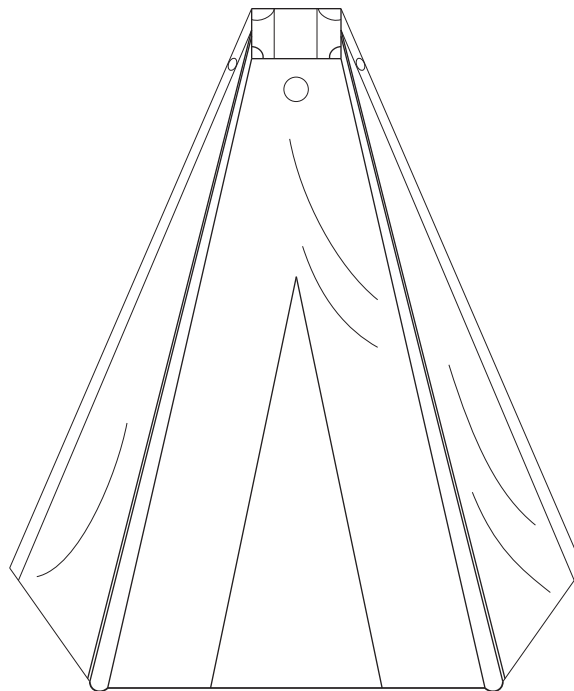


D

1- Teepee Fabric

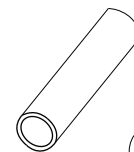

B

4- Plastic Connectors

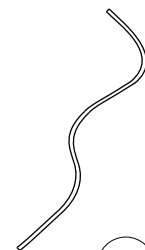


E

1- Stringing Cord




Step 1

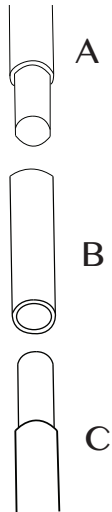


Insert Top Poles (A) and Bottom poles (C) into the Plastic Connectors (B).

Step 2

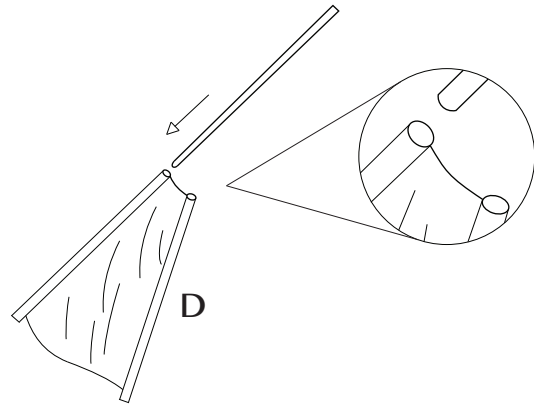


Insert the assembled poles into the channels on the corners of the Teepee Fabric (D), making sure that the holes in the top of the poles are at the top of the teepee.

Step 3

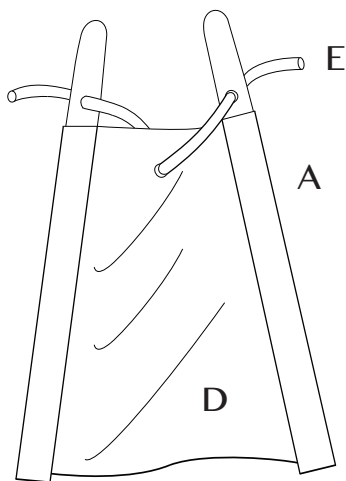

Lace the Stringing Cord (E) alternately through the holes in the Top Poles (A) and the grommets in the top of the Teepee Fabric (D). Tie the Stringing Cord (E) together to secure poles.

Step 4

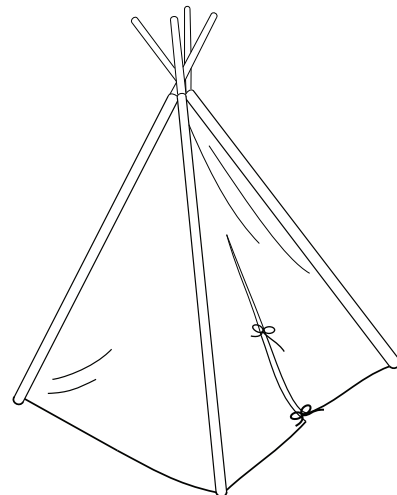

Spread the assembled teepee bottom corners out to the fullest extent. Your teepee assembly is now complete.

WARNING: Please keep away from fire!