

WARNING:

Glass is breakable and this product contains sharp edges. Never leave burning fire unattended. Do not pour fuel into burning fuel. If used as a fire burner, take the necessary precautions to ensure no flammable materials come in contact with the flame. Before igniting fuel ensure no excess has been spilt. Keep away from children and animals.

AVERTISSEMENT:

Le verre est cassable et ce produit a des coins pointus. Ne laissez jamais le feu brûlant sans surveillance. Ne versez pas le carburant dans le carburant brûlant. Prendre les précautions nécessaires pour s'assurer que la flamme n'entre pas en contact avec des matériaux inflammables. Avant d'allumer le feu, s'assurer qu'aucun excédent de combustible n'a été renversé. Garder hors de la portée des enfants et des animaux.

CAUTION:

Before moving **Level** remove the glass sides.

ATTENTION:

Avant de déplacer le **Level** enlever les côtés en verre.

For assistance, contact


Pour de l'assistance, veuillez communiquer avec

decorpro
HOME + GARDEN

www.develpro.ca
support@develpro.ca

Level



50001
50201
50701
50131
50141

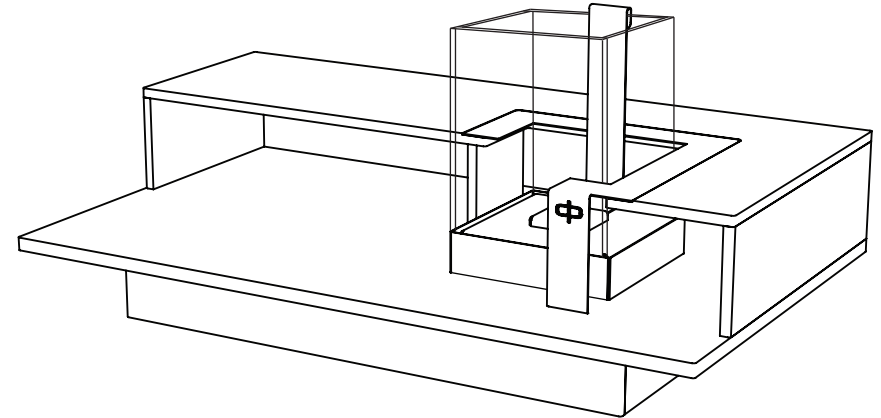


decorpro
HOME + GARDEN

Proudly Designed and Made In CANADA


4x

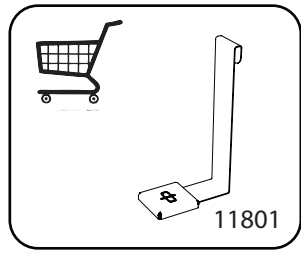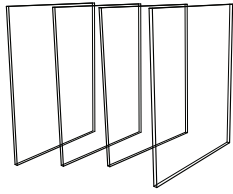


12

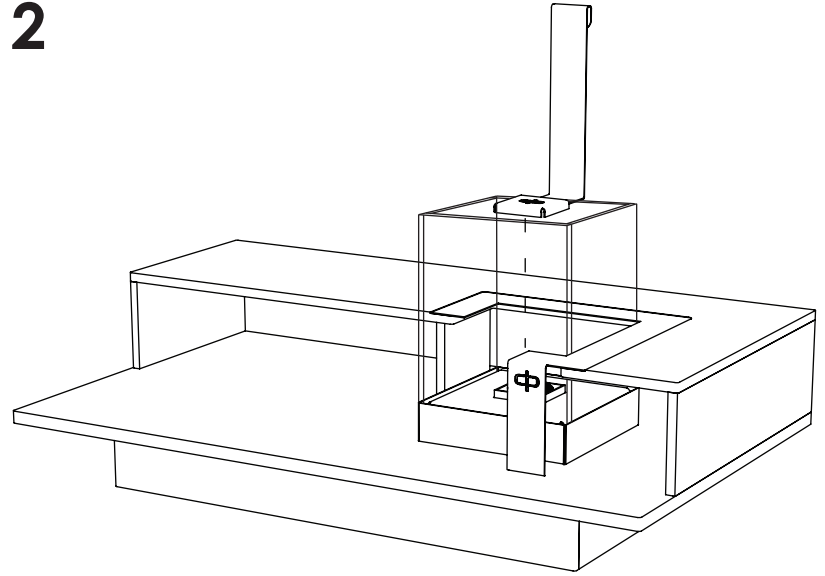

1x

 


1x

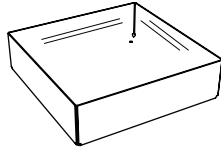


1x



4x

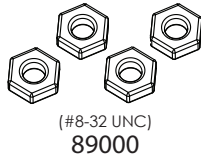





4x

 


4x




1x

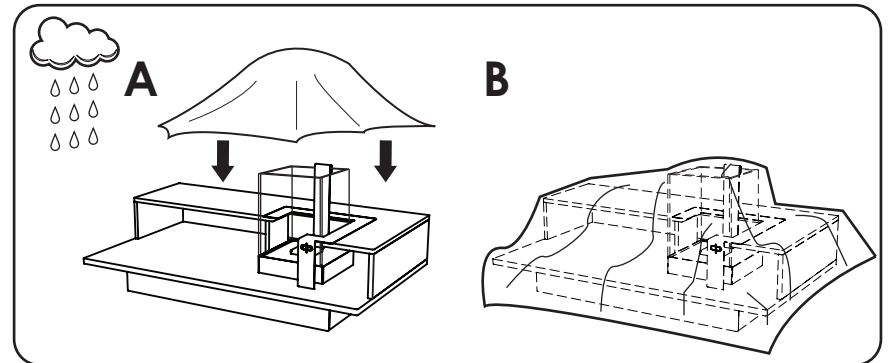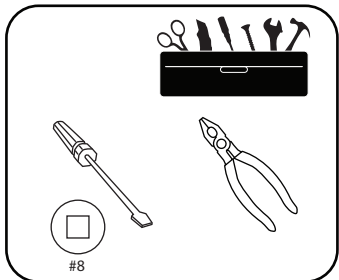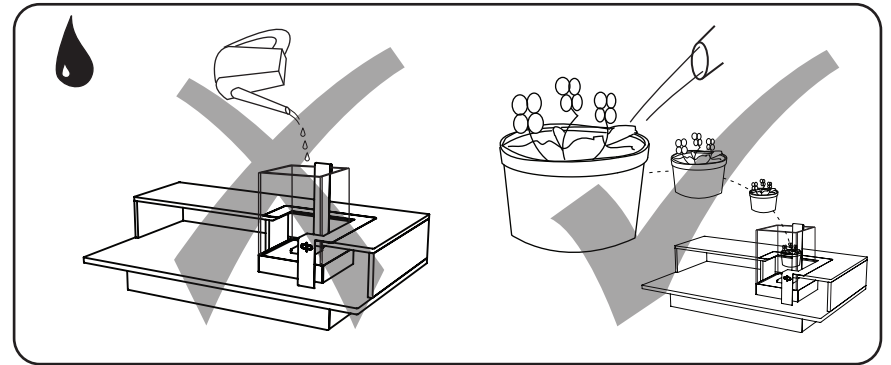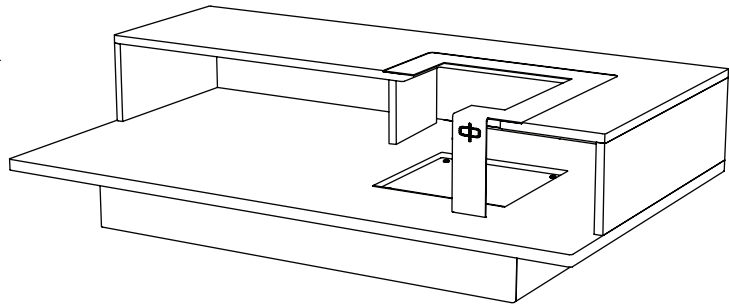


8

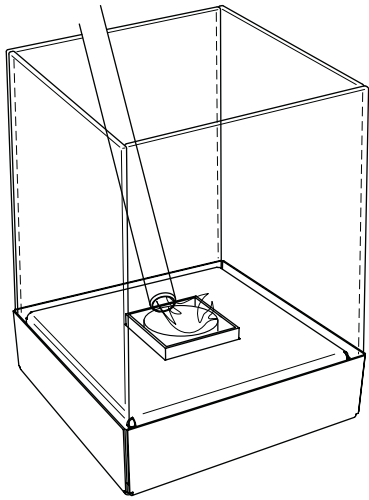

9

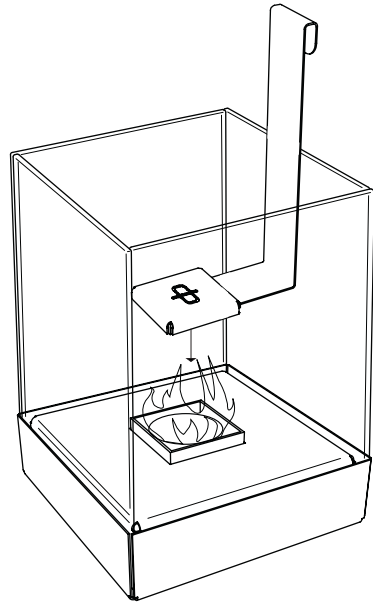


1

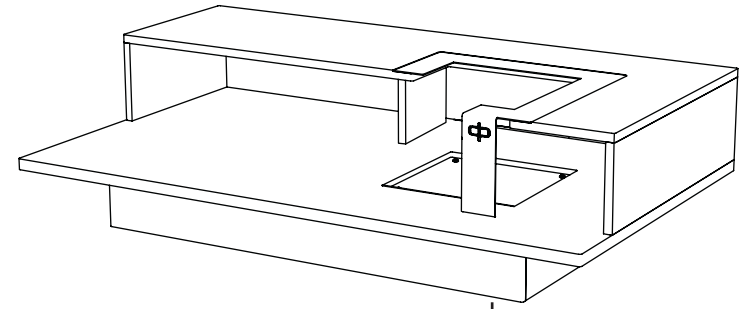


10




0.15 s

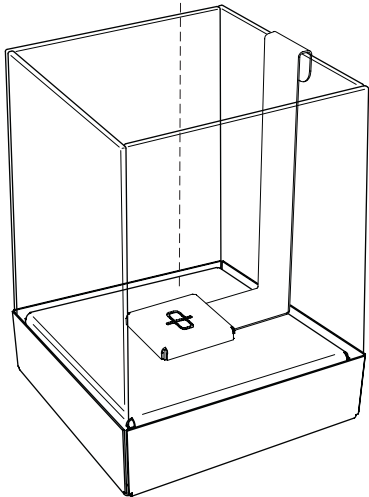




11

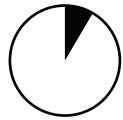


5.00 m

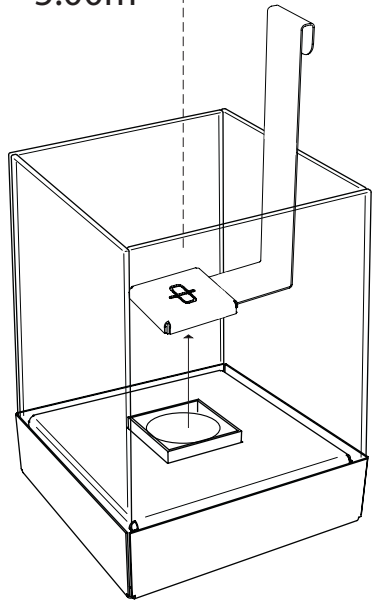


2

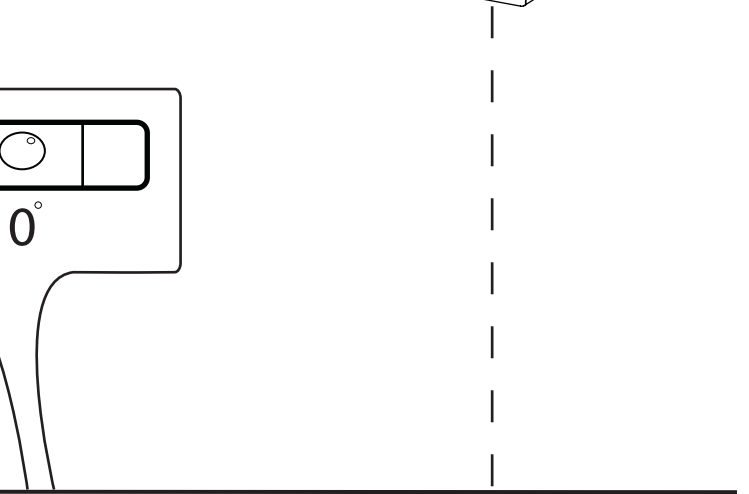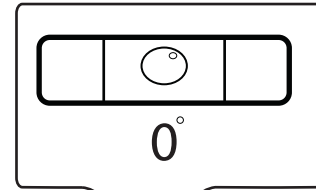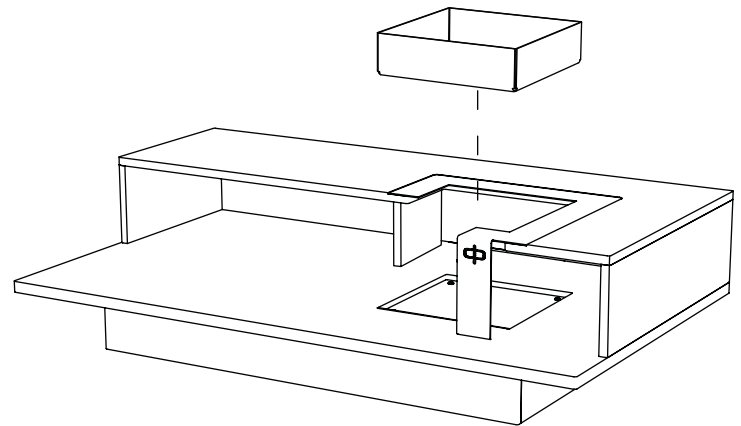


3

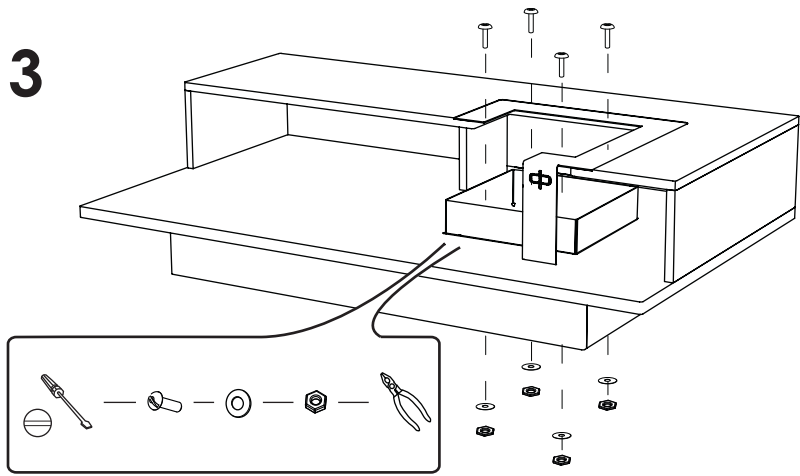


4

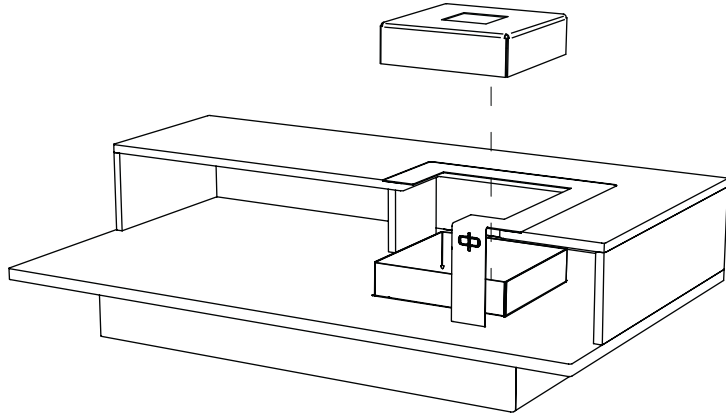

5

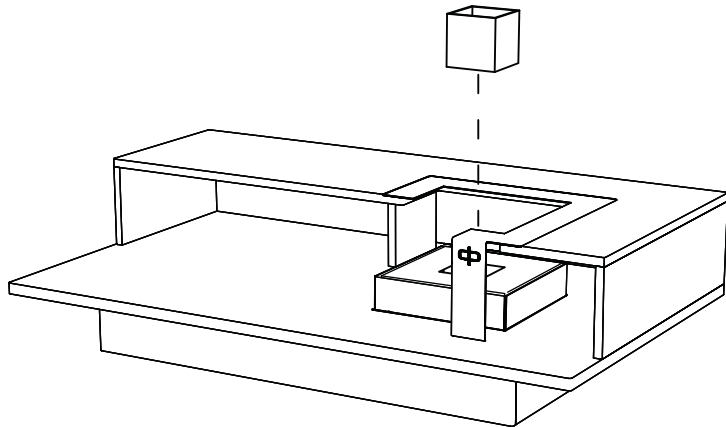

6

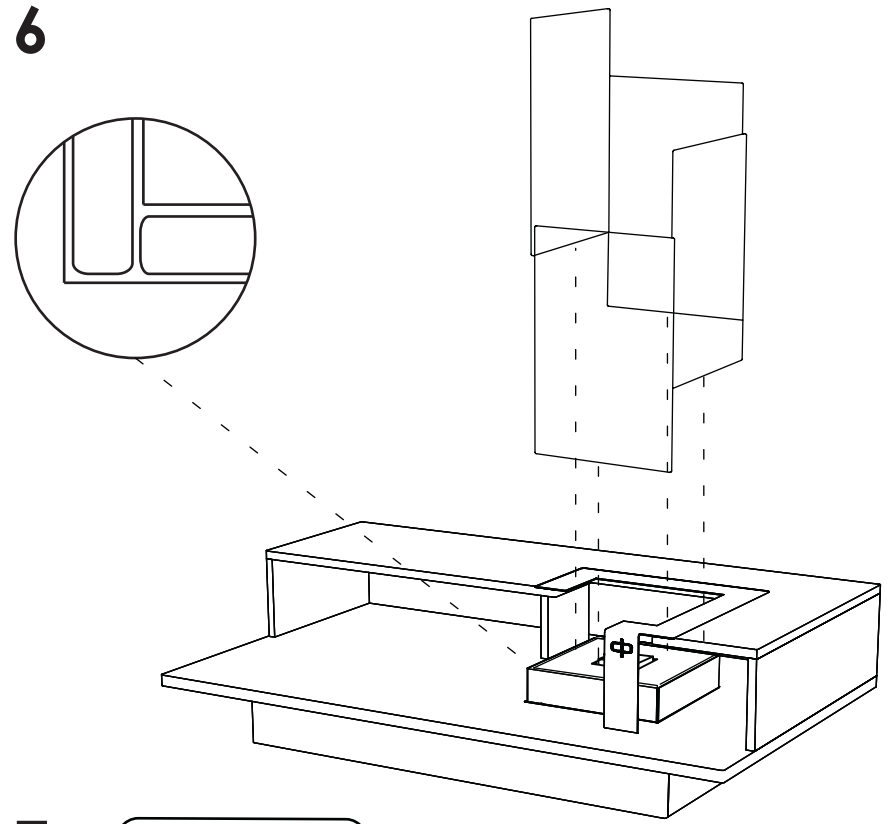

7

