



21 BOTTLE TOUCHSCREEN WINE CELLARS

272 03 19 05

INSTRUCTION MANUAL

PLEASE READ THIS MANUAL CAREFULLY BEFORE INSTALLING AND OPERATING.

TABLE OF CONTENTS

| Contents | Page # |
|--|---------------|
| Wine Cellar Package Contents | 3 |
| Important Safety & Pre-Use Instructions | 3 |
| Installation Instructions | 3 |
| Temperature Settings | 4 |
| Operating Your Wine Cellar | 4 |
| Care & Maintenance | 5 |
| Troubleshooting Guide | 6 |
| Technical Information | 7 |
| Warranty Information | 7 |

Wine Cellar Package Contents

- Instruction manual
- Shelves

IMPORTANT SAFETY INSTRUCTIONS

| | |
|--|--|
| WARNING | To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions: |
| <ul style="list-style-type: none">● Read all instructions before using the wine cellar.● DANGER: Risk of child becoming trapped in new cellar, old wine cellar/refrigeration unit, or large boxes. Junked or abandoned appliances, boxes and other containers are still dangerous, even if they will “just sit in the garage for a few days”.● Before you throw away your old wine cellar or refrigeration unit: 1. Take off the door. 2. Leave the shelves in place so that children cannot climb inside.● Never allow children to operate, play with, or crawl inside the appliance.● Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.● Do not store in the vicinity of any other appliance. Do not store near gasoline or any other flammable vapors. The fumes can create a fire hazard or explosion. <p style="text-align: center;">-Save these instructions-</p> | |

BEFORE USING YOUR WINE CELLAR

- Remove the exterior and interior packaging.
- Clean the interior surface with lukewarm water using a soft cloth.

INSTALLATION INSTRUCTIONS

(a) General Installation Instructions

- This appliance is designed for free standing installation. Do not build-in or recess into closed cabinetry.
- Place your wine cellar on a flat, solid floor that is strong enough to support it when it is fully loaded. To level your wine cellar, adjust the front leveling leg at the bottom of the wine cellar.
- Locate the wine cellar away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit to perform improperly.
- Avoid locating the unit in damp areas.
- Plug the wine cellar into a dedicated (for this appliance only), properly installed and grounded wall outlet. Do not under any circumstances cut or remove the third (grounding) prong from the power cord. Any questions concerning power and/or electrical grounding should be directed to a certified electrician or authorized product service center.

TEMPERATURE SETTINGS FOR SERVING WINE

1. Although optimal *storage* temperature is generally regarded to be 53-57°F, different varietals of wine require different service temperature settings. The recommended temperature ranges for *servicing* different varietals of wine are listed below. Your wine cellar will indicate when you have set the Upper/Lower zones to the below temperature ranges.

- Red Wines: 60-66°F
- White Wines 45-52°F
- Sparkling Wines 40-45°F

Layout and Storage


Your wine cellar comes with standard shelving to lay your bottles on their sides and an optional shelf that can be used to store bottles upright and on their sides. The optional upright storage shelf should be used only in the lower zone of the wine cooler. To use, remove all shelves from the lower unit and replace with upright storage shelf.

OPERATING YOUR WINE CELLAR

Your wine cooler has an electric temperature control on the front of the unit. You may program the temperature of your wine cooler at any setting you desire. The temperature range varies from 46 to 64 degrees. When initially turned on, the LED will display the ambient temperature and then the internal cabinet temperature. The zone temperature may have a difference of 5°F (3°C) from setting depending on loading and ambient conditions.

Temperature Control

This cooler has a touchscreen control panel located on the upper area of glass doors. Each zone is independently controlled by the control panel located on the zone door. The image as following:

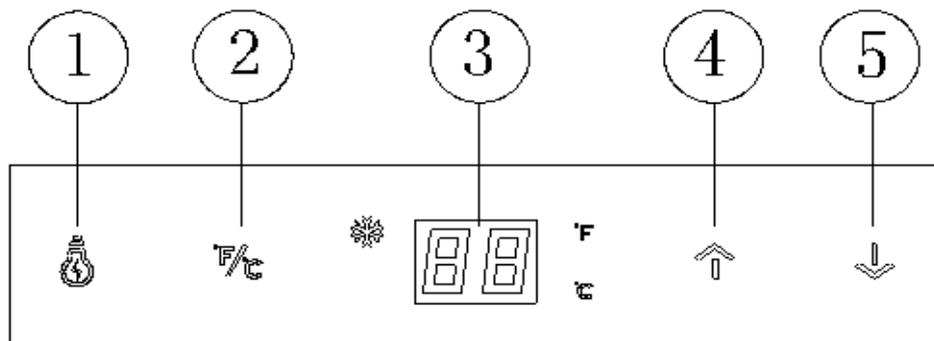

- 1) Light Control Button 2) Celsius / Fahrenheit Selector Button 3) LED Display
4) Temperature Increase Button 5) Temperature Decrease Button

- The wine cooler has an interior light. The light can be switched on and off by using the light control button (1).
- The temperature display can be set to show either Celsius / Fahrenheit by pushing the selector button (2).
- You can set the temperature as you desire by pushing the button  or  , (4 & 5)
- The temperature will increase 1°F if you push the  once, and the temperature will decrease 1°F if you push the  once.
- When the wine cellar is plugged in for the first time, the LED display (3) will show the preset factory temperatures of 54°F.

CARE AND MAINTENANCE

Cleaning Your Wine Cellar.

- Turn off the power, unplug the appliance, and remove all items including all shelves.
- Wash the *inside surfaces* with a solution of warm water and baking soda (approximately 2 tablespoons of baking soda for each quart of water.)
- Wash the *shelves* with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wash the *outside of the cabinet* with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.
- Vacuum the front grill and back of the unit twice yearly. Make sure the power is off before cleaning.
- It is recommended to clean the unit completely inside and out once a year to maximize the longevity of the wine cellar.

Power Loss

- Power failures that are corrected within a few hours should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take other measures to protect your contents.
- If the unit is unplugged, loses power, or is turned off, you must **wait 3 to 5 minutes before restarting**. Attempting to restart the wine cellar before this time has elapsed may prevent the wine cellar from starting.

➤ Absence/Vacation

- **Short vacations:** You may leave the wine cellar powered on and unattended for absences of less than three (3) weeks.
- **Long vacations:** If the appliance will not be used for more than three weeks, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent mold growth, leave the door open slightly, blocking it open if necessary.

➤ Moving Your Wine Cellar

- Remove all items.
- Securely tape down all loose items (shelves) inside your appliance.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also protect the outside of the appliance with a blanket or similar item.

➤ Energy saving Tip

- The wine cellar should be located in the coolest area of the room, away from heat producing appliances, and away from direct sunlight.

TROUBLESHOOTING GUIDE

Many common issues with your wine cellar can be solved very easily. Try the troubleshooting tips below should you experience any problems.

| PROBLEM | POSSIBLE CAUSE |
|---|---|
| Wine cellar does not operate. | Not plugged in. The appliance is turned off. The circuit breaker tripped or a fuse has blown out. |
| Wine cellar is not cold enough. | Check the temperature control setting. External environment may require a higher setting. (e.g. room needs to be air conditioned) The door is opened too often. The door is not closed completely. The door gasket is not sealing properly. |
| Wine cellar is turning on and off frequently. | The room temperature is hotter than normal. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. |
| The light does not work. | Not plugged in. The circuit breaker tripped or a fuse has blown. The light bulb has burned out. The light button is "OFF". |
| Vibrations. | Check to assure that the wine cellar is on a level surface. |
| The wine cellar seems to make too much noise. | A faint humming noise may come from the internal fans, which is normal. Contraction and expansion of the inside walls may cause popping and crackling noises. The wine cellar is not on a level surface. |
| The door will not close properly. | The wine cellar is not on a level surface. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position. |

TECHNICAL DATA

| | |
|----------------------------|--|
| Art No. | 272 03 19 05 |
| Accommodation (bottles) | 21 Bottles using standard shelving or 19 bottles using the upright storage shelf |
| Type of cooling | Air-circulated fan cooling |
| Nominal voltage/Frequency | 110V, 60HZ |
| Rated power(W) | 130W |
| Ambient temperature | 60-77 degrees Fahrenheit |
| Temperature range | Upper Zone: 46-65 Fahrenheit Lower Zone: 52-65 Fahrenheit |
| Product Dimensions | 13 3/4" W x 19 1/4" D x 32 1/4" H |

WARRANTY INFORMATION

Length of Warranty: This Limited Warranty lasts for one (1) year from date of receipt of purchase of the wine cellar ("Limited Warranty Period"). Extended warranties may be available for an additional cost at the time of purchase or up to 30 days from date of purchase. These extended warranties would extend this one (1) year limited warranty to two (2), three (3), or five (5) years. Details about our extended protection plans can be found @ wineenthusiast.com.

Who is Protected: This Limited Warranty protects the original purchaser during the Limited Warranty Period, provided that such purchaser can present appropriate proof of original purchase.

What is Covered: This Limited Warranty covers any defects in workmanship or materials in your new wine cellar under normal use.

What is Not Covered: The following are not covered by this Limited Warranty damage due to such things as accident, misuse, abuse, mishandling, neglect, unauthorized repair, failure to properly maintain, acts of God or any other cause beyond the reasonable control of the Wine Enthusiast whether similar or dissimilar to the foregoing.

Purchaser understands and acknowledges that the wine cellar is a wine refrigerator, which houses wine. Purchaser assumes all the risk of using these units, including risk of spoilage, humidity variations, temperature variations, leaks, fires, water damage, mold, mildew, dryness and similar perils that may occur.

What We Will Do: During the Limited Warranty Period, Wine Enthusiast and/or the manufacturer will, at its sole discretion, repair or replace any wine cellar not operating within the manufacturer's specifications. All costs for labor and materials

thereto shall be covered during the Limited Warranty Period. If Wine Enthusiast deems the wine cellar is not repairable, Wine Enthusiast will use the value of your original order toward a replacement; provided, however, that the purchaser will be responsible for all shipping and handling costs with respect to the replacement after the initial ninety (90) days after the date of receipt of original purchase. *After the initial ninety (90) day period after the date of receipt of purchase, purchaser must pay any shipping and handling charges that are incurred in shipping or transporting the wine cellar for service under this Limited Warranty.* Wine Enthusiast reserves the right to substitute materials of substantially similar quality in the event that identical materials are not available at the time the Limited Warranty services are performed. Wine Enthusiast reserves the right to request that purchaser contact a local refrigeration company to service the wine cellar.

How to get Warranty Service: In the event your wine cellar is not operating within the manufacturer's specifications, during the Warranty Period, contact customer service by email at custserv@WineEnthusiast.net or by phone 800.648.6058.

Limitation of Implied Warranties: All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this Limited Warranty.

Exclusion of Certain Damages: Wine Enthusiast's liability is limited to replacement or repair of the defective wine cellar. Wine Enthusiast shall not be liable for any damages, whether incidental, consequential or otherwise, because of any defective wine cellar.

How State Law Applies: Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

The Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.