MiniSun Magnifying LED Daylight Floor Lamp

INSTRUCTION MANUAL

Please read and understand the instruction manual thoroughly before using this lighted full page magnifier, and retain it for future reference.

A. ASSEMBLY INTRUCTIONS

- 1. Layout all parts on a smooth surface, and assemble the lamp as shown in illustration (FIG1).
- 2. Position gooseneck(C) and magnifier panel (D) so that the entire piece is vertical as in FIG1. Then, screw the pole (E) into the gooseneck (C) and tighten.
- 3. Insert any loose cord (F) into pole (A).
- 4. Screw the second pole (**A**) into pole (**E**) and tighten.
- 5. Adjust the lamp to desired angle/height using the flexible gooseneck (C).
- 6. Connect the two ends of the cable by press the lock connectors(I) into place.
- 7. Turn and tighten the metal collar(H) onto the base(B).
- 8. Carefully feed the excess cable into the lower pole(A). Do not cut or shorten the cable.
- 9. Take out the screw and insert the lower pole(A) into the metal collar(H).
- 10. Check direction of the lamp head and line up the screw hole and use a screwdriver to tighten the screw.
- 11. Connect the adapter (K) on the external power cord.
- 12. Plug adapter into outlet and use the on/off button (J) to turn on or off the lamp.


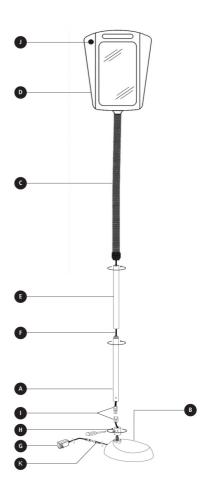


FIG.1

B. OPERATING

The reading material must be held directly parallel to the lens for optimal viewing. Image may appear distorted if not positioned properly.

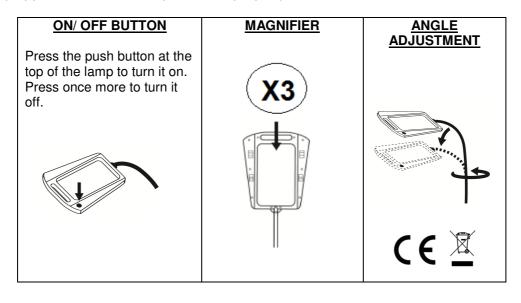

C. TECHNICAL DATA

Adapter (Included)

Input: 240VAC 50/60HzOutput: 12VDC, 500Ma 6W

Giant magnifying glass with led light

12VDC 2.5W

D. MAINTENANCE



To clean use a soft cloth only.

Do not use any chemical or abrasive cleaners.

E. IMPORTANT SAFETY INSTRUCTIONS

- 1. Use the appliance only for its intended use described in this manual.
- 2. Before connecting the device to your power supply, please ensure that the supply voltage stated on the rating plate is compatible with your mains supply.
- **3.** Place the product on a stable surface.
- **4.** Always connect the appliance to an accessible power outlet.
- 5. When unplugging the power cord, always pull it at the plug; do not pull on the cord.
- 6. Never immerse the appliance, its power cord or its plug in water or any other liquid.
- 7. Do not handle the cord or appliance with wet hands.
- 8. Do not use the appliance:
 - if the plug or the power cord are damaged;
 - if the appliance is in anyway damaged;
 - if it fell down.
- **9.** If the product is damaged, it must be repaired by a qualified technician, in order to avoid all risks.
- **10.** The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- 11. Turn off, unplug and allow cooling before cleaning or other maintenance.
- 12. Do not look directly at lit bulb(s).
- 13. Keep lamp away from flammable material(s).

F. CAUTION



WARNING: DO NOT LEAVE THE LENS IN DIRECT SUN AS IT CAN CAUSE A FIRE HAZARD!

NOTE: This lamp uses specially formulated LEDs that simulate the characteristics of the sun. The light will appear brighter and whiter compared to a normal incandescent bulb and will provide many of benefits of natural sunlight. In addition, these LEDs are energy efficient and eco-friendly. They are not replaceable but should last up to 50.000 hours.

WARNING: You should not dispose of this device with your household waste. A selective collection system for this type of product is implemented by your local authorities. Please contact your local authorities to find out how and where collection takes place. These restrictions apply because electrical and electronic devices contain dangerous substances that have harmful effects on the environment or on human health and must be recycled. This symbol indicates that electrical and electronic devices are collected selectively. The symbol shows a waste container crossed out with an X symbol.

If the power cable is damaged, it must be replaced by the manufacturer, his after sales service, or a person qualified in this area in order to avoid any accidents arising.

16978 M30 9QG UK LSE Customer Service: 0161 832 4957 ISSUED ON 12/12/2016