
88 5180 19 Arts & Crafts Computer Cabinet (Cottage Oak)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

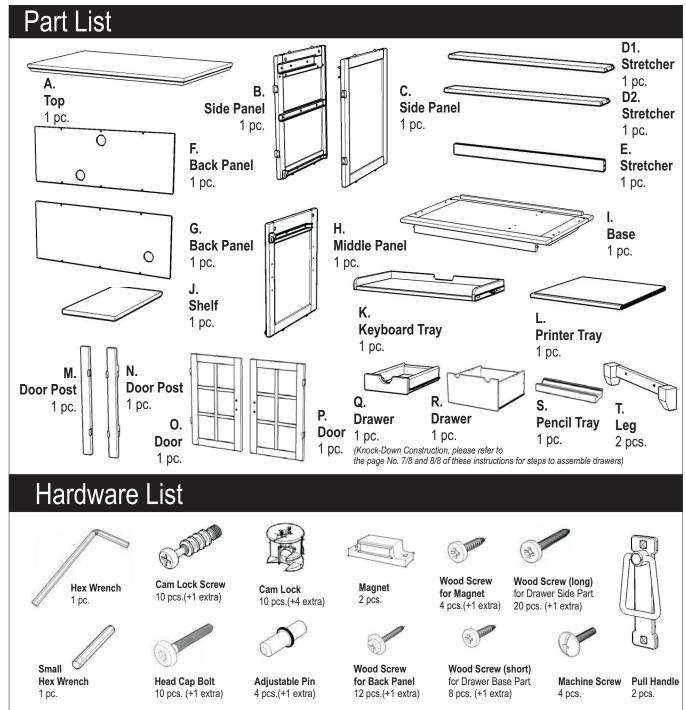




Tools required for assembly: Phillips screwdriver


Assembly Instructions 2/6

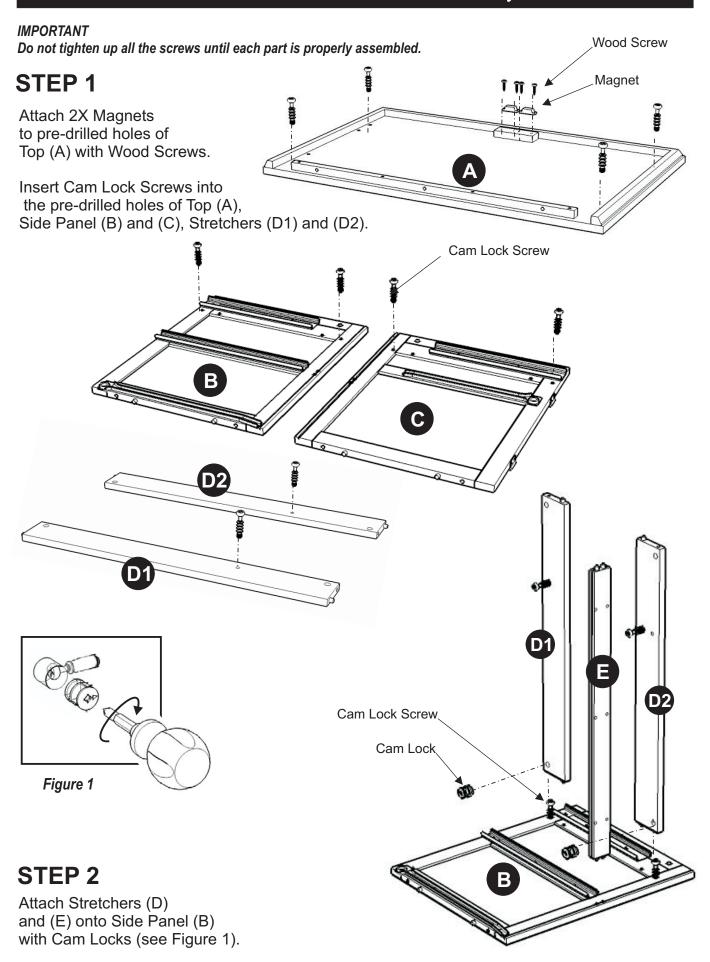

Assembly Instructions 3/6

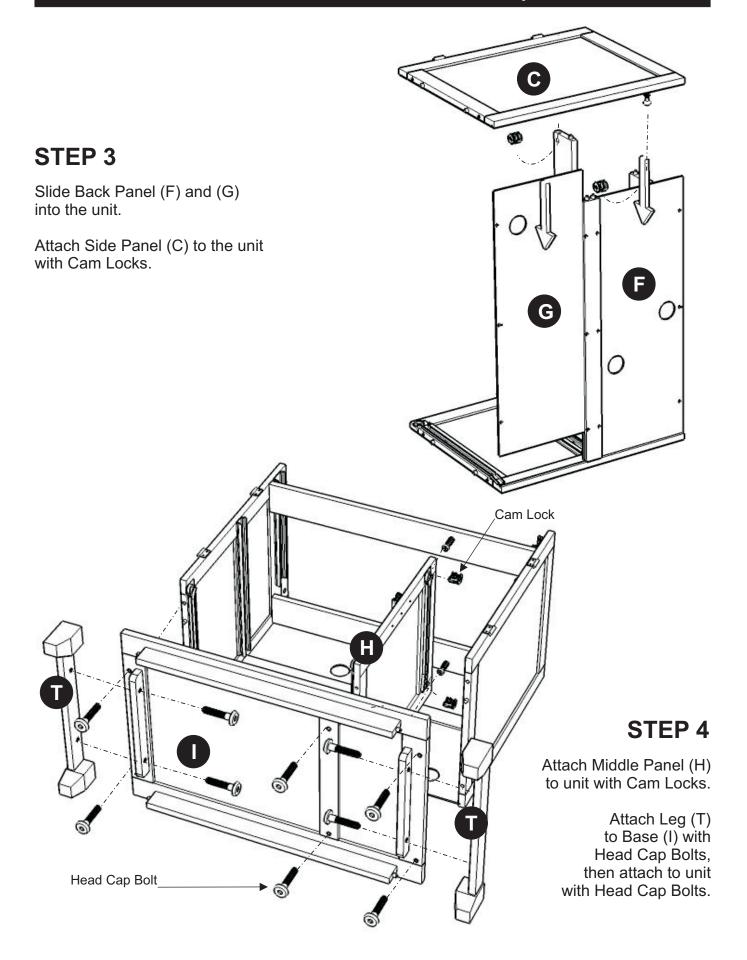

Assembly Instructions 4/6

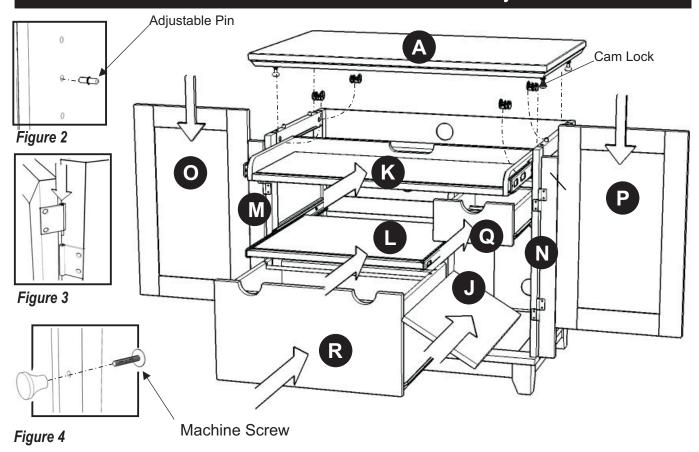

STEP 5


Place Top (A) onto the unit, using Cam Locks.

Slide Keyboard Tray (K), Printer Tray (L), Drawer (Q) and (R) into position.

Insert Adjustable Pins into side panel and middle panel at the desired level (See figure 2), then place Shelf (J) into position.

Attach Door Post (M), (N), Doors (O) and (P) by sliding the door lift hinges into the side panels lift hinges (See figure 3).

Assemble Pull Handles to Doors (O) and (P) with Machine Screws. (See figure 4)

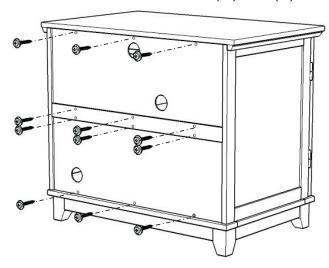



STEP 6

Insert 12X Wood Screws from the back of the unit, tighten up all the Wood Screws.


Note: Please make sure unit is level before tightening these screws.

Assembly Instructions 5/6

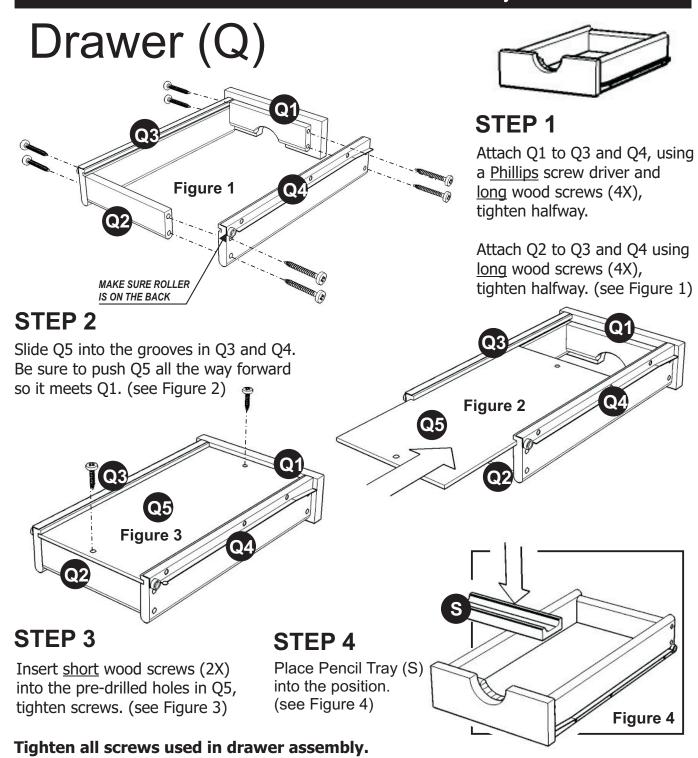

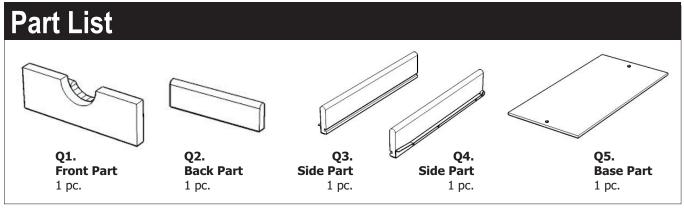

Assembly Instructions 6/6

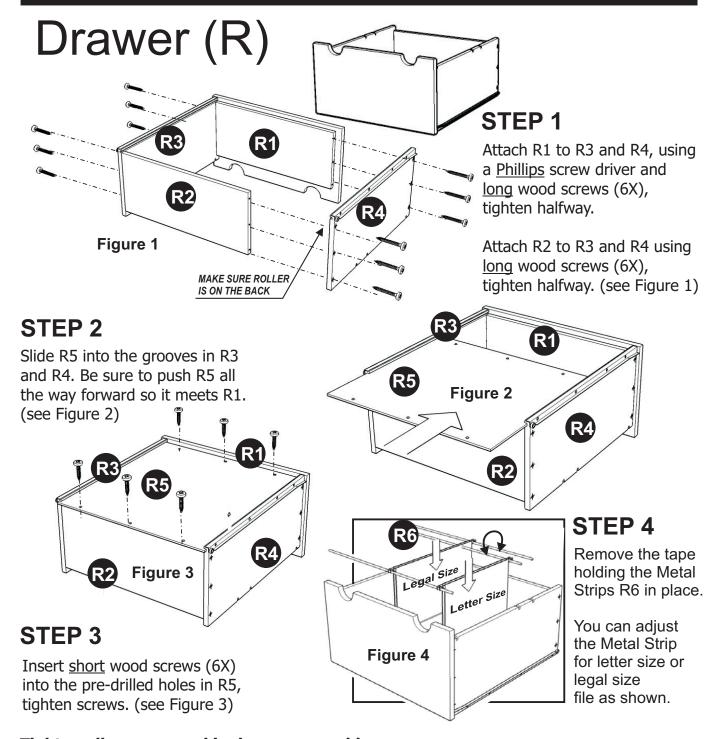

Tighten all screws used in drawer assembly.

