
 
 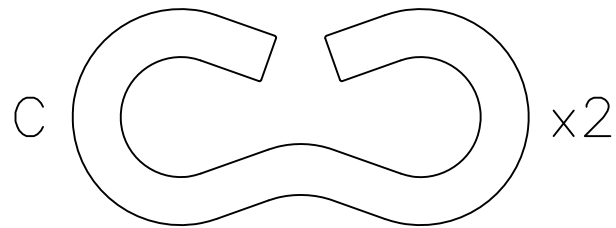




Do not fully tighten the bolts until all bolts are started. Once all bolts are inserted, then go back and tighten all the bolts.


HARDWARE

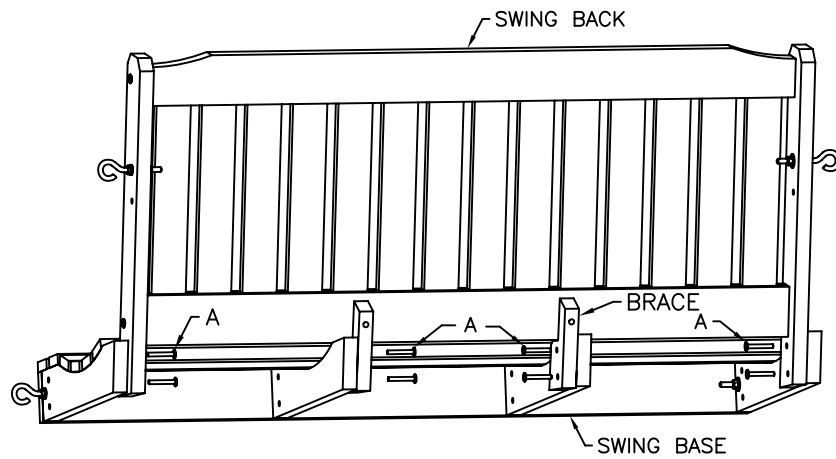

PORCH SWING ASSEMBLY INSTRUCTIONS

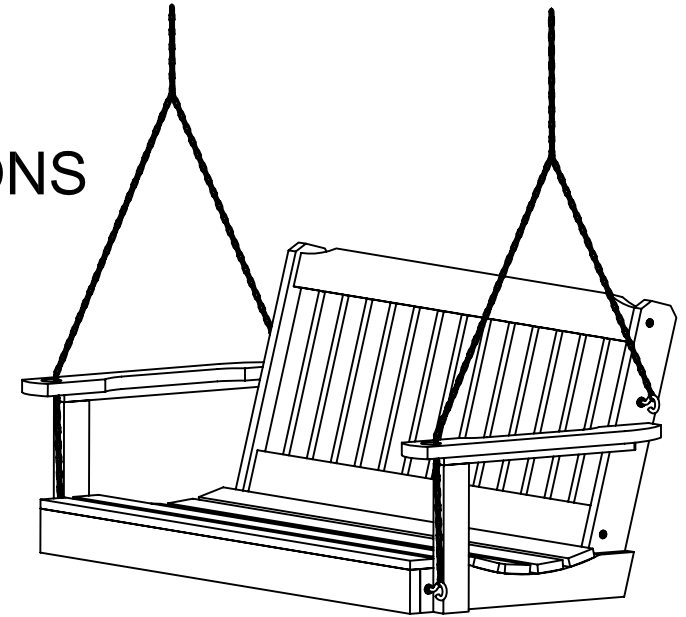


- 1) Attach Swing Back to Swing Base using four A bolts
- 2) Attach center supports to braces with four A bolts

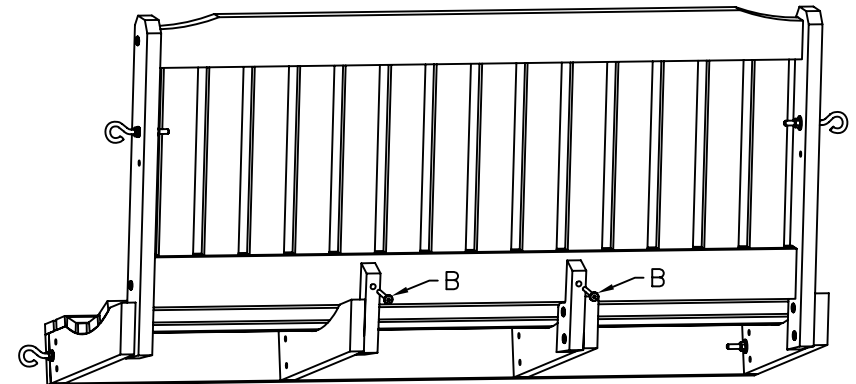


- 3) Attach the braces to the back with two B bolts


PORCH SWING ASSEMBLY INSTRUCTIONS

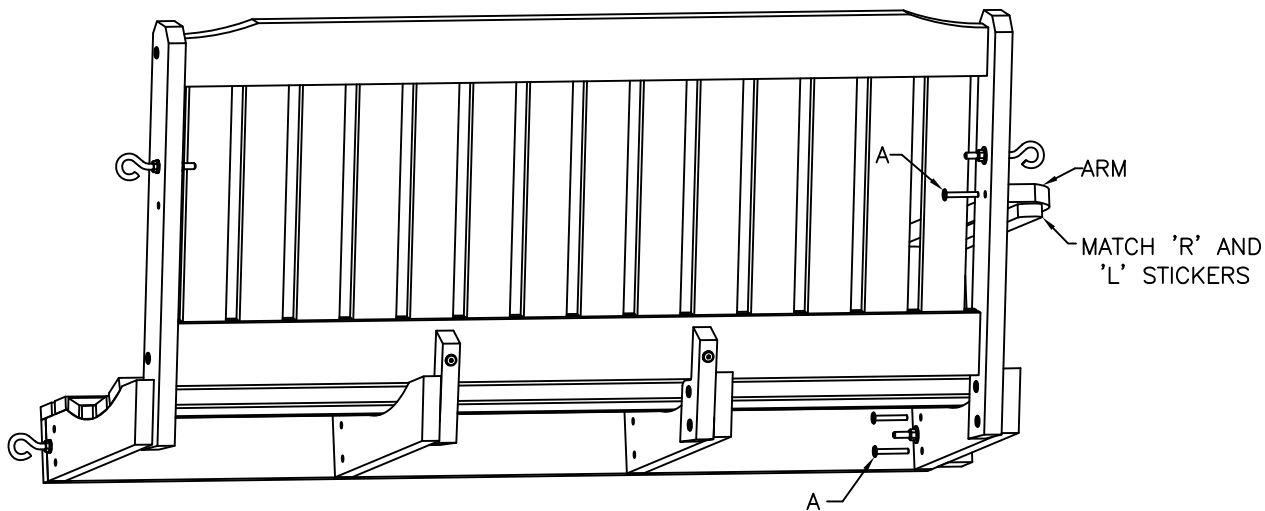

- 4) Attach the Arm Assembly to the Swing Base using two A bolts in the front, one A bolt in the arm
- 5) Repeat on other side

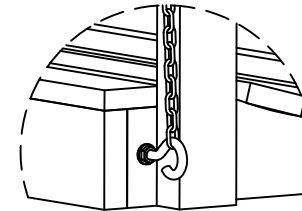

- 6) Connect 7 foot chain to Eyebolts on side of Swing
- 7) Attach Chain Connector to the center point of the 7 foot chain and to the 2 foot chain
- 8) Repeat on other side

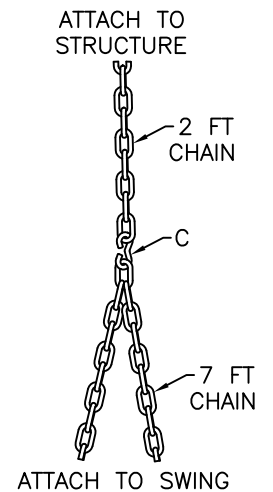

IMPORTANT NOTE

Be sure to select a suitable structure when hanging the swing.