 


# Assembly Instructions

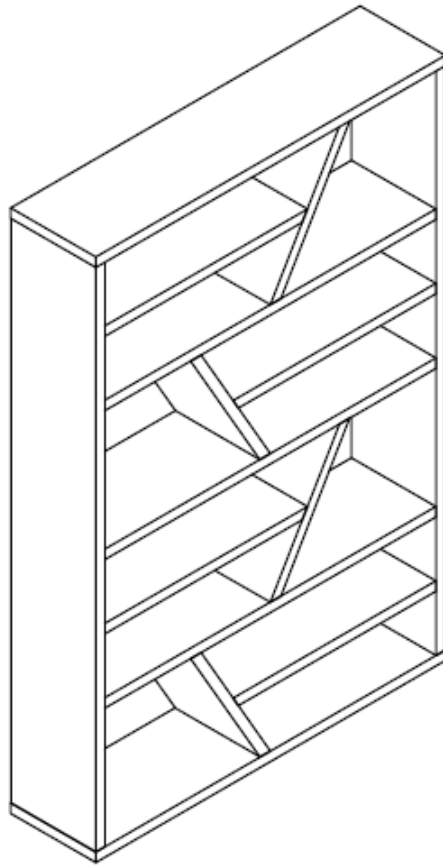

## ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

## Tools Required for Assembly:

Phillips Screwdriver



(Not Included)

Hammer



(Not Included)

 


2 PERSONS RECOMMENDED

# ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

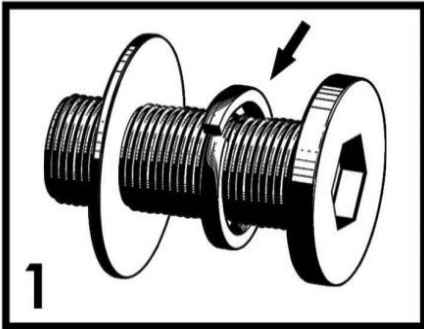


1  
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.



 
2  
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

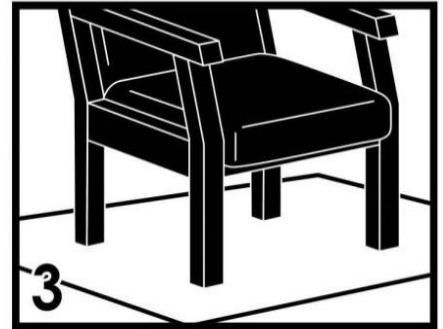

 
3  
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

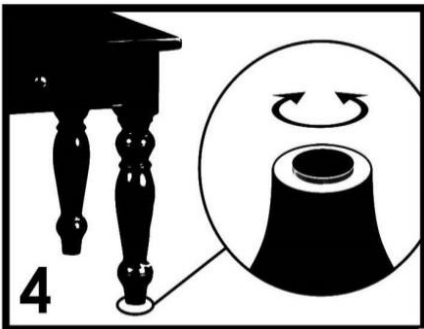

 4  
Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

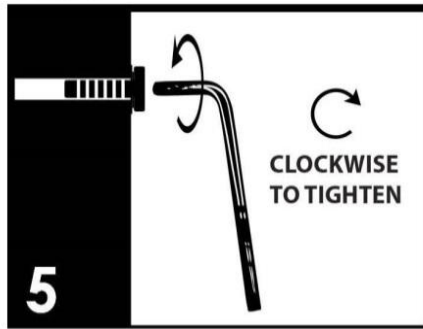

 5  
Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

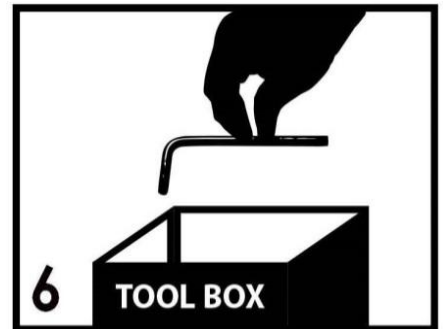

6  
Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.



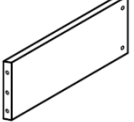
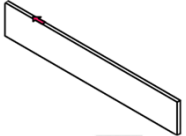
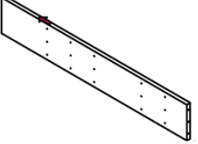
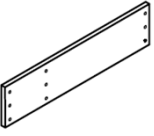
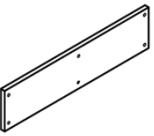
IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.










FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.


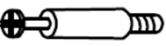

## Parts List
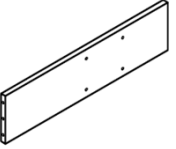
## Hardware List (Continued)

	#1 x 3 pcs Long Shelf
	#2 x 4 pcs Shelf Divider
	#3 x 4 pcs Short Shelf
	#4 x 1 pc Left Side Panel
	#5 x 1 pc Right Side Panel
	#6 x 1 pc Top Panel
	#7 x 1 pc Base

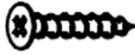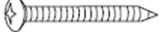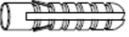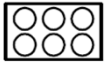 
	#D x 26 pcs Wood Dowel
	#E x 1 pc Strap
	#F x 1 pc Screw 7x48mm
	#G x 1 pc Screw 5x40mm
	#H x 1 pc Anchor
	#I x 14 pcs Cover Sticker
	#J x 1 pc Glue

## Hardware List

	#A x 32 pcs Screw 7x48mm
	#B x 20 pcs Cam Bolt/Screw
	#C x 20 pcs Cam Connector

Note: Right and left are determined by facing the display in its upright position.


Due to the size and/or weight of this product, it is highly recommended that the assembly should be done near the area of its intended location. Make sure you have enough space to move around during the assembly. ALWAYS have at least two people to help with transporting and assembling the product to avoid any potential injury and/or damage.

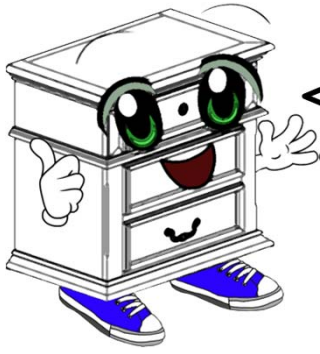

Before you begin, please read Page 2 of "Assembly and Care Advice".


And remember, do not tighten until each step is completed or instructed.

 MD

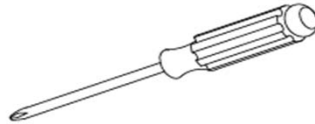


Note: Every cam lock bolt must have a cam lock connector in order to fasten the parts together.

 - (1) Secure the threaded end of the cam bolt by using a screwdriver.

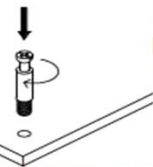


Turn right (clockwise) to tighten.

 Align the cam connector with its side opening (or arrow) pointing to the small drilled hole.

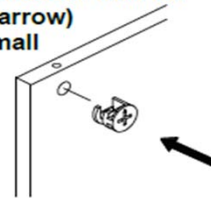

 
(2)

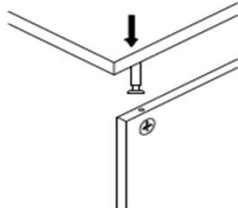


Insert the cam lock bolt into the pre-drilled hole above the cam connector.

(3)

 Two parts should fit snugly against each other.

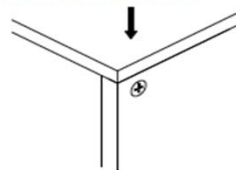

 (4)

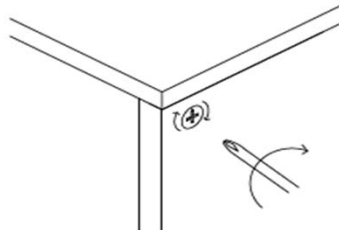

Turn right (clockwise) to tighten.


Turn the cam connector with a screwdriver until it will not turn any more with light to moderate force.

### Applying Glue to the Wood Dowel

 
- Remove one end of the dowel and squeeze a drop of glue onto it. The glue should cover the tip of the dowel. DO NOT pour glue directly into the hole.
- Insert the glued end of the dowel into its appropriate location. Use a rag or a paper towel to wipe any excess glue oozing around the dowel.
- Squeeze a drop of glue onto the end of the dowel sticking out. The glue should cover the tip of the dowel.
- Insert this end of the dowel into the other part. Use a rag or a paper towel to wipe any excess glue oozing around the dowel.
- Both parts should now line up and connected.



#A x 6 pcs  
#D x 3 pcs

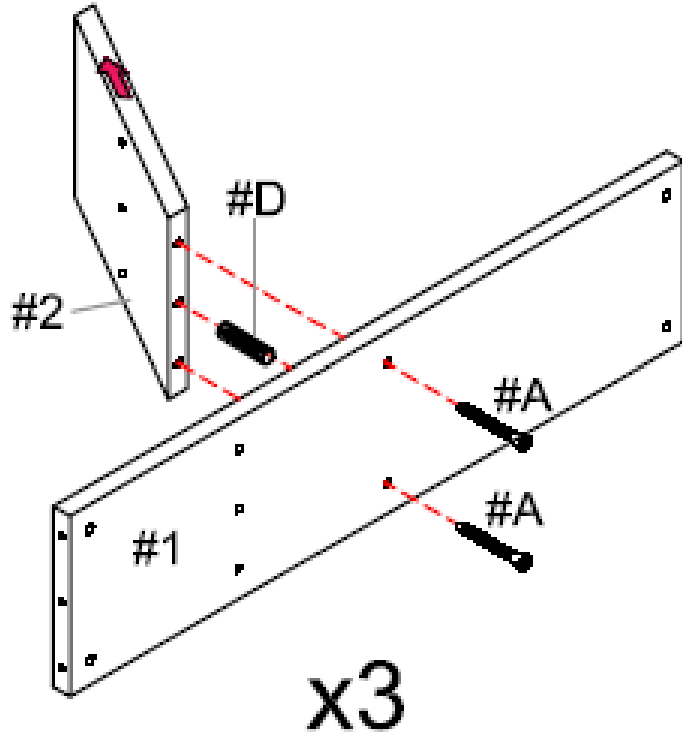


#A x 6 pcs  
#D x 3 pcs  
#I x 6 pcs

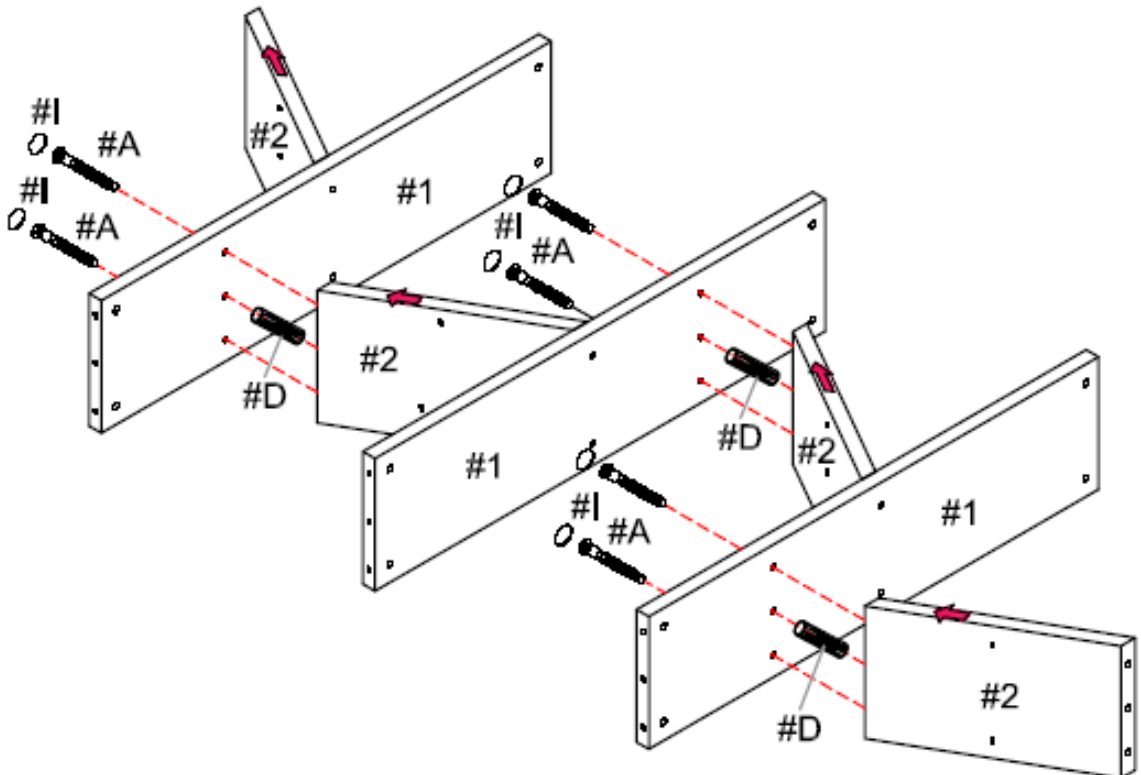 




#3
 
#A x 8 pcs  
#D x 4 pcs  
#I x 8 pcs

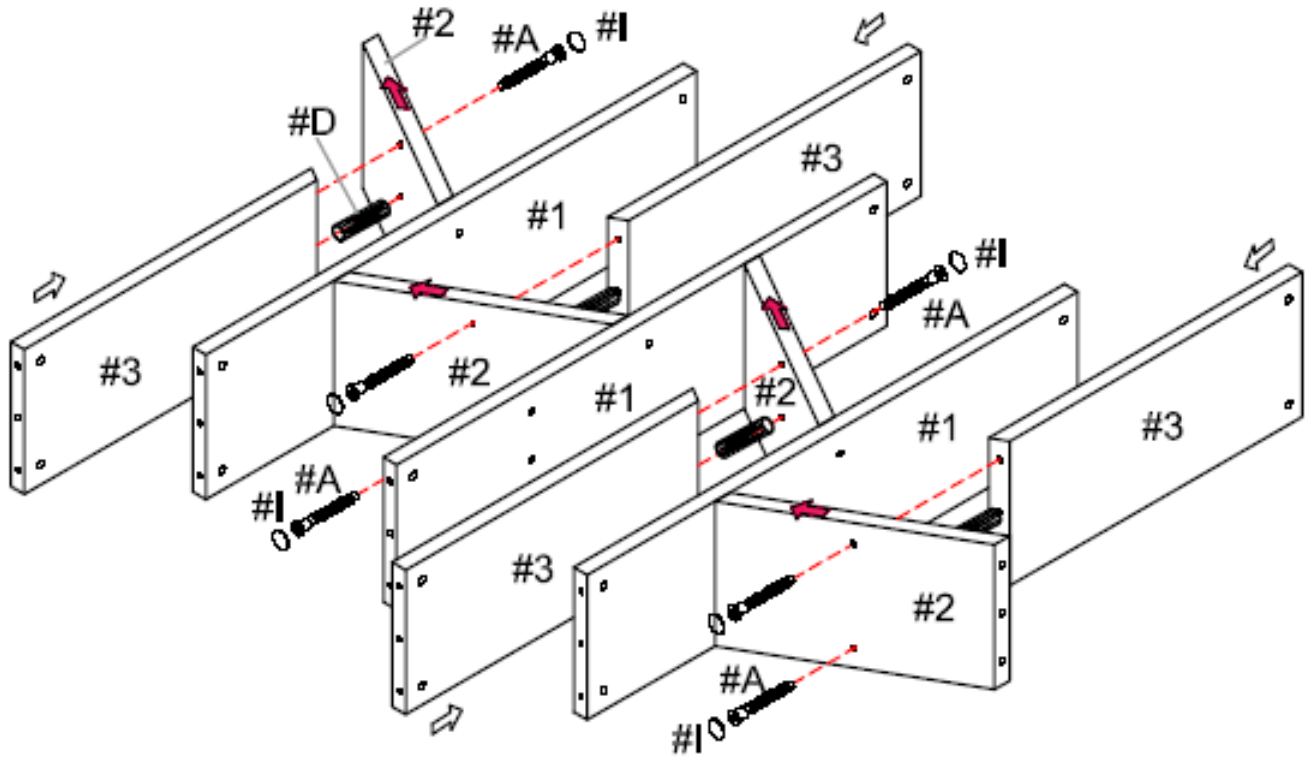


#4
 
#B x 20 pcs  
#C x 20 pcs  
#D x 10 pcs

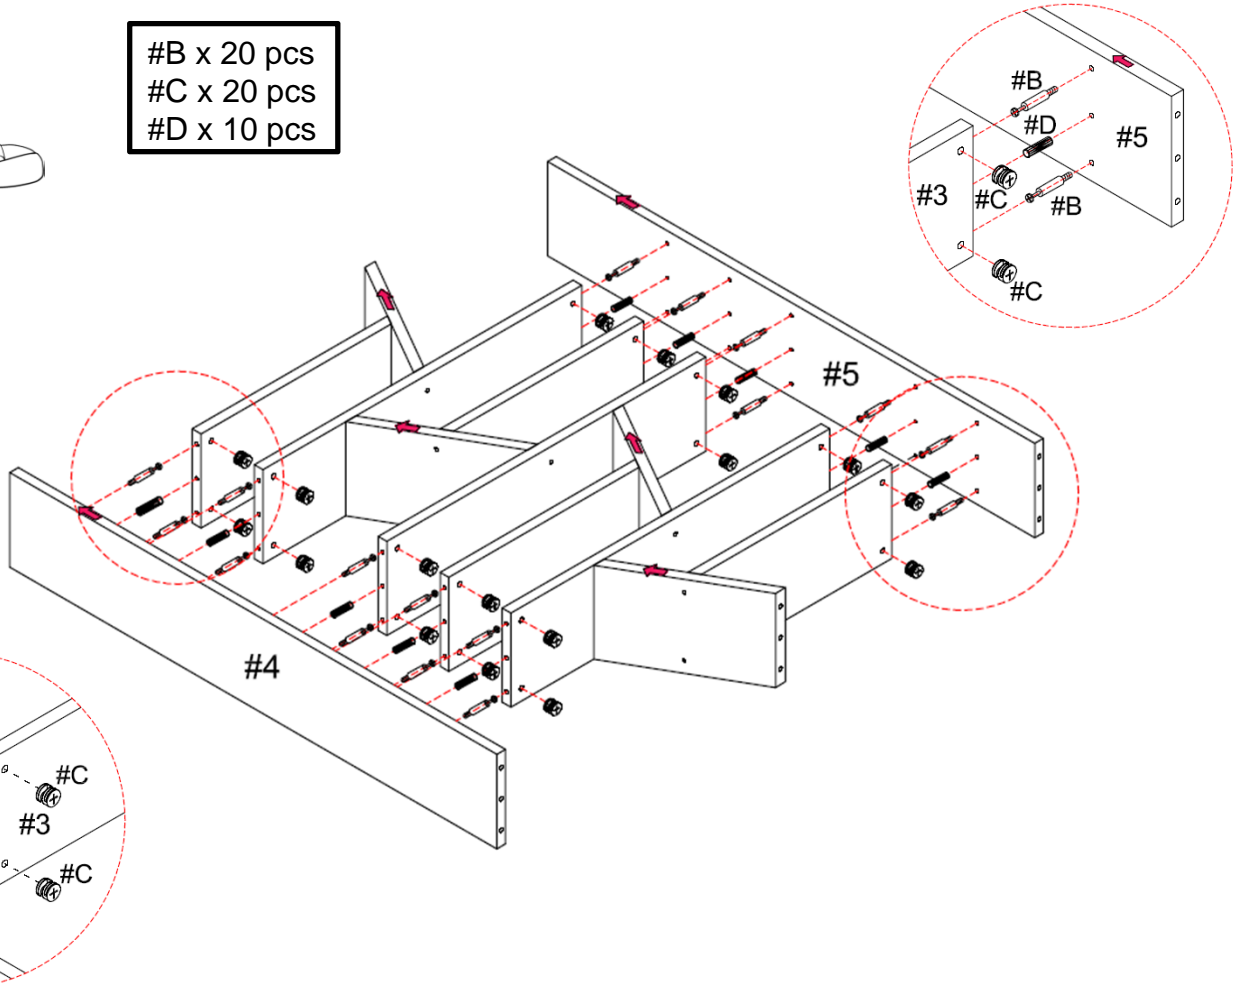



#A x 12 pcs  
#D x 6 pcs

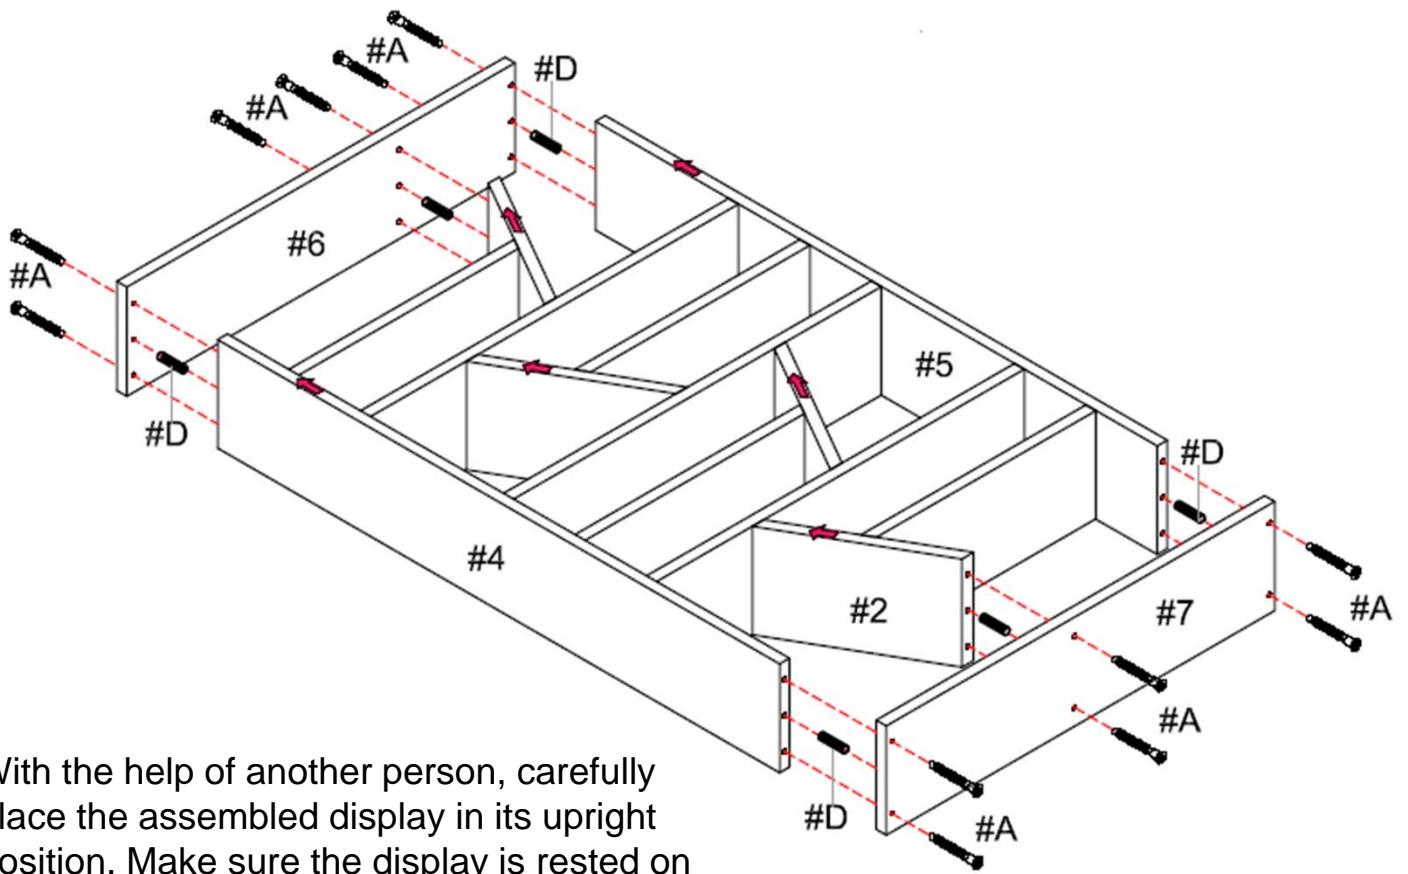 

With the help of another person, carefully place the assembled display in its upright position. Make sure the display is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.




## SAFETY STRAP TO PREVENT TIP-OVER

 Secure the strap (#E) using a Phillips screwdriver to tighten the screw (#F) through the hole on the end of the strap (#E) and into the back of the display.

**Drywall:** Select a location where you want the display to be mounted. Place the display against the wall and extend the strap (#E) fully out above the display and, on the wall, mark the location where the anchor (#H) and the screw (#G) will be placed. Drill a hole slightly smaller than the size of the screw (#G). Push the anchor (#H) as far as it will go with your finger. Tap gently with a hammer until the anchor (#H) is flush with the wall surface. Secure the other end of strap (#E) using a Phillips screwdriver to tighten the screw (#G) through the strap (#E) and into the anchor (#H).

If the location is on a wood stud, do the following:

No anchor will be needed if securing to a wood stud. Drill a hole slightly smaller than the size of the screw (#G). Secure the other end of the strap (#E) using a Phillips screwdriver to tighten the screw (#G) through the strap (#E) and into the wall (wood stud).

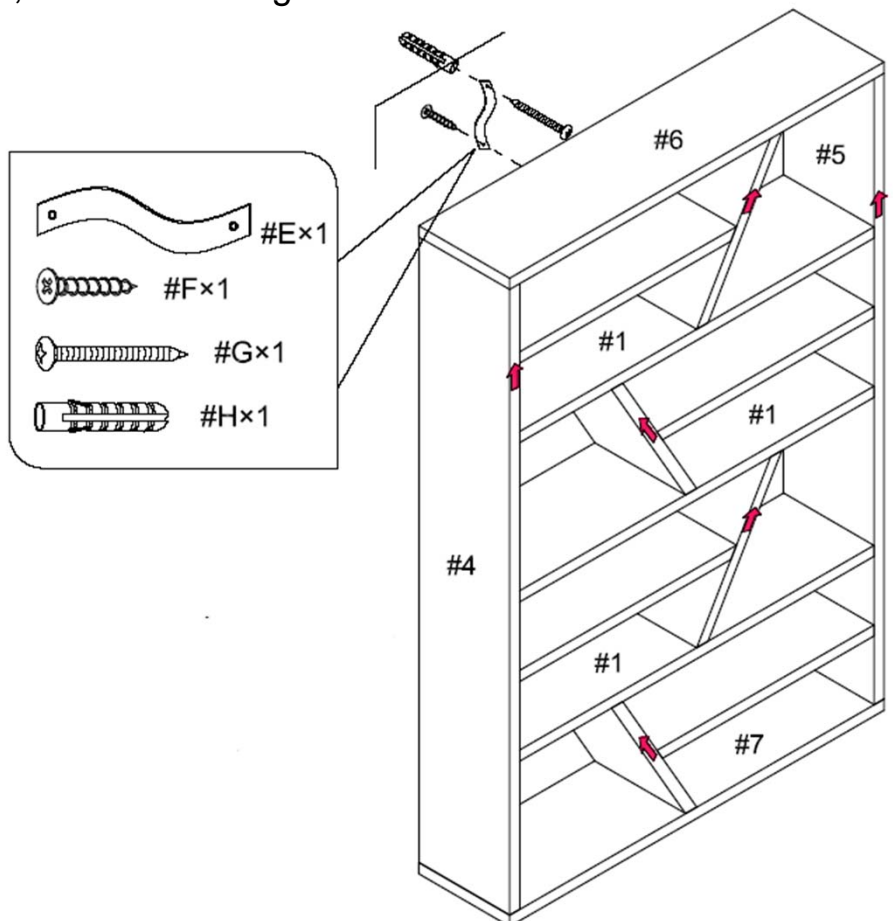

ASSEMBLY IS COMPLETED