 


Assembly Instructions

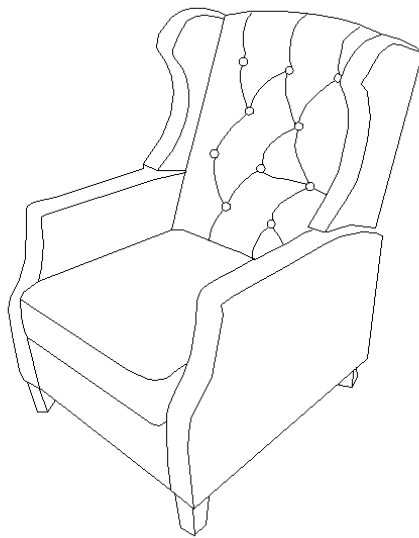


Caution: You must read this before you proceed

Push Back Chair




Parts List

Label	Picture	Description	QTY
A	A line drawing of the chair backrest, showing the tufting pattern and the attachment points for the seat and base.	Chair Backrest	1
B	A line drawing of the chair base, showing the seat and the attachment points for the legs.	Chair Base	1
C	A line drawing of a single front leg, showing the attachment point for the base and the foot of the leg.	Front Leg	2




D		Hind Leg	2
E		Left Wing	1
F		Right Wing	1

Hardware

Label	Picture	Description	QTY
①		Gasket	7

Assembly Preparation

   Before Beginning Assembly:

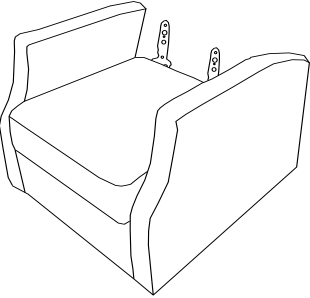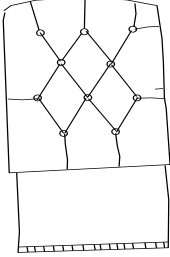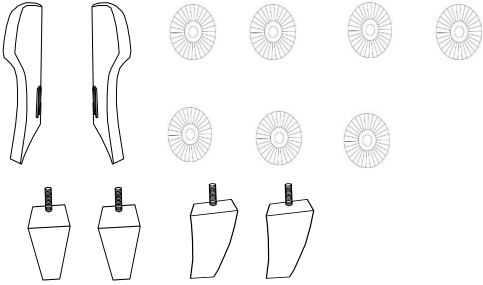
- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

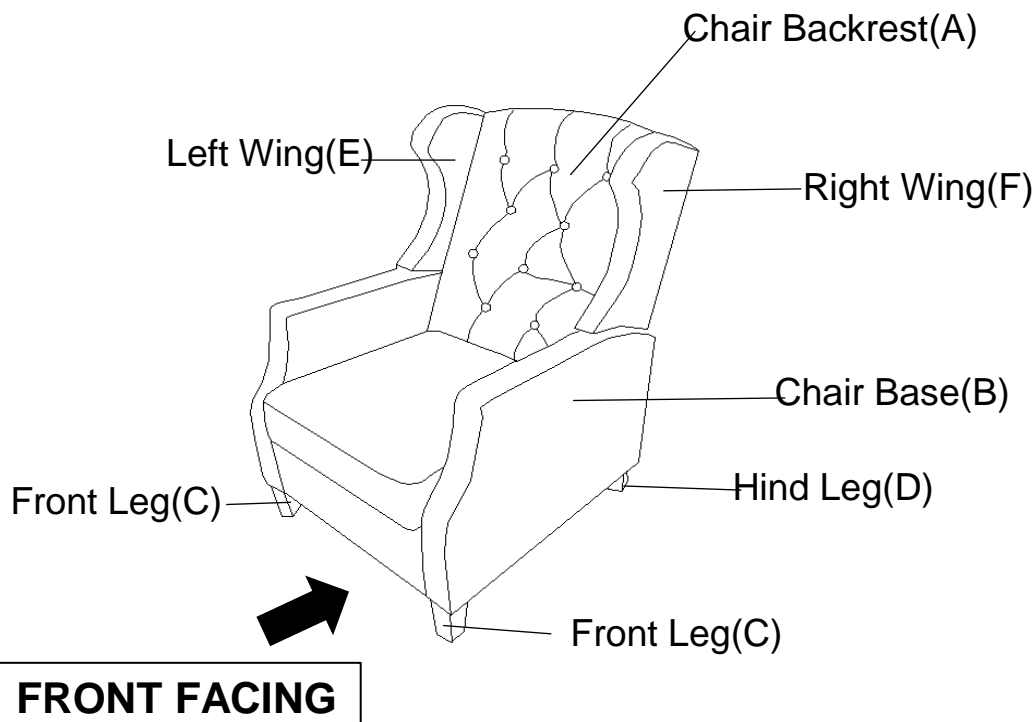

This Push Back Chair has multiplied parts and may require up to some 30 minutes to assemble. To give you an overview of the Push Back Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

 Step 1

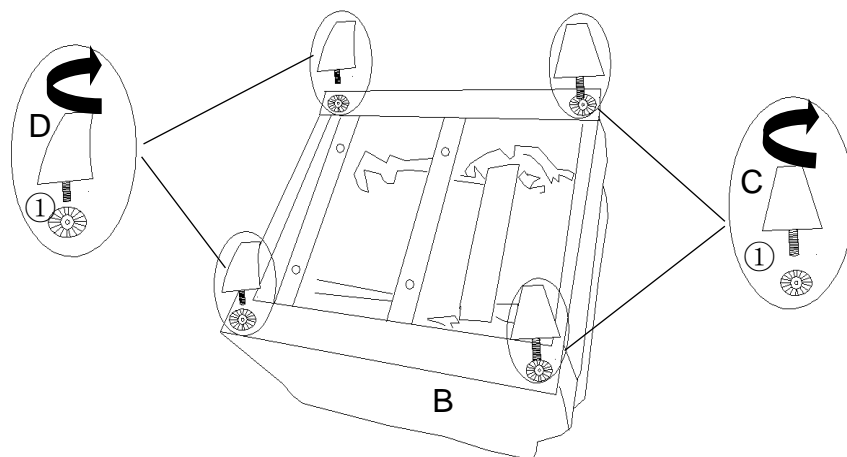

Place the Chair Base(B) facedown on a clean, non-marring surface.

Install the Front Legs(C) and Hind Legs(D) into the bottom of the Chair Base(B) by placing a Gasket(①) onto the threaded stem of the Legs.

 
And then insert the threaded stem into the threaded mounting position at each Corner of the Bottom of the Chair Base(B).

Tighten by turning the Legs clockwise.

Stand the assembled Chair Base up and test for stability on a Level Surface.

Note: The use of Gaskets are OPTIONAL and are especially useful to help alleviate slight wobbles. Some Wooden Legs may need more than one whilst some legs do not need any.


Step 2

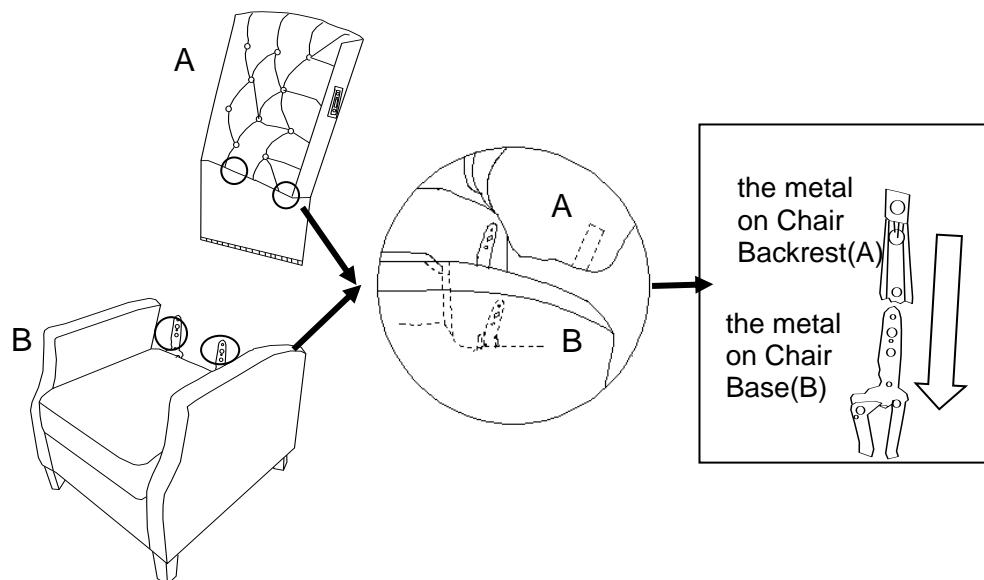

With assistance of your adult partner, hold up the fully assembled Chair Base(B).

Insert the small metal arms on the sides of the Chair Backrest(A) into the prefabricated slide lock gadget on the Chair Base(B) as shown above. Firmly but gently, push the Chair Backrest(A) downwards until the Chair Backrest(A) is fully slotted and locked into position.

 
Step 3

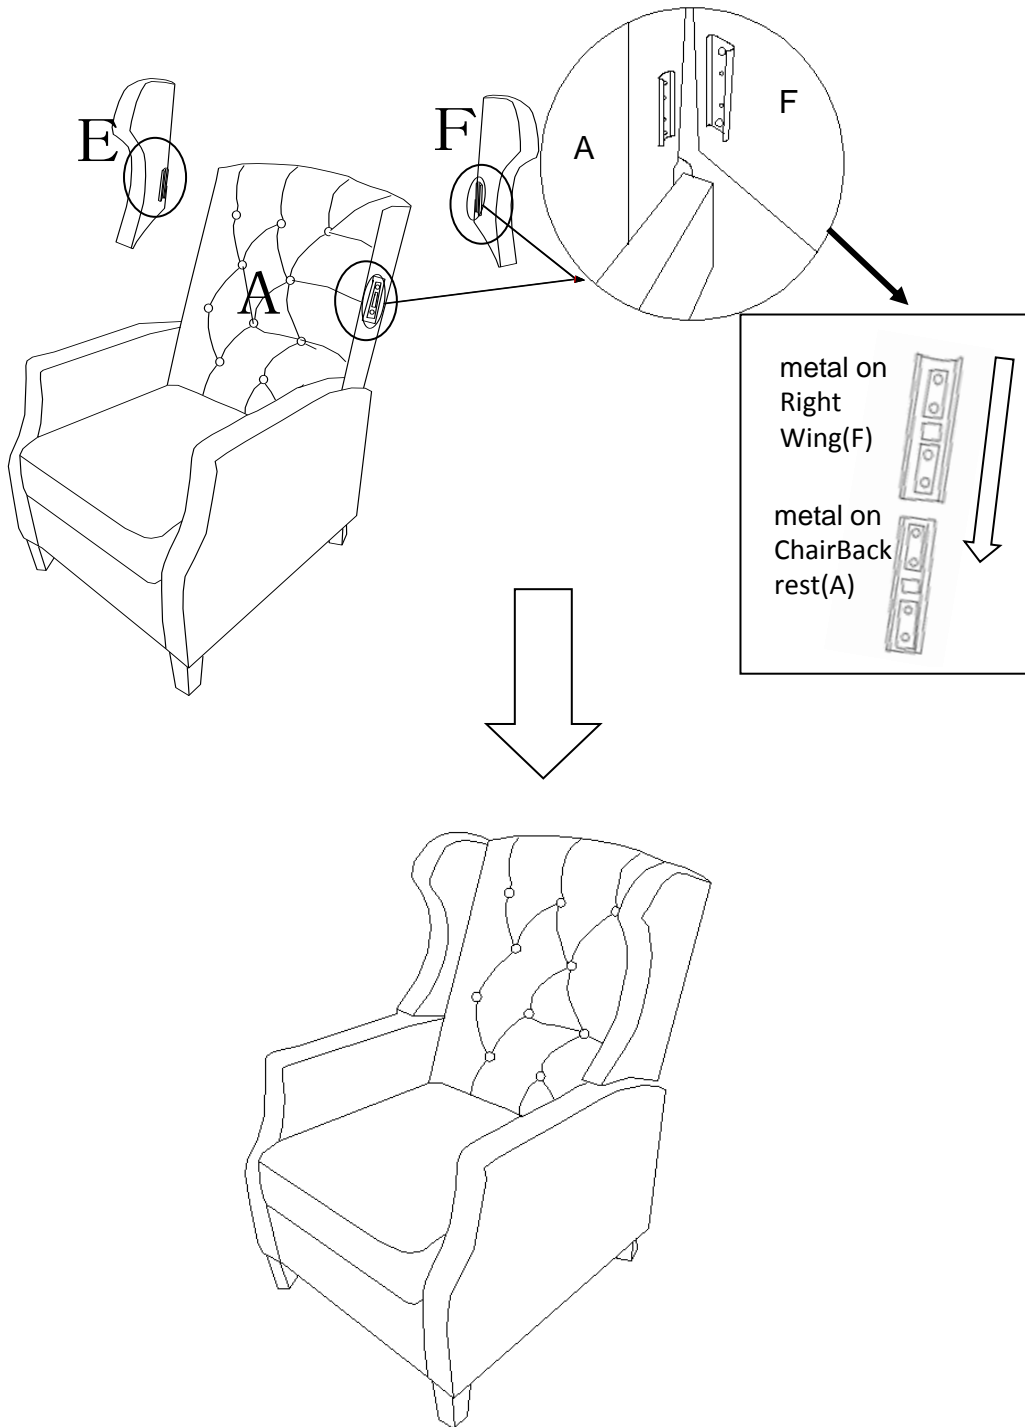

Insert the small metal on the sides of the Left and Right Wing(E)(F) into the prefabricated slide lock gadget on the Chair Backrest(A) as shown above.

Firmly but gently, push the Wing downwards until the Wing is fully slotted and locked into position.

 Step 4

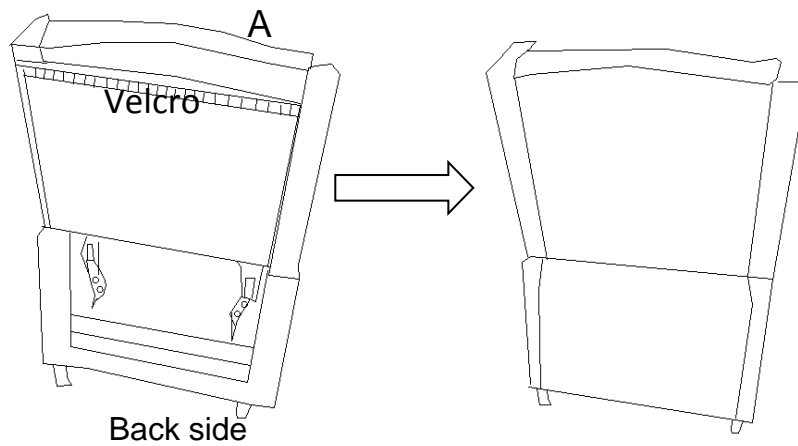


Stand behind Chair.

Smoothly down the fabric flap on the Chair Backrest(A).

Run your hands down both sides of the flap, from top to bottom, allowing the velcro tape to adhere to the flap under the seat of the chair.

 Step 5

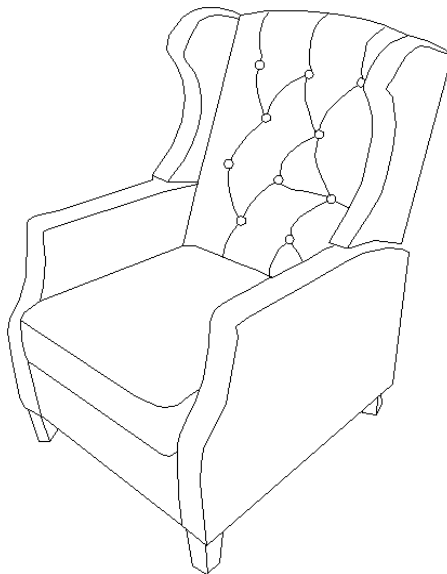

Make sure all parts are connected and securely locked into position.

Your Chair is ready to use.

 
This Chair can only be used on a flat, level surface.

User Instructions.

Push Back Chair

Please read the Instruction Manual below carefully before use.

Supervise children, when in use of this Push Back Chair.

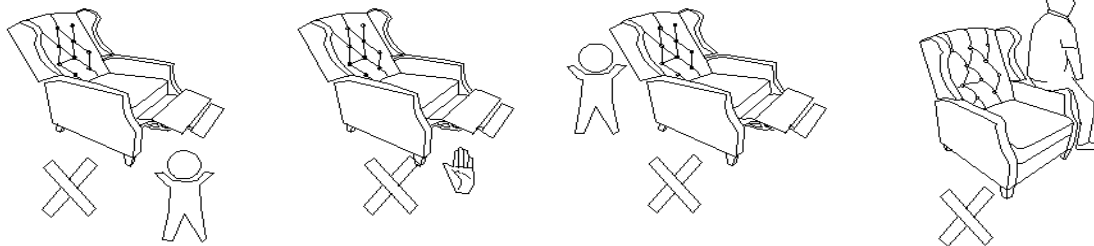

Do not let children stand in front of or behind the Push Back Chair when opening or closing the footrest. Do not put your hands inside the Footrest when opening or closing the footrest. Do not sit on any armrest of Chair.

To get into a open position - To push the Chair Backrest

 
Sit into the seat.

Place your feet apart.

Place your left and right armrest.

 
Synchronise a backward push with your arms

Use your body weight and push backwards into the seat into a fully reclined position.

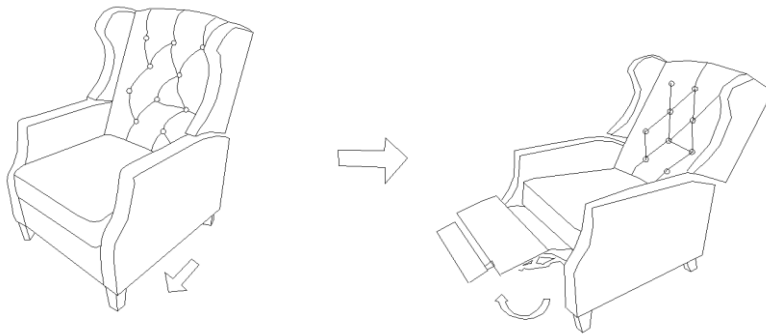





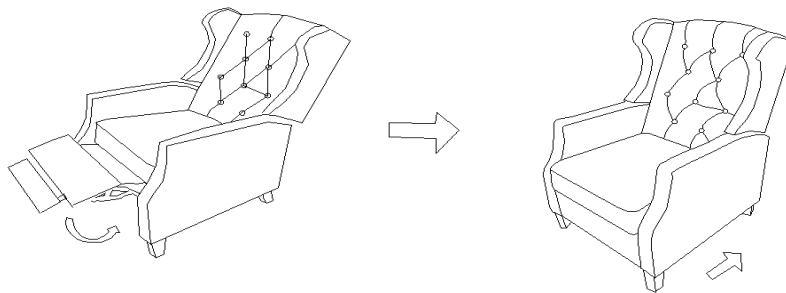















To get out of chair - move Seatback into Upright Position

Tilt your body weight slightly forward and upwards.
The seat back will come up to an upright position.
Use your feet to push the footrest down.
The chair will automatically lock when it is in the fully upright position.
When necessary, use your arms help lift/push yourself out of the seat.



Care & Maintenance

-   ● Do not put hot items directly on furniture surface
 -   ● Do not clean furniture with harsh cleansers or polish.
 -   ● Do not place furniture under direct sunlight.
 -   ● Do not place furniture near heating or cooling vents.
 -   ● Do not write on furniture without a padded barrier to protect the surface.
 -   ● Do not place furniture outside . For indoor use only .
 -   ● Not for commercial use. For residential use only .
 -   ● Stains may be removed with mild soap solution and damp cloth.
 -   ● Children should not climb or jump on the furniture.
-
-   ● Dust and pick-up spills using a clean, non-colored, lint-free cloth .

What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

