



JUDGE

BLACK

Two-slice Toaster



Instruction Manual

Model No. JEA40

V002

**PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY
BEFORE USE AND RETAIN FOR LATER REFERENCE**

**UNPACK YOUR TOASTER CAREFULLY AND REMOVE
TEMPORARY PACKING PIECES, LABELS AND STICKERS**

Identifying the parts

(with *Part Numbers* for customer replaceable items)



- | | |
|-----------------------------|----------------------------|
| 1. Toaster body | 6. Reheat button/indicator |
| 2. Toast carriage slots | 7. Cancel button/indicator |
| 3. Crumb tray
(JEA40CT) | 8. Bread lower lever |
| 4. Browning control | 9. Cable storage |
| 5. Defrost button/indicator | 10. Power cable and plug |

Before first use

Remove any labels and/or swingtickets.

In order to remove any residue from the manufacturing process before first use, proceed as follows:

1. Follow the “How to use” instructions to run the Toaster at the maximum browning setting (6) three times without bread.
 - It is normal for smoke and a hot smell to be emitted during this process; manufacturing residues are being removed.
2. Allow to cool before toasting bread.

How to use

- Site the Toaster on a firm level surface; if necessary, protect vulnerable surfaces with a heat insulating pad.
 - The Toaster should be sited away from soft furnishings or other flammable material.
 - Use the Cable Storage (9) in the base to keep the trailing Power Cable (10) as short as possible. Position the cable so it cannot be unintentionally pulled or snagged.
1. Ensure that the Crumb Tray (3) is fully inserted into the base of the Toaster Body (1).
 2. Plug the Power Cable (10) into a mains socket (check your supply is compatible with the Rating Information - see “Specifications”) and switch on at the socket.
 3. Adjust the Browning Control (4) to set the degree of browning you prefer.
 - For medium thick slices, start at a setting of 3 or 4; use a lower setting for thinner slices and a higher setting for thicker slices. You can adjust further according to your preference for the degree of browning you prefer.
 4. Place the bread slices into the Toast Carriage Slots (2). Do not force unsuitably shaped bread into the Toast Carriage Slots (2); if the bread is oversized, it is better to trim it before toasting.
 - If only one slice is being toasted, the front slot should be used.
 5. Activate the Toaster by pushing the Bread Lower Lever (8) down until it locks into place. Heating will commence as soon as the lever is lowered; the Cancel Indicator (7) will illuminate.
 - When toasting is finished the Toaster will automatically lift the bread and stop heating.
 - CAUTION: the stainless steel surround of the Toast Carriage Slots (2) will become HOT during toasting.
 - To achieve even browning of bread slices they must be of the same shape, size, thickness and freshness. Even so, there may be a small variation in the degree that each side of the toast is browned.
 - Pressing the Cancel Button (7) immediately switches heating off and automatically raises the Toaster carriage; for example, this might be necessary if the toast is burning.

Toasting from frozen

- Follow the instructions in “How to use”, but as soon as heating begins, press the Defrost Button ⑤; the Defrost Indicator will illuminate and the heating time will be extended.

Reheating pre-toasted bread

- Follow the instructions in “How to use”, but as soon as heating begins, press the Reheat Button ⑥; the Reheat Indicator will illuminate and the heating time will be set to just sufficient to heat the toast without over-toasting the bread, irrespective of the setting of the Toaster Browning Control ④.

Cleaning

- Allow the Toaster to cool completely before cleaning. Switch off at the mains and unplug from the mains socket.
1. Remove the Crumb Tray ③ from the base of the Toaster Body ①. Dispose of any crumbs. If necessary, the Crumb Tray may be washed with warm water and detergent, then dried thoroughly.
 2. Replace the Crumb Tray ③ into the base of the Toaster Body ①.
 3. Wipe the Toaster Body ① with a cloth, slightly dampened with warm water and detergent, then dry.
- DO NOT IMMERSE ANY PART OF THE TOASTER, OTHER THAN THE CRUMB TRAY, IN WATER.
 - Do not use harsh abrasive cleaners, steel wool scourers or brushes with metal bristles.

Cautions

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Ensure that your home electrical supply corresponds to the requirements of the Toaster - see “Specifications”.
- Do not connect the Mains Plug ⑩ into the socket, or use the appliance, if your hands or the appliance are wet.
- Unplug the appliance whenever it is not in use.
- THE APPLIANCE MUST ALWAYS BE EARTHED - always connect to a mains socket with an earth connection.
- Never leave the appliance unattended when it is operating.
- The Mains Lead ⑩ should be positioned so as not to cause an obstruction or to overhang the edge of the surface, where it could accidentally be snagged or pulled by children.

- Do not use the appliance outdoors.
- Do not place the appliance close to a heat source.
- Site the Toaster on a firm level surface; if necessary, protect vulnerable surfaces with a heat insulating pad.
- The appliance should be sited away from soft furnishings or other flammable material.
- Ensure that the Mains Lead ⑩ is not near any hot surface.
- Pull the plug (do not pull Mains Lead ⑩) to disconnect from mains socket.
- Do not pull the Mains Lead ⑩ to move the appliance.
- It is not recommended that the appliance be used with an extension lead. If this cannot be avoided, ensure that the extension lead is of the correct electrical rating.
- As the appliance becomes hot during use, take care when handling it.
- The appliance should be used only as instructed and for the purpose for which it was intended; there is potential for injury or damage from misuse.
- Do not use the appliance with a timer or programming device.
- Do not switch on or attempt to operate the appliance if it appears to be faulty in any way - contact Judge Customer Services at the address given in the warranty section.
- Never attempt to make any repair to the appliance yourself - contact Judge Customer Services at the address given in the warranty section.
- **DO NOT IMMERSE ANY PART OF THE TOASTER, OTHER THAN THE CRUMB TRAY, IN WATER.**
- Should the appliance accidentally fall into water, unplug immediately and do not use; contact Judge Customer Services at the address given in the warranty section.
- The appliance is intended for domestic use only.
- Please keep your purchase receipt.

Specification

Name	Model No.	Rated Voltage	Rated Frequency	Rated Power
Judge Two-Slice Toaster	JEA40	230V	50z	800W



Judge 2 Year Domestic Electrical Guarantee

The Judge Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase. During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.

The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.

The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.

THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.

Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

**JUDGE CUSTOMER SERVICES, HORWOOD,
AVONMOUTH WAY,
BRISTOL,
BS11 9HX, GREAT BRITAIN**

customerservice@horwood.co.uk

www.judgcookware.co.uk

Tel: 0117 940 0000



CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FOR DOMESTIC USE ONLY