

London Clock

COMPANY

Chime Clock Instructions


PLEASE READ THESE INSTRUCTIONS CAREFULLY & RETAIN FOR FUTURE REFERENCE

ACTIVATING THE CLOCK

Remove the cover from the back of the clock. If batteries are already fitted, then please remove the isolation tab to activate the clock. To replace the battery insert 1 x new C (1.5V) battery into the battery compartment, taking care to observe the correct polarity.

FEATURES

- Choice of Westminster or Whittington Chime
- Hourly and Quarterly Chime
- Hourly Strike
- Volume Control
- Night shut off system between 11:00pm and 5:45am
- Pendulum

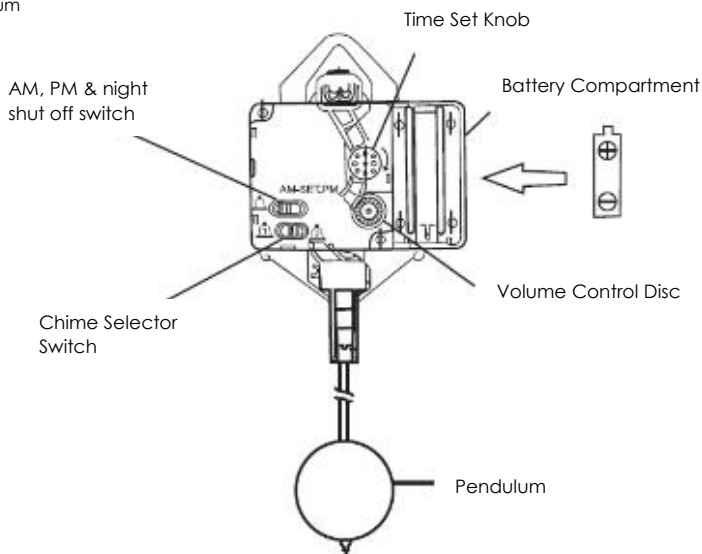

AM, PM & NIGHT SHUT OFF

The "AM, PM & night shut off" switch has 3 positions.

1. The left position is for de-activating the Auto Night Shut Off system. This means the chime will operate at all hours, day and night.
2. The centre position is for setting the time to AM.
3. The right position is for setting the time to PM.
4. To activate the Auto Night Shut Off system, slide the switch to either the AM (centre) or PM (right) position. This means the chime will not operate between 11:00pm and 5:45am.

SETTING THE TIME

1. If the current time is AM, slide the "AM, PM & night shut off switch" to the AM position. The AM position is in the centre directly under the AM marking. Rotate the Time Set Knob until the correct time is reached.
2. If the current time is PM, slide the "AM, PM & night shut off switch" to the PM position. The PM position is in the far right. Rotate the Time Set Knob until the correct time is reached.

Please note that when the clock is activated, the clock may begin to chime automatically. Once the chime has finished and the correct time has been set, the clock will not chime until it reaches the next hour. Once the next hour has been reached, the clock will chime hourly and quarterly.

London Clock

COMPANY

SELECTING THE CHIME

This clock has the option of Westminster chime or Whittington chime. To select the chime you desire, slide the "Chime Selector Switch" to the left for Westminster chime or to the right for Whittington chime.

Please note that the chime will play for different periods depending on the time, for example one quarter of the melody will play at quarter past the hour, half the melody will play at half past the hour and three quarters of the melody will play at quarter to the hour. When the time reaches the hour, the full melody will play and the strike will sound according to the number of the hour, for example at 11am the clock will strike 11 times, at 12pm the clock will strike 12 times, at 1pm the clock will strike 1 time and so on.

VOLUME CONTROL

The volume of the chime can be adjusted by rotating the "Volume Control Disc" on the back of the clock. To increase the volume, rotate the disc in a clockwise direction. To decrease the volume, rotate the disc in an anti-clockwise direction.

ACTIVATING THE PENDULUM

1. The pendulum arm may be fixed in a locked position to protect it during transport. If so, please gently detach the pendulum arm.
2. Remove the pendulum carefully from its packaging and attach the pendulum onto the pendulum arm making it sure it is able to swing freely.
3. If the pendulum does not begin to swing immediately, it may be necessary to gently move the pendulum in either direction.

FIXING INSTRUCTIONS

When attaching the clock to the wall please ensure that you use a screw and wall fixing suitable for the size and weight of the clock.

1. Use a large screw and wall fixing suitable for your wall.
2. Drill a suitable sized hole to insert the wall plug.
3. Gently tap wall plug into drilled hole.
4. Insert screw into the wall plug, leaving the screw protruding slightly.
5. Hang clock onto the protruding screw, taking care to ensure clock and screw are mated correctly.

If your clock does not function correctly, reset the clock by removing the batteries and reinstalling them by observing the correct polarity. The clock will be reset and you will need to set the clock again.

Please note that it can take up to 12 hours for the chime to function correctly.

Care instructions

- Wipe clock with a soft dry cloth only.
- Replace battery every 12 months or when the clock stops.



Battery safety & disposal

- Dispose of batteries responsibly at local authority household waste recycling facility.
- **DO NOT dispose of batteries in a fire as the batteries may explode or leak.**
- **Only use 1.5V batteries** in this clock.
- Never use rechargeable batteries.
- Replace all batteries at the same time; NEVER mix new and used batteries, different types or brands.
- Never try to dismantle batteries.
- Never short circuit batteries.
- Exhausted batteries must be removed from the clock promptly.
- Remove batteries from the product before extended storage.



This symbol indicates that this product, and any batteries, should not be disposed of in normal household waste but taken to appropriate local recycling centres, where available. Never throw batteries in a fire or attempt to open outer casing.