

# ASSEMBLY INSTRUCTIONS



## Extera Outdoor Table Tennis










**MODEL: TTEXEB09**

Congratulations on selecting a Playcraft Tennis Table! Playcraft is leading the industry with high quality value priced products. Please contact us toll free at (888) 367-3095 or via email at [support@playcraft.com](mailto:support@playcraft.com) should you require any assistance.

## For Your Safety



- 1) Please read all safety instructions and directions before assembly. During use and assembly, please consider that the table is heavy and may require TWO PEOPLE to lift.
- 2) Only use the table for its intended purpose.
- 3) Damaged or worn parts may be dangerous for users and the integrity of the table. Replace worn or damaged components immediately and do not use the table until any issues have been resolved. For best results, use only spare parts supplied by Playcraft.
- 4) Unauthorized repairs or alterations to the design (removal of original parts, addition of other components etc.) May be dangerous and will void your warranty.
- 5) When setting up or dismantling the table, please be sure to stay clear of the folding radius.
- 6) For outdoor tables, please be sure to store the table in a sheltered place and use the included cover for extended life. When folded up, the table tennis table is vulnerable to being moved by strong winds. Please take this into consideration.
- 7) Only move the table when it is in the transport / storage position.
- 8) Check all screws, bolts, etc. on a regular basis to ensure that they are in good working condition and have not worked loose over time.
- 9) For indoor tables, please ensure that your table is not exposed to dampness or rain, as it is not weatherproof. For both indoor and outdoor tables, please keep the table away from direct sources of heat.
- 10) For practicing solo, one table half can be folded up separately for use of the playback feature. Be sure that you are comfortable handling the weight of the table when lowering the half alone.

## PARTS LIST

Sketch	Index	Part Description	Quantity
	H1	Bolt	8
	H2	Washer	16
	H3	Nut	16
	H4	T Leg	4
	H5	Joining plate	8
	H6	casters	8
		Net&post	1

## Playcraft Extera Table Tennis Assembly Guide





- 1) Place table half face down on a soft surface ( Fig 1 )
- 2) Release the lock by pressing the button ( Fig 2 ) and lift up the legs. Pull up the jointed lock down bar in the center so the bar is straight and the legs are in a locked position ( Fig 3 )
- 3) Casters are already attached to the T legs. Connect a pair of joining plates to the T leg using one bolt  
Sequence is; Bolt / washer / joining plate / t leg / joining plate / washer / nut. Lightly tighten. ( Fig 4 )
- 4) Repeat with other T leg and joining plates
- 5) Attach the pair of T legs to the table leg by using the remaining hardware, passing the bolt through the hole on the joining plate, into the table leg and out the other joining plate. ( Fig 5 ) Fully tighten the four bolts just installed
- 6) Carefully flip the table over and place in the play or storage position. If placing in the storage position, slide the lock to secure the top in the upright position ( Fig 6 )
- 7) Repeat steps 1 through 6 for the other half of the table
- 8) Place the two halves together and connect at the middle using the net/post clamp

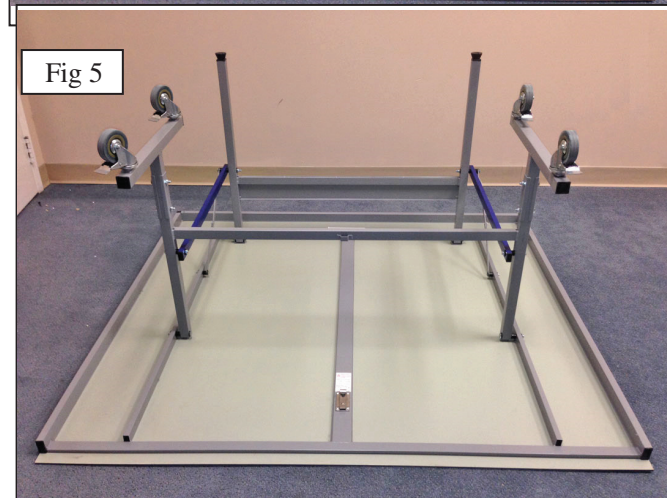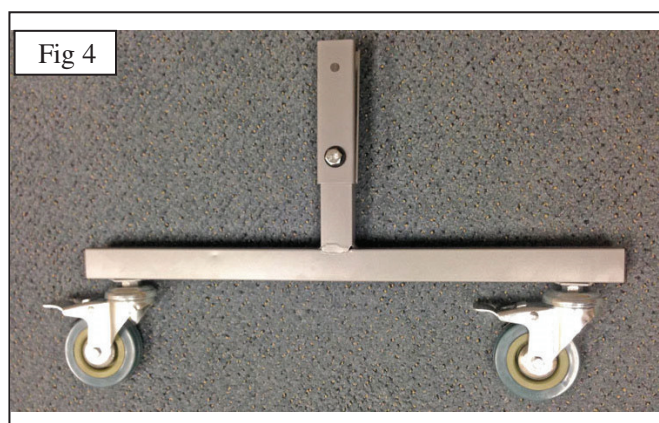



## Attaching the Net to the Net/Post Clamp

- 1) Locate the wheel on the post ( Fig 1 ) and turn it clockwise to raise the height adjuster rod, exposing the slotted post cap ( Fig 2 )
- 2) Once the cap is exposed remove it from the height adjuster rod by carefully twisting it back and forth while applying a slight upward force ( Fig 3 )
- 3) Place the opening of the net hem end over the height adjuster post so the hem is inserted into the post slot ( Fig 4 ) and carefully pull the net completely into the post ( Fig 5 )
- 4) Replace the slotted post cap and orient the slot so it is parallel with the direction of the net allowing for secure placement of the suspension cord. Turn the wheel on the post counter clockwise to retract the height adjuster rod into post. ( Fig 6 & 7 )

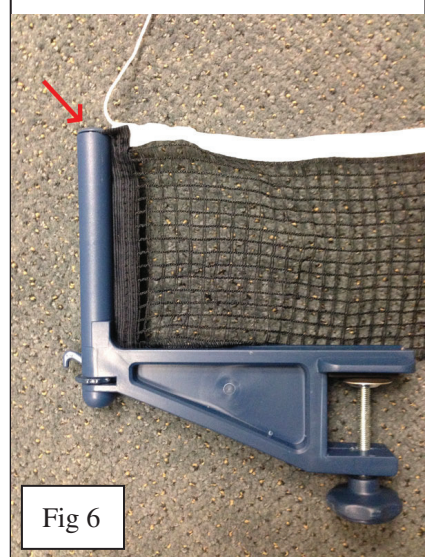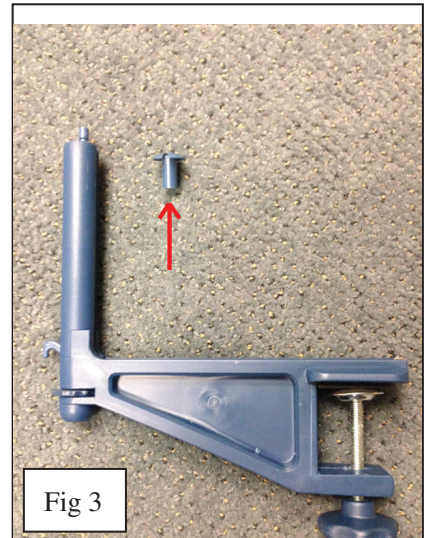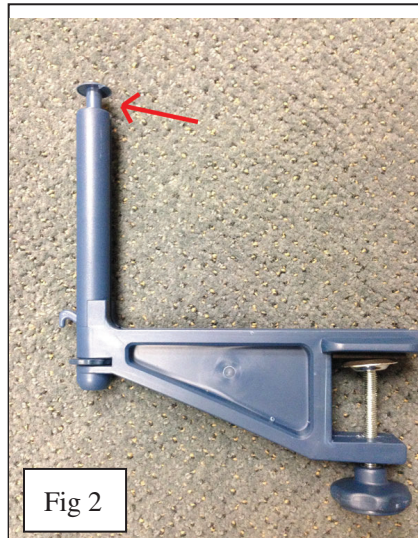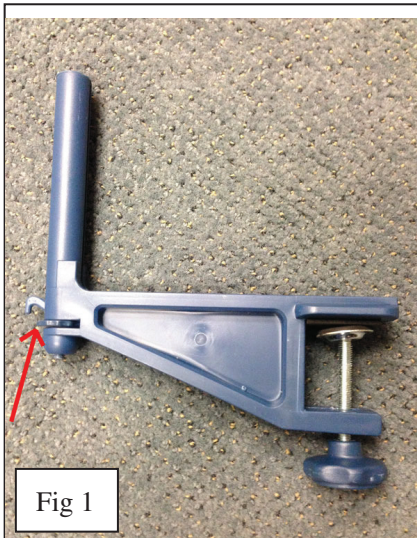



## ***USAGE INSTRUCTIONS***

### **Unfolding the Table:**

When unfolding the table, the first step is to lock the casters. Take caution that all areas around you are clear. Please remember that the table is very heavy. If you are worried that it may be too heavy, it is recommended that at least two people unfold the table. To unfold the table, push on the lock to release the table from the storage position. After unlocking the table, slowly lower the table half down. Do the same for the other half. Check to make sure that the locking hinge bar attached to each leg of the table is now straight (locked). Then install the net and post set and enjoy the table.

### **Folding the Table:**

To fold the table into the storage position, first lock the casters. Next, ensure that the net and post set have been removed from the table. Failure to do so could cause damage to the table. Unlock (by bending) the locking hinge bar to enable the H-bar to be stored against the bottom of the table surface. Please remember that the table is very heavy. Ensure that you have enough ceiling height to raise the table half. If you are worried that the table will be too heavy for you to lift, it is recommended that at least two people fold the table. Raise the table half to the vertical position until you hear a loud clicking noise and make sure that the lock is fully engaged.

### **Playback Position:**

Playback position is achieved by unfolding one half of the table while the other half remains in the upright ( folded ) position. Make sure that the locks of the folded half are fully engaged. Always use the locking casters and place them in the locked position when the table is being used.

### **Leveling:**

The table comes with leveling feet. Spin the leveling feet on their vertical axis to adjust height and make the table level.

### **Using the locking casters**

When the table is in the storage position, or in the play position, please remember to always lock the casters for added safety.

## **Customer Service**

(888) 367-3095

[support@playcraft.com](mailto:support@playcraft.com)

[www.playcraft.com](http://www.playcraft.com)

For questions on assembly or for missing or damaged parts, please contact us toll free at (888) 367-3095 or via email at [support@playcraft.com](mailto:support@playcraft.com)

## Thank you for choosing Playcraft!

Global Merchants, Inc.

12 Lunar Drive

Woodbridge, CT 06525