

ProSelect®

Professional Crate Accessories

© TOPS PET PRODUCTS, TOPSFIELD, MA 01983

ProSelect® Crate Fan

Operating Tips and Instructions:

To Operate:

- Remove battery cover (*on rear of fan*) and insert four “C” size batteries (*not included*). Replace battery compartment cover.
- Swing hanger arms out and hang on outside of pet cage (*Side of fan with switch should face away from cage or pet*).
- Use power/speed switch to select fan speed (*high or low*).

Using Adapters:

- Use only ProSelect 6-volt AC Adapter or 12-Volt DC Car Adapter (*sold separately*).
- Plug adapter into port on side of fan.
- Plug AC Adapter into standard 110/120 volt electrical outlet.
- Plug DC Car Adapter into vehicle cigarette lighter/12 volt outlet.
- Use power/speed switch to select fan speed.
- Unplug adapter when fan is not in use.

Tips:

- Flip hanger arms down for easy storage.
- Remove batteries when using fan with an adapter.
- Use the low setting for maximum battery life.
- Fan will require more frequent battery changes when used at the higher speed.
- Remove batteries from fan during storage or if unused for extended periods.