




OMELETTE **MAKER**

Non-Stick | Holds Two Eggs | 700 Watts

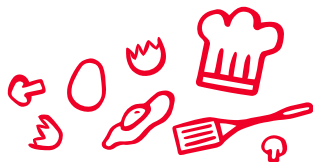



We believe that taking small steps every day to live a healthier life can have a big impact and that the best path to wellness is to eat whole, natural foods. At Dash, we make products that make it easier for you to prepare and eat real food at home, so that you can feel your best. In the store, in your kitchen, and online we give you the tools and the support to make delicious healthy meals.

That's what living unprocessed is all about!



Dash

OMELETTE MAKER

Important Safeguards.....	4-10
Parts & Features.....	11
Using Your Omelette Maker	12-13
Maintenance & Cleaning.....	14
Troubleshooting	16-17
Recipes.....	18-33
Customer Support	34
Warranty	35

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Allow Omelette Maker to cool completely before moving, cleaning, or storing.
- Close supervision is necessary when any appliance is used by or near children.
- DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Do not use metal utensils on the Cooking Surface as this will damage the non-stick surface.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM-7PM PT Monday-Friday or by email at support@storebound.com.

- Warning: Hot surfaces! Never touch the Cooking Surface or Cover while appliance is in use. Always lift and lower the Cover by the Handle.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Omelette Maker is NOT dishwasher safe.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Omelette Maker and its non-stick Cooking Surface.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Allow the appliance to cool before transporting or cleaning.
- DO NOT use the Omelette Maker near water or other liquids, with wet hands, or while standing on a wet surface.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision

and instruction concerning use of the appliance by a person responsible for their safety.

- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Omelette Maker can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse

the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

MESURES DE SÉCURITÉ IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MANUEL D'UTILISATION

Lors de l'utilisation d'appareils électriques, des précautions élémentaires de sécurité doivent être respectées, notamment:

- Lisez toutes les instructions.
- Retirez tous les sacs et emballages de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance lorsqu'il est utilisé.
- Assurez-vous que l'appareil est bien nettoyé avant de l'utiliser.
- N'utilisez pas l'appareil à d'autres fins que celles prévues. Pour usage domestique seulement. Ne pas utiliser à l'extérieur.
- Laissez Omelette Maker refroidir complètement avant de déplacer, nettoyer ou stocker.
- Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé par ou près des enfants.
- NE PAS soulever le couvercle de manière à ce que votre bras soit au-dessus de la surface de cuisson car il est chaud et pourrait causer des blessures. Soulevez du côté.
- Ne pas utiliser cet appareil avec un cordon endommagé, prise endommagée, après un mauvais fonctionnement de l'appareil, tombé ou endommagé de quelque manière que ce soit. Retournez l'appareil à l'établissement de service autorisé le plus proche pour qu'il soit examiné, réparé ou réglé.
- N'utilisez pas d'ustensiles en métal sur la surface de cuisson car cela endommagerait la surface antiadhésive.

- Pour la maintenance autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 de 7h à 19h du lundi au vendredi ou par courriel à support@storebound.com.
- Attention: Surfaces chaudes! Ne touchez jamais la surface de cuisson ou le couvercle lorsque l'appareil est en cours d'utilisation. Toujours soulever et abaisser le couvercle par la poignée.
- Des précautions extrêmes doivent être prises lors du déplacement d'un appareil contenant de l'huile chaude ou d'autres liquides chauds.
- Pour éviter tout risque d'incendie, d'électrocution ou de blessure, ne placez pas le cordon, la fiche ou l'appareil dans ou près de l'eau ou d'autres liquides. L'Omelette Maker n'est PAS compatible avec le lave-vaisselle.
- N'utilisez jamais de produits de nettoyage abrasifs pour nettoyer votre appareil car cela pourrait endommager l'Omelette Maker et sa surface de cuisson anti-adhésive.
- Ne placez pas l'appareil sur ou près d'un brûleur à gaz chaud, d'un brûleur électrique chaud ou dans un four chauffé.
- Laissez l'appareil refroidir avant de le transporter ou de le nettoyer.
- N'utilisez PAS l'Omelette Maker à proximité d'eau ou d'autres liquides, avec les mains mouillées ou lorsque vous vous tenez sur une surface humide.

- Évitez d'utiliser des accessoires non recommandés par le fabricant de l'appareil, cela peut provoquer un incendie, un choc électrique ou des blessures.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre le bord des tables ou des comptoirs.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) ayant des capacités physiques, sensorielles ou mentales réduites ou un manque d'expérience et de connaissances à moins d'être supervisé et instruit par une personne responsable de leur sécurité.
- Assurez-vous toujours de débrancher l'appareil de la prise de courant avant de le déplacer, de le nettoyer, de le ranger et lorsqu'il n'est pas utilisé.
- StoreBound décline toute responsabilité pour les dommages causés par une mauvaise utilisation de l'appareil.
- Une utilisation incorrecte de l'Omelette Maker peut entraîner des dommages matériels ou même des blessures.
- Cet appareil a une fiche polarisée (une lame est plus large que l'autre). Réduire le risque de choc électrique, cette prise ne tiendra dans une prise polarisée que dans un sens. Si la fiche ne rentre pas complètement dans la prise, inversez la prise. Si cela ne vous convient toujours pas, contactez

MESURES DE SÉCURITÉ IMPORTANTES

un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.

- Un cordon d'alimentation court doit être fourni pour réduire le risque de s'emmêler ou de trébucher sur un cordon plus long. Une rallonge peut être utilisée si des précautions sont prises lors de son utilisation. Si une rallonge

est utilisée, la puissance électrique indiquée sur la rallonge doit être au moins égale à la puissance nominale de l'appareil. La rallonge doit être disposée de manière à ne pas tomber sur le comptoir ou la table de travail, où elle pourrait être tirée par des enfants ou trébucher involontairement.

MESURES DE SÉCURITÉ IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MANUEL D'UTILISATION

PARTS & FEATURES




USING YOUR OMELETTE MAKER



- 1** Before first use, remove all packaging material and thoroughly clean the Omelette Maker. Place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Red Indicator Light will illuminate, signaling that the Omelette Maker is heating up.



- 2** Whisk 2 eggs in a separate bowl. Alternatively you can use 4 egg whites or 6-8 tablespoons of an egg substitute.

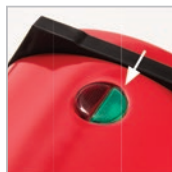

- 3** Once the Cooking Surface reaches the optimal cooking temperature, the Green Indicator Light will also turn on. Now, you're ready to get cooking!



- 4** Carefully lift the Cover by the Handle and spray both Cooking Surfaces with a little cooking spray. Place toppings on Cooking Surface and gently stir with a heat-resistant nylon or silicone cooking utensil until toppings are cooked through or warm.

USING YOUR OMELETTE MAKER



- 5** Pour the eggs onto the Cooking Surface, add cheese or other toppings, and close the Cover. Lock the Latch.



- 6** Halfway through cooking (approx. 1-2 minutes after pouring in the eggs), flip the Omelette Maker over so that the bottom is facing up and allow to cook for 1-2 more minutes.



- 7** Once food is cooked to your preference, carefully unlock the Latch and lift the Cover. Remove the omelette from the Cooking Surface with a heat resistant nylon or silicone cooking utensil. Do not use metal utensils to remove or place food on the Cooking Surface as this will damage the non-stick surface. When you have finished cooking, unplug your Omelette Maker and allow to cool before moving or cleaning.

MAINTENANCE & CLEANING

- Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids. Never use abrasive cleaning agents to clean your appliance as this may damage the Omelette Maker.
- In order to keep your Omelette Maker in pristine working order, thoroughly clean the appliance after each use. This will prevent the build-up of food or oil.
- Unplug Omelette Maker and allow it to cool completely.
- Using a damp, soapy cloth, wipe down the Cooking Surface and Cover. Thoroughly rinse the cloth and wipe again.
- Thoroughly dry Omelette Maker before storing.
- If there is food burned onto the Cooking Surface, pour on a little cooking oil and let sit for 5 to 10 minutes. Scrub the Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Thoroughly rinse the cloth and wipe again. If any food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Omelette Maker and its non-stick Cooking Surface.



While Dash products are durable, you may encounter one or more of the problems listed below. If the issue is either not solved by the solutions recommended below or not included on this page, please contact our Customer Support Team at 1-800-898-6970 or support@storebound.com.

ISSUE	SOLUTION
The green light on the Omelette Maker keeps shutting off.	This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the Cooking Surface does not get too hot or cold. When this occurs, the Indicator Light turns on and off.
How do I know when the Omelette Maker is heated and ready to use?	When the Omelette Maker reaches the optimal temperature, the Green Indicator Light will turn on and that means you're ready to get cooking!
I am cooking meat on the Omelette Maker and there is juice on the Cooking Surface. What do I do?	Carefully dab the Cooking Surface around the meat with a paper towel or napkin. If there is a lot of juice, remove the food from the surface with heat-resistant plastic or silicone tongs and set aside. Then, wrap a paper towel around the tongs and use this to wipe the Cooking Surface and soak up the juices. When done, return the food to the Omelette Maker and continue cooking.
There is no On/Off Button. How do I turn the Omelette Maker off and on?	To turn on, simply plug in the power cord. When you're done cooking, turn off the Omelette Maker by unplugging it.

ISSUE	SOLUTION
When using my Omelette Maker, the Cover gets hot. Is this normal?	Yes, this is completely normal. When using your Omelette Maker, always lift and lower the Cover by the Cover Handle. To prevent personal injury, DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
After using my Omelette Maker a few times, food is starting to stick to the surface. What is happening?	There is probably a build-up of burnt food residue on the Cooking Surface. This is normal, especially when cooking with sugar. Allow the appliance to cool fully, pour on a little cooking oil and let sit for 5-10 minutes. Scrub Cooking Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Rinse the cloth and wipe again. If food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
My Omelette Maker is making a hissing sound while it's cooking. Is this normal?	If you overfill the Omelette Maker, it will make a sounds as extra steam is released. If using many toppings in your omelette, use smaller eggs or only 1 large egg.
The Indicator Light will not turn on and the Cooking Surface is failing to heat.	Ensure that the power cord is plugged into the power outlet. Check to make sure the power outlet is operating correctly. Determine if a power failure has occurred in your home, apartment or building.



OMELETTE MAKER RECIPE BOOK

At Dash, we believe that happiness is homemade, so get ready to get cooking. Make small servings of stir fry, delicious omelettes, and even homemade brownies with your Dash Omelette Maker.



SWEET POTATO HASH

INGREDIENTS:

1 slice bacon,
cut into 1" pieces

½ medium sweet potato,
peeled and cubed

¼ cup diced bell peppers

1 tsp pickled jalapeños,
diced (optional)

1 dash fresh thyme

salt and pepper, to taste

DIRECTIONS:

Plug in the Omelette Maker and wait until the Green Indicator Light is illuminated. This means that the device is ready.

Place the bacon on the Cooking Surface and cook until crisp (about 2 minutes). Remove bacon but leave any rendered fat. Use a paper towel wrapped around a pair of tongs to wipe out excess fat and use it to grease the upper Cooking Surface.

Add sweet potatoes. Close the Omelette Maker and let the potatoes cook for 25 minutes or until the potatoes are tender. Open the Omelette Maker. Add the peppers, jalapeños, thyme, salt, and pepper. Stir gently. Close the appliance again and let cook for another 2 minutes.

Open the Omelette Maker, add the bacon, and gently stir to combine all the ingredients. Close the Cover and let cook for an additional minute before serving.





POTATO PANCAKES

INGREDIENTS:

2 medium potatoes peeled and shredded	½ tsp onion powder
1 egg	½ tsp salt
½ yellow onion, diced	¼ tsp pepper
2 tbsp flour	2 tbsp oil

DIRECTIONS:

In a large bowl, add all of the ingredients except for the oil and mix until well combined. Use oil to lightly grease the Cooking Surfaces of your Omelette Maker. Plug it in and while it is heating up, scoop out potato mixture and form into small patties. Place one patty on the Cooking Surface and close the Cover. Cook until golden brown on one side and then flip the Omelette Maker. Serve with Greek yogurt and applesauce.





CAPRESE OMELETTE

INGREDIENTS:

2 eggs (or 4 egg whites)
2-3 tbsp cup basil,
cut into thin strips
3 cherry tomatoes, halved
2 tbsp shredded mozzarella
salt & pepper, to taste

DIRECTIONS:

Whisk the eggs in a bowl and salt to taste. Plug in the Omelette Maker. When the Green Indicator Light turns on, open the Omelette Maker and spray or coat the Cooking Surfaces with some olive oil. Pour eggs onto the Cooking Surface. Sprinkle the basil, mozzarella, and tomatoes over the whisked egg. Cover and lock the Latch. After 2 minutes, flip the Omelette Maker and let cook another minute. Check to see that the eggs are cooked through.

Remove with a heat-resistant nylon or silicone cooking utensil. Season with pepper and serve.



PIZZA POCKETS

INGREDIENTS:

2 cups all-purpose flour
1 tbsp baking powder
 $\frac{3}{4}$ cup milk
 $\frac{1}{2}$ tsp salt
 $\frac{1}{2}$ cup (1 stick) cold butter,
cut into small chunks
pepperoni and shredded
mozzarella cheese
(or preferred fillings)
marinara sauce, for dipping

DIRECTIONS:

Sift together the flour, baking powder, and salt. Add the butter and use a pastry cutter or fork to cut butter into the flour until it is a coarse crumb. Stir in the milk and mix until dough comes together. Roll your dough out on a floured surface so that it is $\frac{1}{2}$ inch thick. Cut out as many 4" circles as you can. Alternatively, you can use premade biscuit dough instead of making dough from scratch. If using premade biscuit dough, slice each premade biscuit in half so that they are about $\frac{1}{2}$ thick and then proceed with directions. Stretch dough circles so they resemble the shape of the Cooking Surfaces in the Omelette Maker. Top one dough circle with pepperonis and mozzarella cheese. Top with another dough circle and pinch the edges closed. Cook Pizza Pocket in the Omelette Maker until golden and crispy. Serve with a side of marinara sauce for dipping.



CHICKEN PANINI

INGREDIENTS:

1 boneless, skinless
chicken breast

6 strips jarred roasted
red pepper

¼ cup jarred pesto sauce

1 handful arugula, washed

4 slices Italian bread or
two mini ciabatta rolls,
cut lengthwise

1 tbsp butter

salt and pepper, to taste

DIRECTIONS:

Plug in the Omelette Maker and lightly grease both Cooking Surfaces. Season chicken breast with salt and pepper. Once preheated, place chicken breast inside the Omelette Maker. Close the Cover and cook until chicken is cooked through (about 10 minutes, depending on thickness).

Meanwhile, spread the pesto sauce on one side of each bread slice. When chicken is cooked through, slice in half and place chicken on 2 slices of bread. Top each half with arugula and roasted red peppers. Place the other slice of bread over the arugula and peppers and butter the outsides of the sandwich. Toast on a skillet, panini maker, or in the Omelette Maker until golden on the outside.





BACON, MUSHROOM & CHEDDAR OMELETTE

INGREDIENTS:

2 eggs
1 strip bacon, chopped
1 baby bella mushroom,
sliced thin

2 tbsp shredded
cheddar cheese
salt, to taste

DIRECTIONS:

Whisk the eggs in a bowl and salt to taste. Plug in the Omelette Maker. When the Green Indicator Light turns on, open the Omelette Maker and spray or coat the Cooking Surfaces with some olive oil. Add bacon and mushrooms to Cooking Surface and gently stir with a heat resistant nylon or silicone cooking utensil. Once the bacon is cooked through, pour eggs onto the Cooking Surface. Sprinkle with cheddar cheese, cover, and lock the Latch. After about 1-2 minutes, flip the Omelette Maker over and let cook an additional 1-2 minutes. Check to see that the eggs are cooked through. Remove and serve.



EGG WHITE OMELETTE

INGREDIENTS:

4 egg whites
1 tsp olive oil
¼ cup frozen spinach,
defrosted and drained

fresh parsley
grated romano cheese
(optional)
salt and pepper, to taste

DIRECTIONS:

Lightly grease Cooking Surfaces and then plug in the Omelette Maker. Whisk the egg whites in a bowl for about a minute. Stir in the spinach, parsley, and cheese. Season with salt and pepper. Once Omelette Maker is preheated, pour in the egg mixture. Close the Cover and let cook for 2 minutes. Flip and cook for an additional 1-2 minutes. Top with cheese and serve warm.



TRIPLE FUDGE BROWNIES

INGREDIENTS:

6 oz bittersweet chocolate	1 tsp salt
2 oz unsweetened chocolate	1 cup flour
$\frac{3}{4}$ cup (1 $\frac{1}{2}$ sticks) butter	1 cup semisweet chocolate chips
1 $\frac{1}{2}$ cups sugar	chopped walnuts or shredded coconut (optional)
2 tsp vanilla extract	
4 eggs	

DIRECTIONS:

Melt chocolate and butter together until smooth. In a separate bowl, whisk eggs. Stir in sugar and vanilla extract. Add egg mixture to chocolate and mix. Then, add salt and flour, stirring until just combined. Fold in chocolate chips and walnuts or coconut (optional).

Plug in Omelette Maker and lightly grease Cooking Surfaces. Once preheated, pour batter (about $\frac{1}{2}$ cup) into the lower Cooking Surface. Close the Cover and cook for 9-12 minutes, flipping halfway through.



MORE RECIPE IDEAS

Veggie Omelette

Mushroom
Spinach
Tomato
Green bell pepper

Greek Omelette

Feta cheese
Spinach
Onion
Red pepper

Tex-Mex Omelette

Sweet corn
Salsa
Cheddar cheese

Caprese Omelette

Tomato
Basil
Mozzarella

Ballpark Omelette

Sausage
Bell peppers

Brunch Omelette

Ham
Cheddar cheese

Springtime Omelette

Red onion
Asparagus
Tomato

Protein Omelette

Swiss cheese
Turkey

B.A.T. Omelette


Avocado
Bacon
Tomato

Veggie Melt Omelette

Broccoli
Cheddar cheese
Mushrooms
Tomatoes

We welcome and value all concerns and questions from our customers. Please do not hesitate to contact us for product support, warranty, and maintenance related questions directly at: **1 (800)-898-6970** from 7AM - 7PM PST, Monday - Friday, or by email at support@storebound.com.

Feel free to give us a call at **1 (800) 898-6970** during the hours below

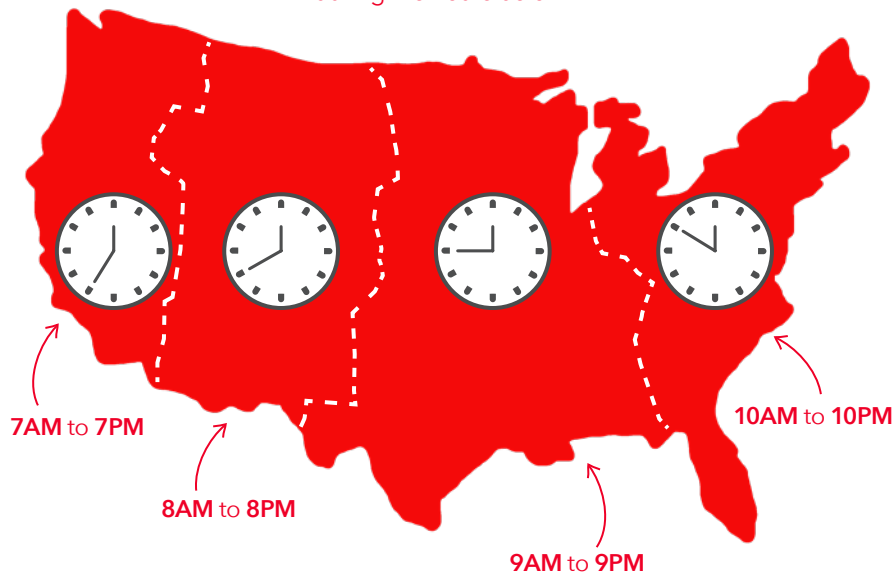

Hey **Hawaii!** You can reach our customer service team from **5AM to 5PM HAST**. And also, **Alaska**, feel free to reach out from **6AM - 6PM UTC**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@storebound.com. There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Dash Omelette Maker is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
 Power Rating 700W
 Stock#: DOM001_20171117_V2



1-800-898-6970 | @unprocessyourfood | bydash.com