







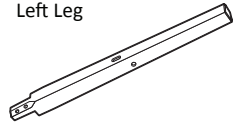
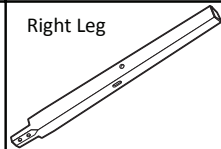
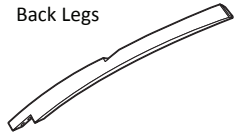
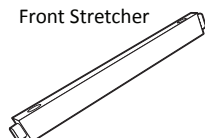




Upholstered Wood Swivel Stool

Counter Stool
Barstool

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. This product is designed for residential use only.

CODE	QTY	HARDWARE
1	4	M6 x 60mm JCBC Screws 
2	6	M6 x 45mm JCBC Screws 
3	10	13mm Spring Washers 
4	2	13mm Flat Washers 
5	8	20mm Flat Washers 
6	4	45mm Panhead Screw 
7	1	Allen Wrench 

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	1	Cushion Seat 	B	1	Left Leg 
C	1	Right Leg 	D	2	Back Legs 
E	1	Front Stretcher 	F	1	U Support 

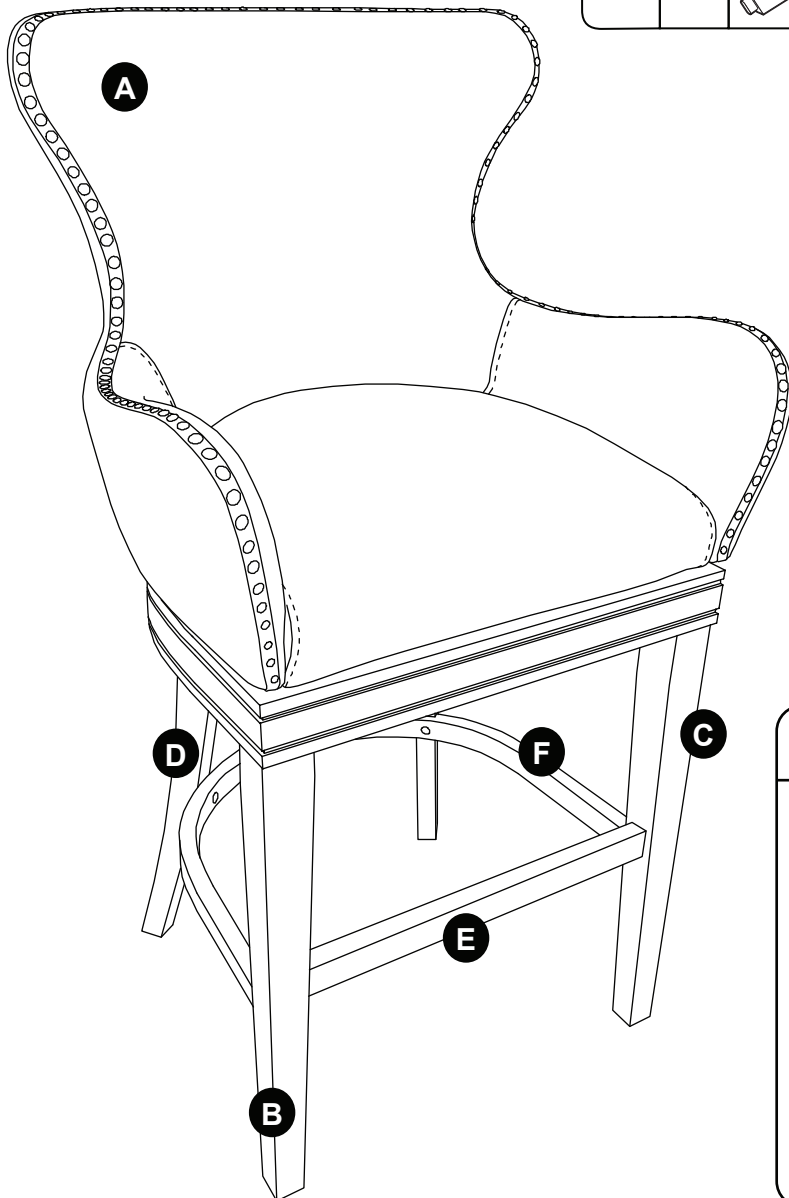


⚠ WARNING

- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
- Be careful if using power tools as they can over tighten screws and strip threads.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all hardware is securely tightened.

Upholstered Wood Swivel Stool

Counter Stool
Barstool

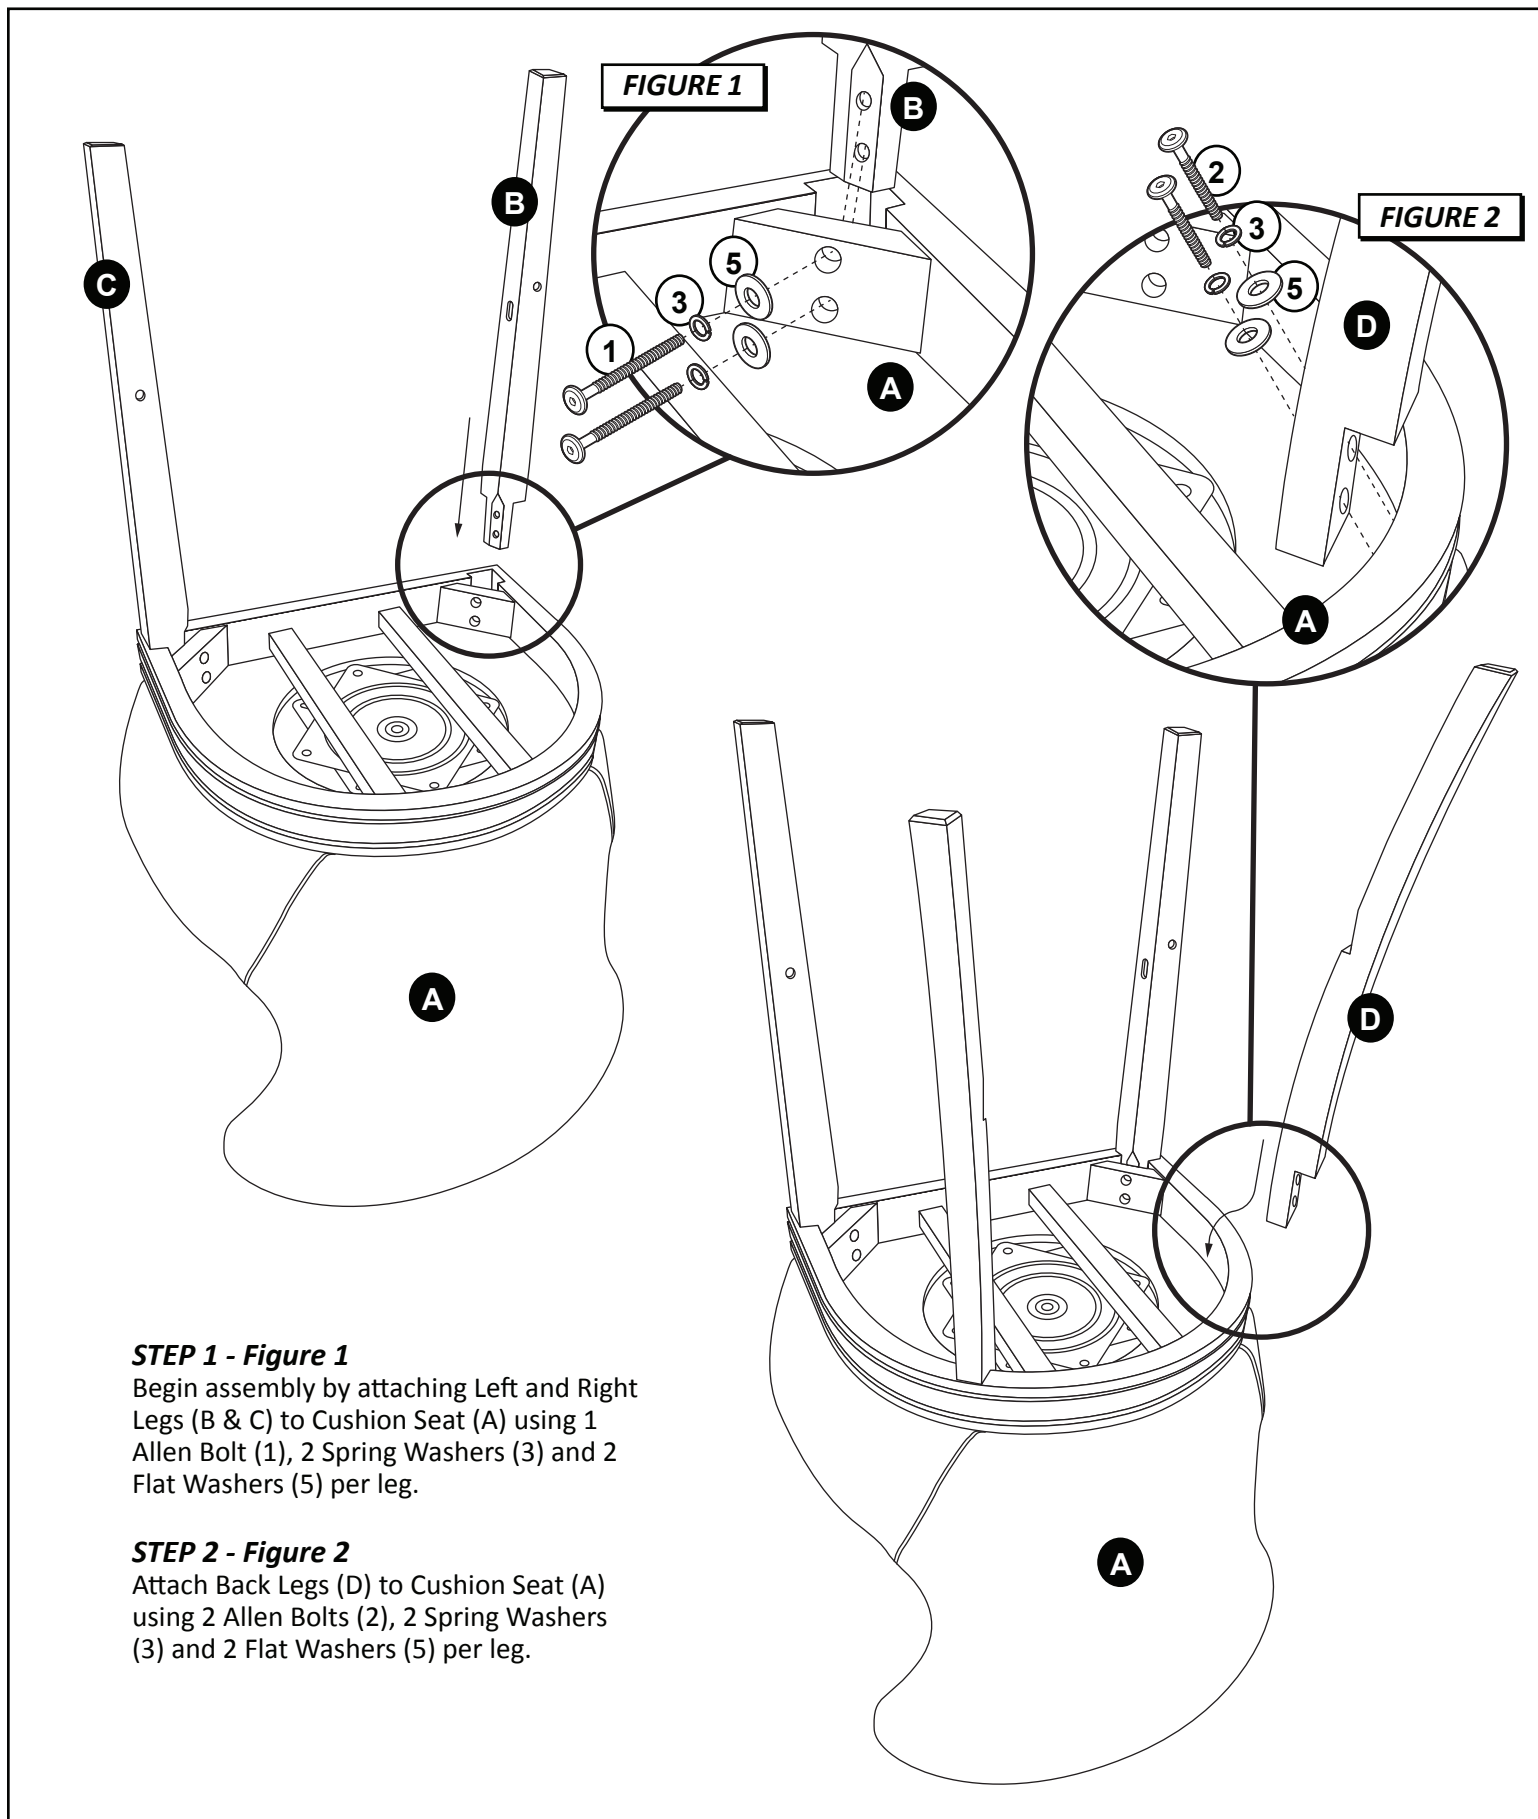

STEP 1 - Figure 1

Begin assembly by attaching Left and Right Legs (B & C) to Cushion Seat (A) using 1 Allen Bolt (1), 2 Spring Washers (3) and 2 Flat Washers (5) per leg.

STEP 2 - Figure 2

Attach Back Legs (D) to Cushion Seat (A) using 2 Allen Bolts (2), 2 Spring Washers (3) and 2 Flat Washers (5) per leg.

Upholstered Wood Swivel Stool

Counter Stool Model
Barstool

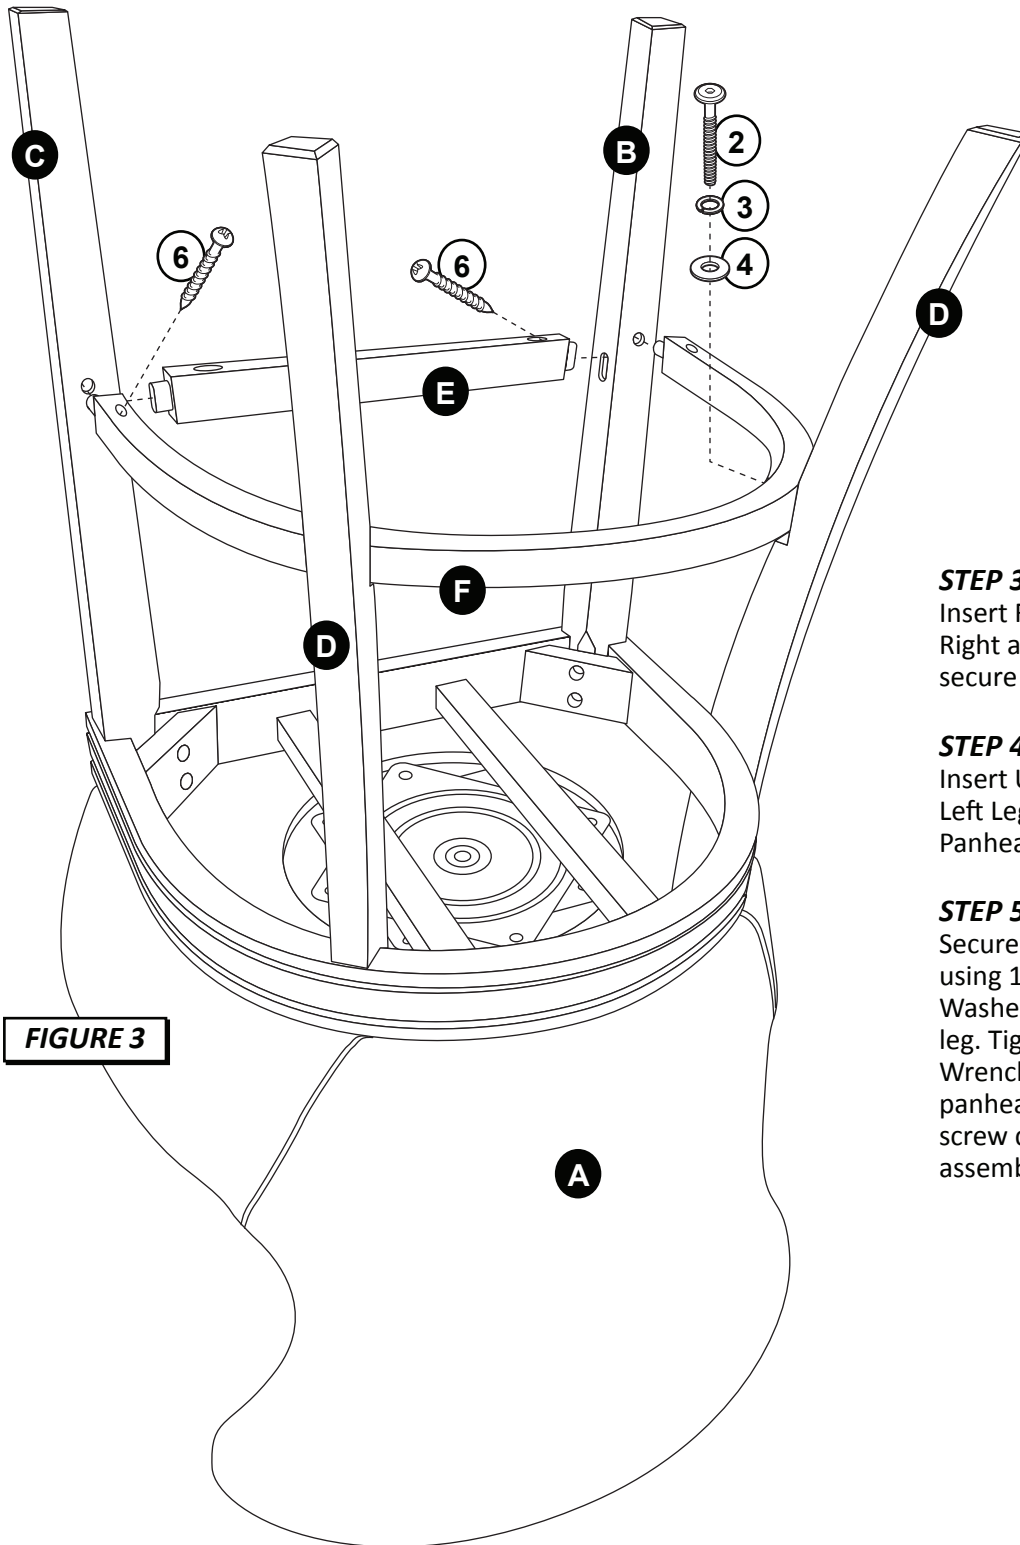


FIGURE 3

STEP 3 - Figure 3

Insert Front Stretcher (E) in between Right and Left Legs (B & C) and secure with 2 Panhead Screws (6).

STEP 4 - Figure 3

Insert U Support (F) in to Right and Left Legs (B & C) and secure with 2 Panhead Screws (6).

STEP 5 - Figure 3

Secure U Support (F) to Back Legs (D) using 1 Allen Bolt (2), 1 Spring Washer (3) and 1 Flat Washer (4) per leg. Tighten all bolts with Allen Wrench (7) provided. Tighten all panhead screws with Philips head screw driver (not included). The assembly is now complete.