


SUNCROWN

FURNITURE

F002010B57-M

6-PIECE WICKER SECTIONAL SOFA & CHAIR SET

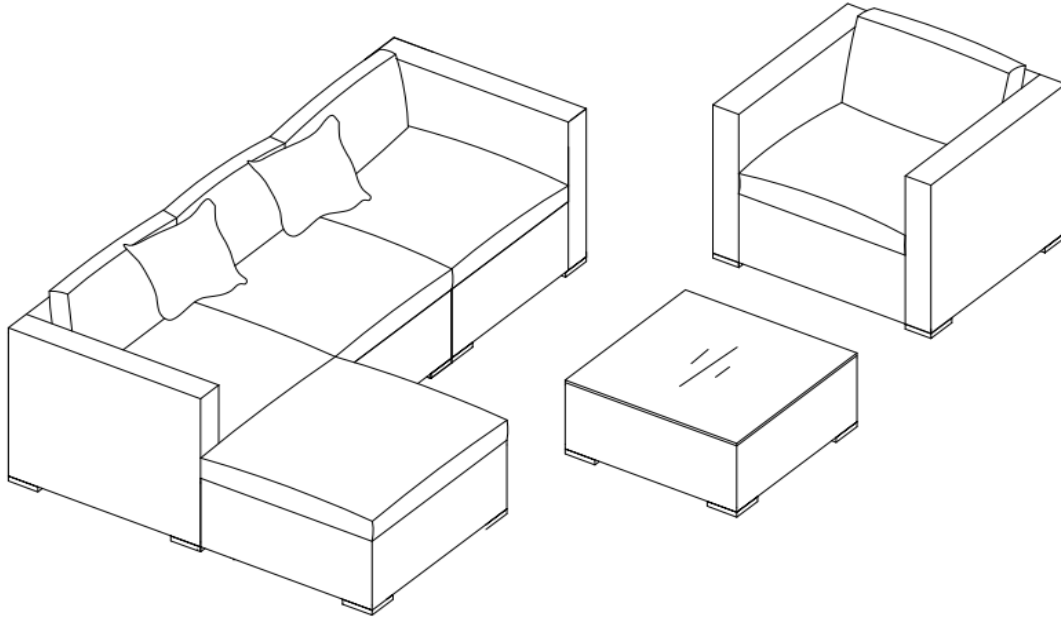

Thank you for choosing Suncrown!

Our goal is to provide high quality outdoor furniture
with outstanding customer service-all at an affordable
price.

Please let us know how we are doing!

Problems?




We will fix it immediately. Send us an email at
help@suncrownus.com. As a valued customer your satisfaction
is our #1 priority.

Happy?


Please leave us a review on Amazon!
You can make others happy too!

www.suncrownus.com

6-Piece Wicker Sectional Sofa & Chair Set

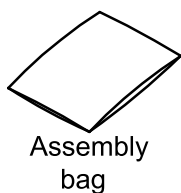
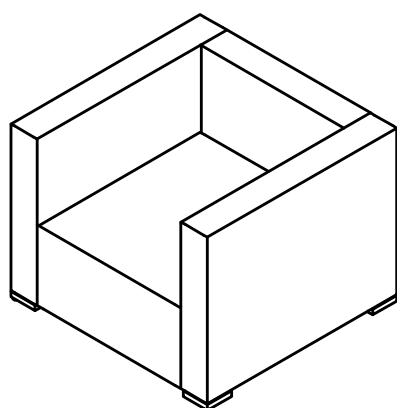
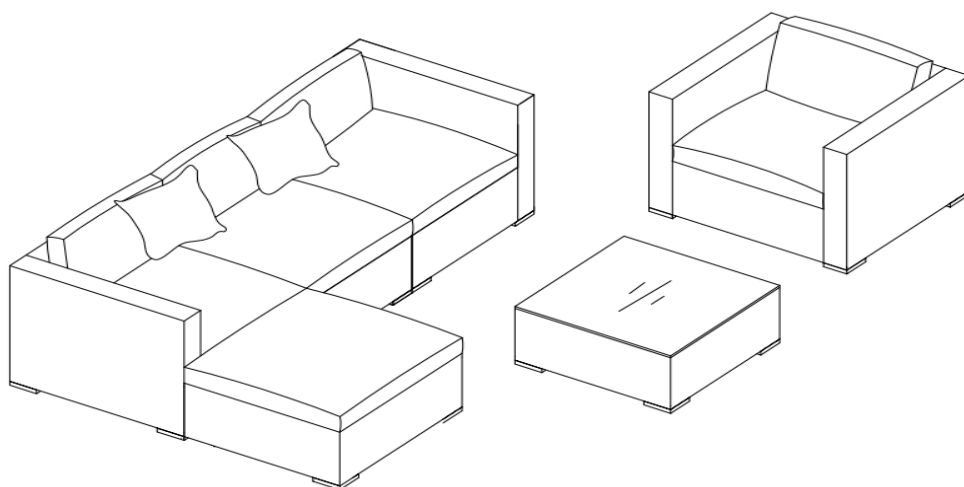


Assembly
bag


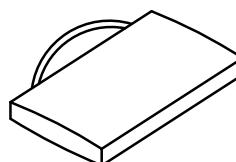


Fabric cover

CARTON 1/3

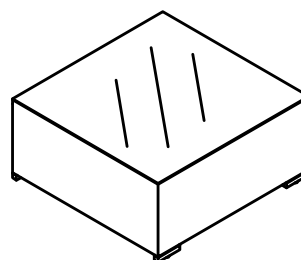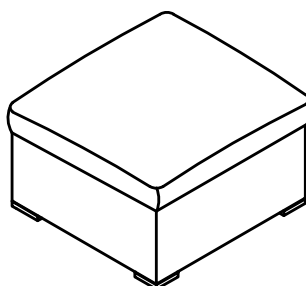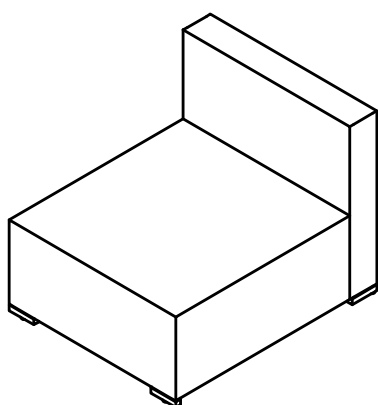






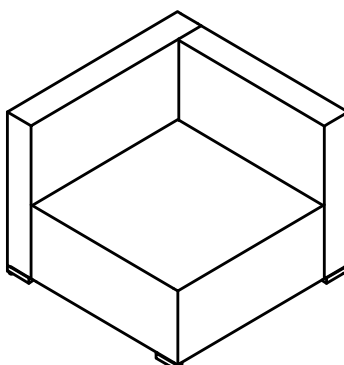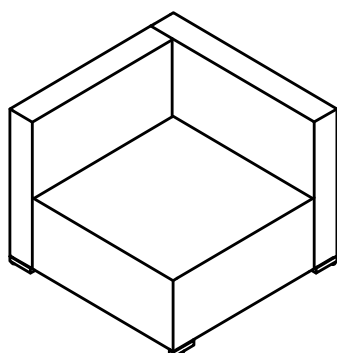


CARTON 2/3




CARTON 3/3

Right Corner Seat

Item no.	Reference Image	Description	Qty.
A		Right Arm Rest	1
B		Seat Back	1
C		Seat base	1
D		Side Panel	1
E		M6 x 35 Socket Head Cap Screw	11
F		Flat Washer	11
G		4-mm Allen Key	1

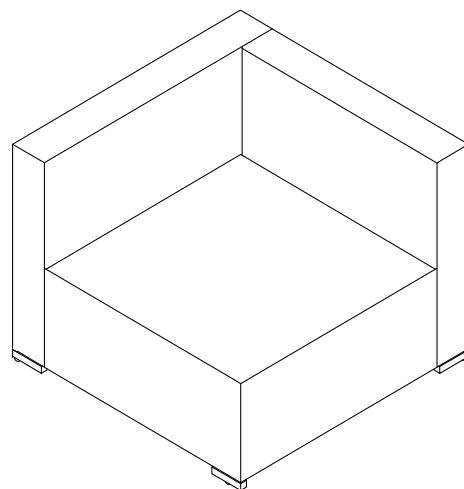

1

Attach the right arm rest (A) and the seat back (B) using M6 x 35 socket head cap screws (E) with flat washers (F). Do this in two places.

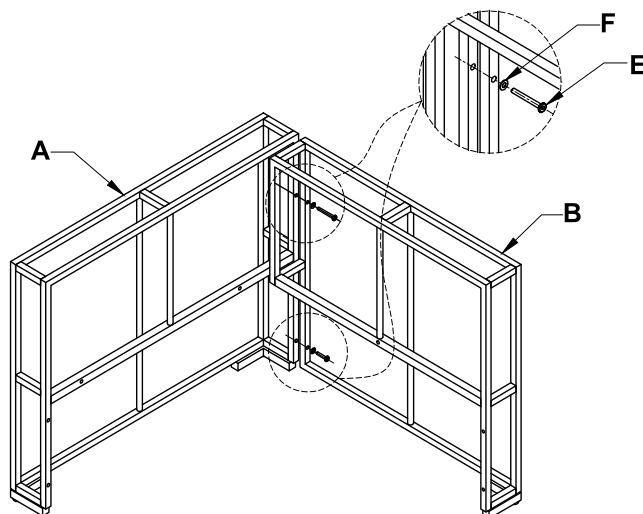
2


Flip the assembly upside down. Attach the seat base (C) to the assembly using M6 x 35 socket head cap screws (E) with flat washers (F). Do this in five places.

Attach the leveling foot (G) to the front left corner.

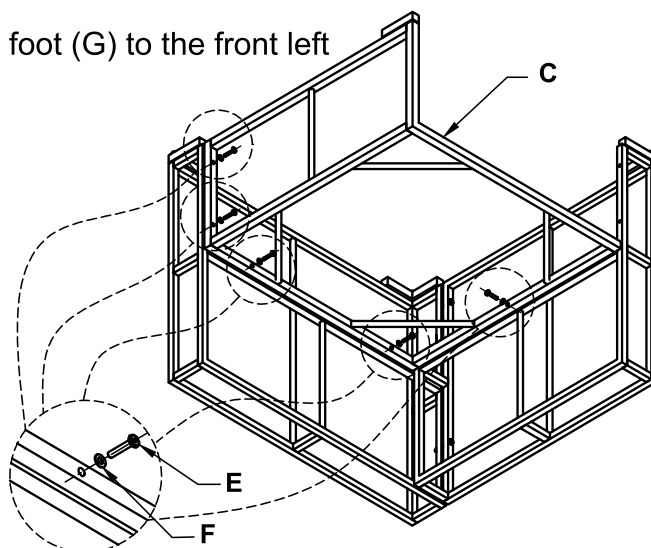


SUNCROWN
FURNITURE**F002010B57-M****Right Corner Seat****3**








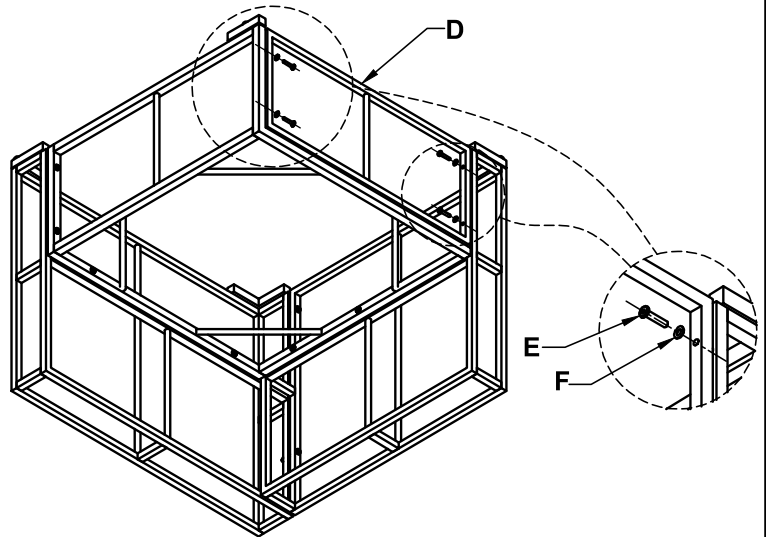With the assembly still flipped over, attach the side panel frame (D) using M6 x 35 socket head cap screws (E) with flat washers (F). Do this in four places.


**4**

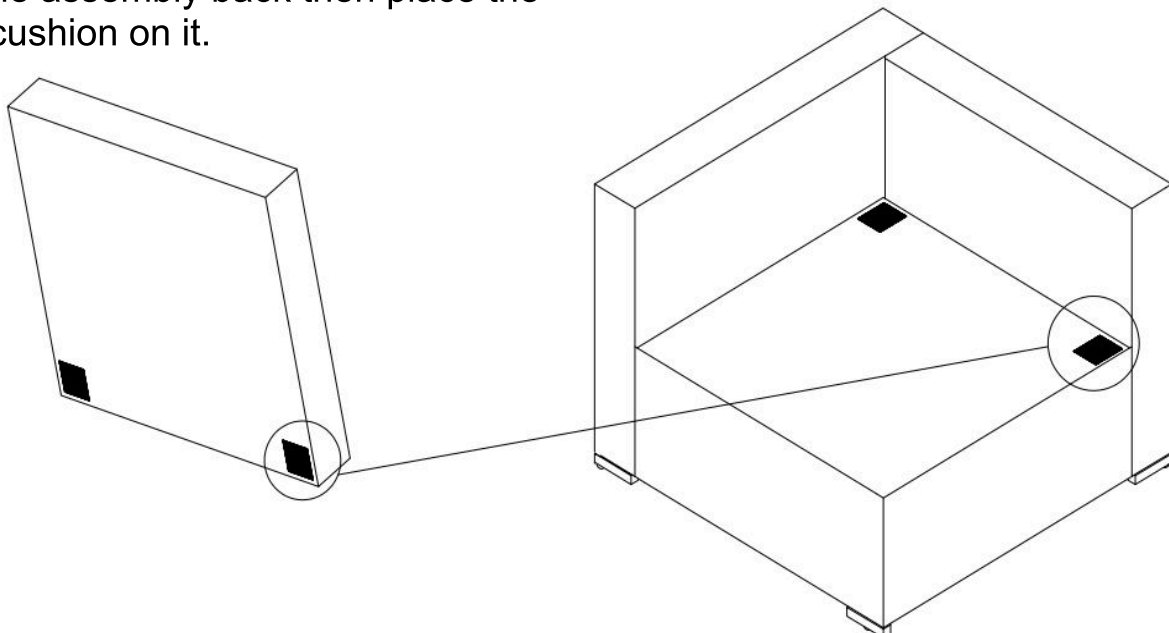Flip the assembly back then place the seat cushion on it.




F002010B57-M
Left Corner Seat

Item no.	Reference Image	Description	Qty.
A		Left Arm Rest	1
B		Seat Back	1
C		Seat base	1
D		Side Panel	1
E		M6 x 35 Socket Head Cap Screw	11
F		Flat Washer	11
G		4-mm Allen Key	1

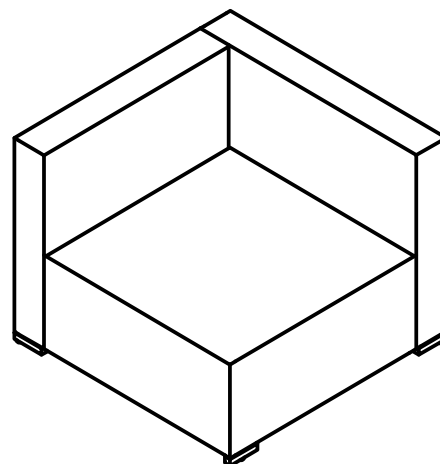

1

Attach the left arm rest (A) and the seat back (B) using M6 x 35 socket head cap screws (E) with flat washers (F). Do this in two places.

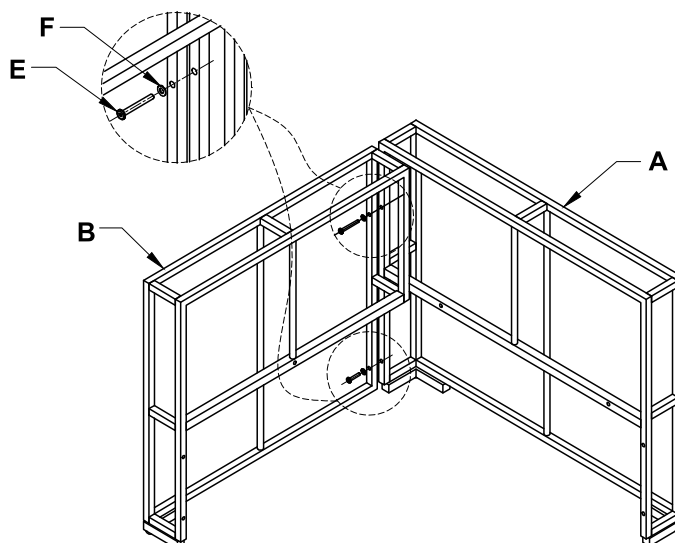
2


Flip the assembly upside down. Attach the seat base (C) to the assembly using M6 x 35 socket head cap screws (E) with flat washers (F). Do this in five places.

Attach the leveling foot (G) to the front right corner.

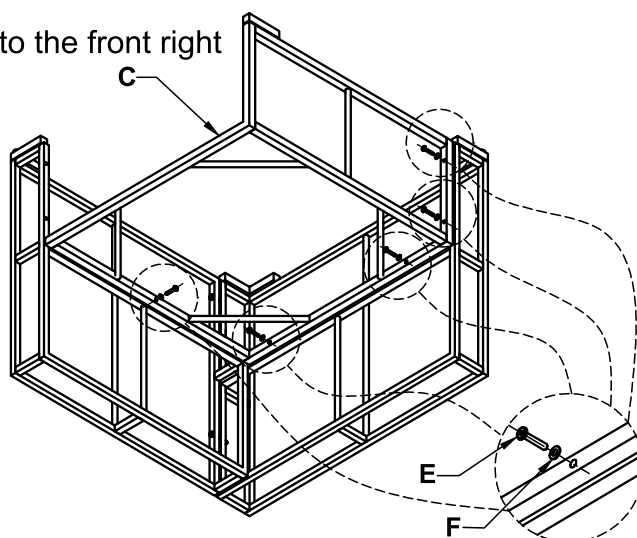


SUNCROWN
FURNITURE**F002010B57-M**
Left Corner Seat**3**

With the assembly still flipped over, attach the side panel frame (D) using M6 x 35 socket head cap screws (E) with flat washers (F). Do this in four places.

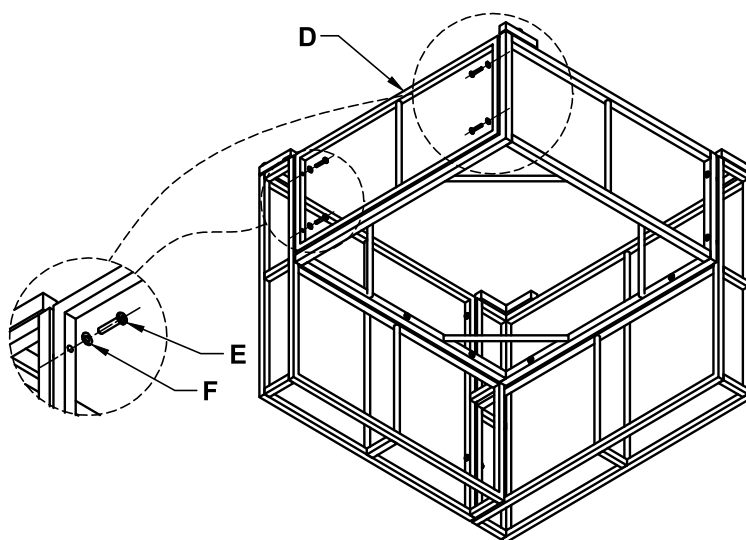


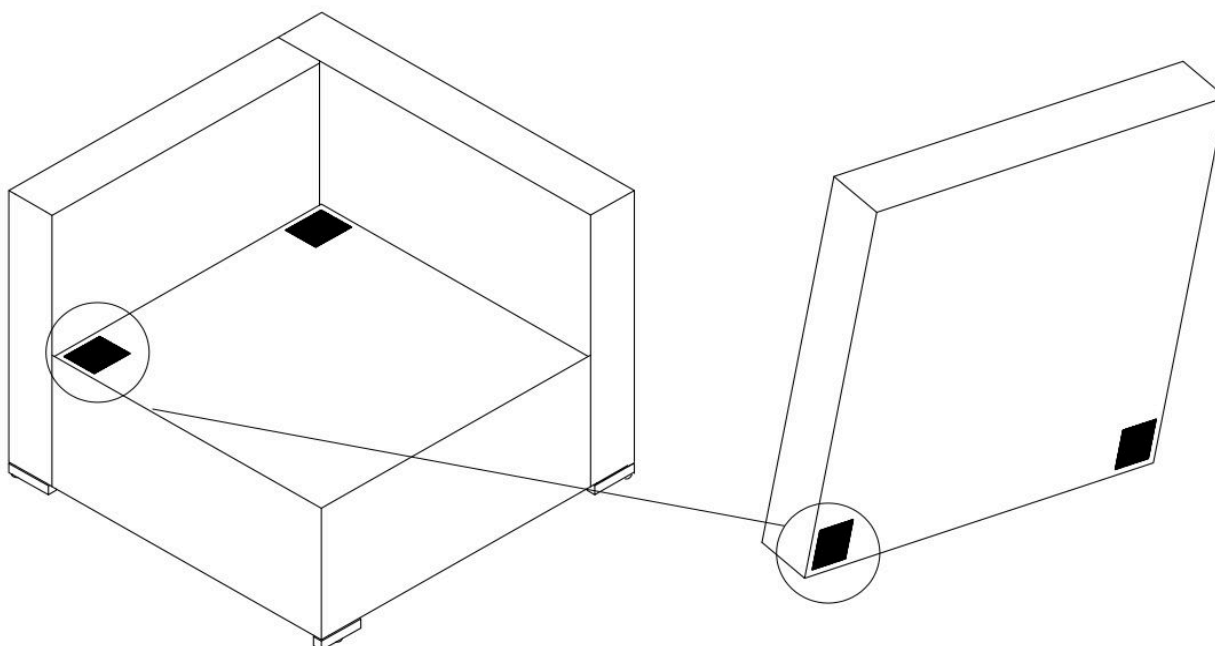


**4**


Flip the assembly back then place the seat cushion on it.



SUNCROWN
FURNITURE


F002010B57-M Center Seat

Item no.	Reference Image	Description	Qty.
A		Seat Back	1
B		Seat Base	1
C		Side Panel	1
D		M6 x 35 Socket Head Cap Screw	10
E		Flat Washer	10
F		4-mm Allen Key	1

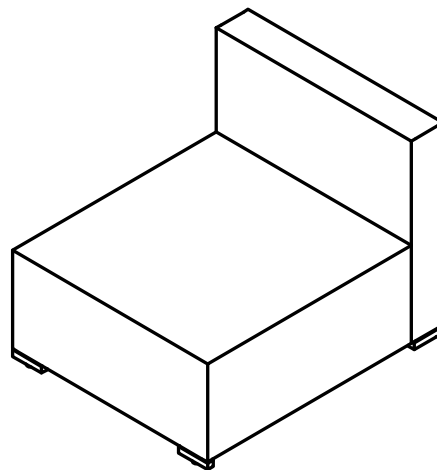


1

Flip the assembly upside down. Attach the seat back (A) and the seat base (B) using M6 x 35 socket head cap screws (D) with flat washers (E). Do this in two places.

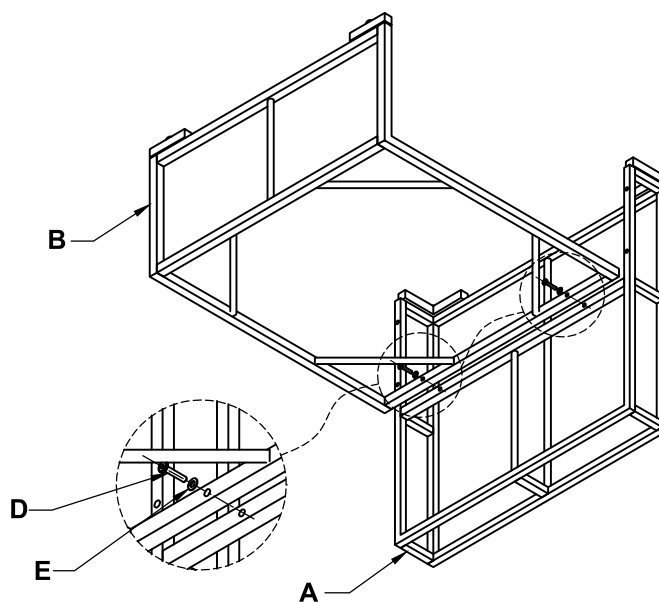


2

With the assembly still flipped over, attach the side panel (C) to the assembly using M6 x 35 socket head cap screws (D) with flat washers (E). Do this in eight places.

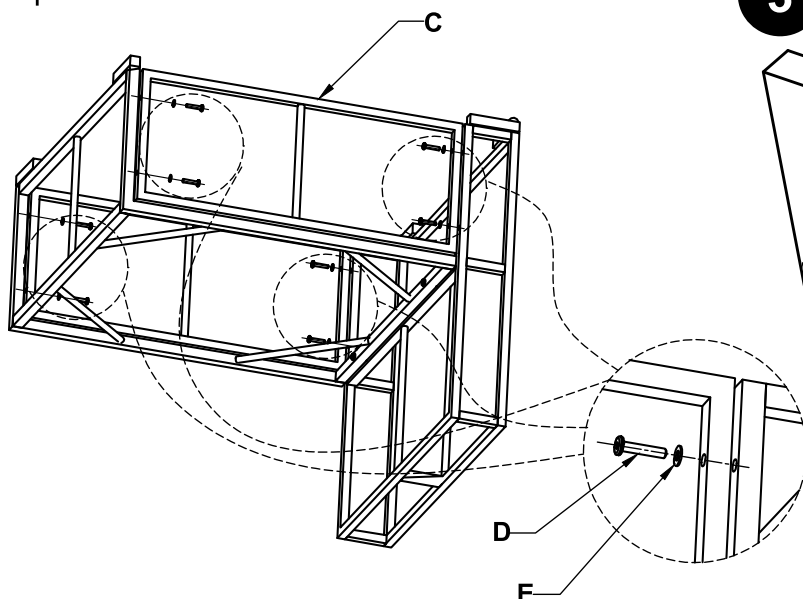

3


Flip the assembly back then place the seat cushion on it.

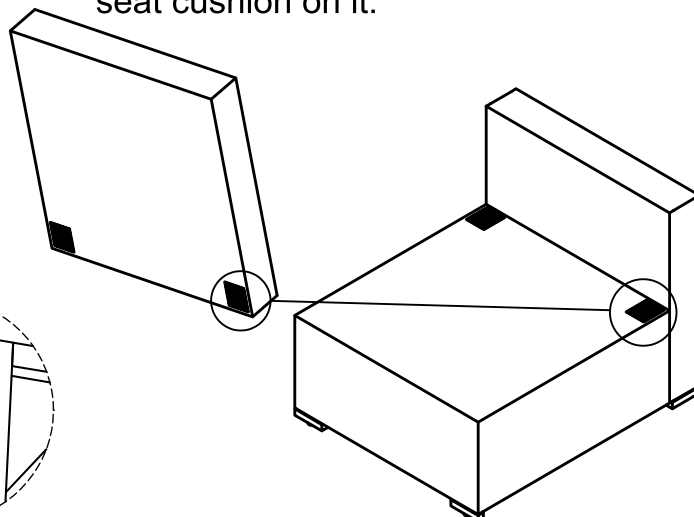

SUNCROWN
FURNITURE


F002010B57-M Coffee Table

Item no.	Reference Image	Description	Qty.
A		Side Panels	2
B		Front & Back Panel	2
C		Table Top	1
D		Glass Top	1
E		M6 x 35 Socket Head Cap Screw	12
F		Flat Washer	12
G		4-mm Allen Key	1

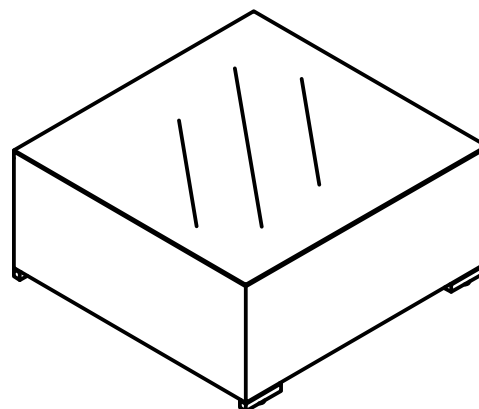

1

Attach all panels (A & B) using M6 x 30 socket head cap screws (E) with flat washers (F). Do this in eight places.


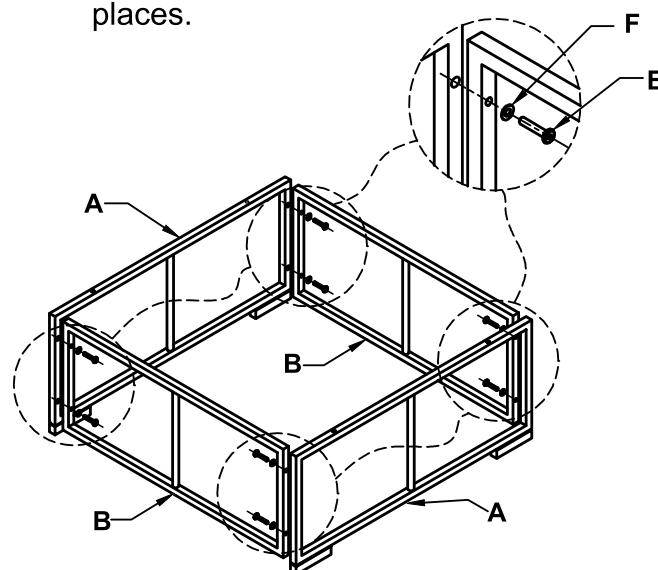


2

Flip the assembly upside down. Attach the table top (C) to the assembly using M6 x 30 socket head cap screws (E) with flat washers (F). Do this in four places.








3


Place the glass top (C) on the coffee table (A).

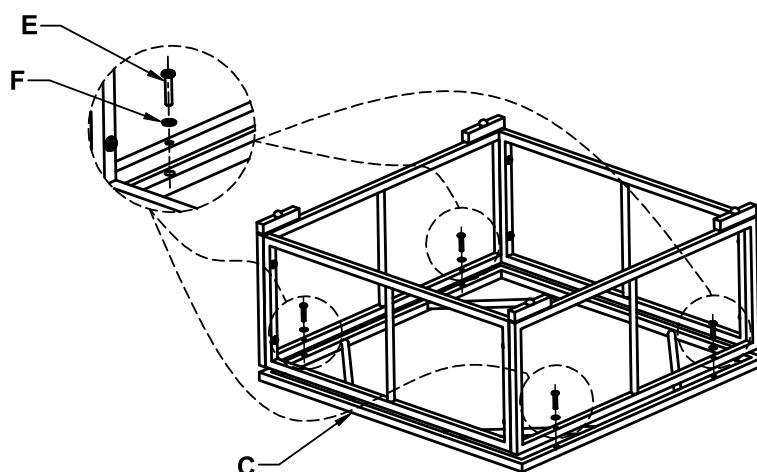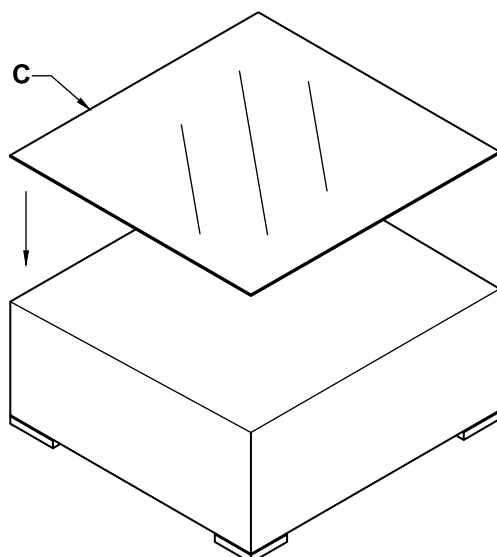

SUNCROWN
FURNITURE


F002010B57-M Ottoman

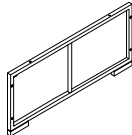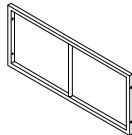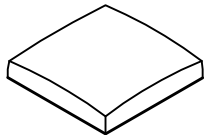Item no.	Reference Image	Description	Qty.
A		Side Panels	2
B		Front & Back Panel	2
C		Seat Base	1
D		Cushion	1
E		M6 x 35 Socket Head Cap Screw	12
F		Flat Washer	12
G		4-mm Allen Key	1

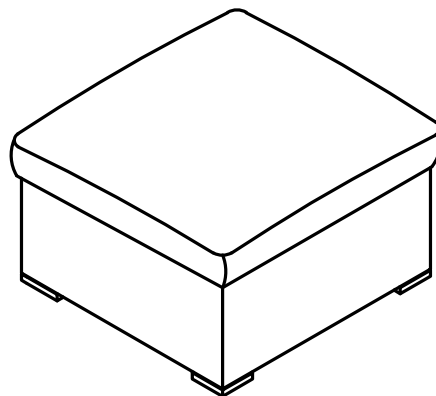


1

Attach all panels (A & B) using M6 x 30 socket head cap screws (E) with flat washers (F). Do this in eight places.

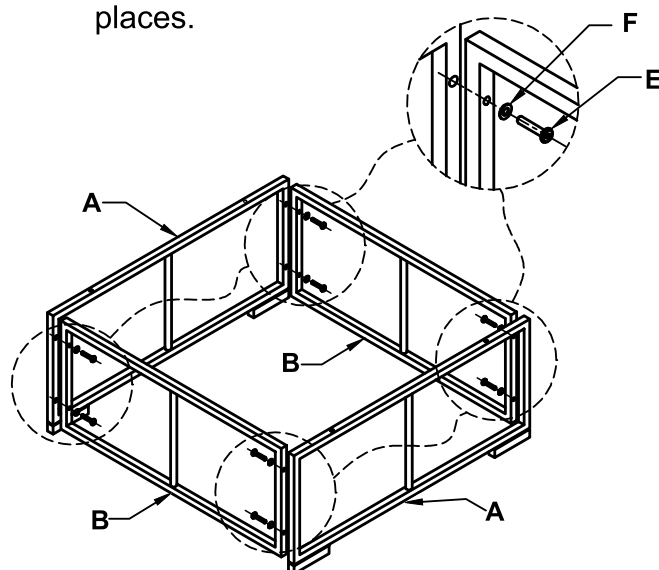


2

Flip the assembly upside down. Attach the seat base (C) to the assembly using M6 x 30 socket head cap screws (E) with flat washers (F). Do this in four places.

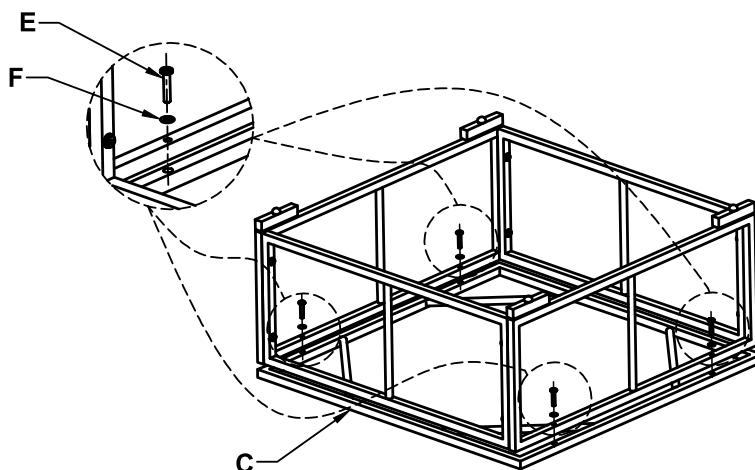








3

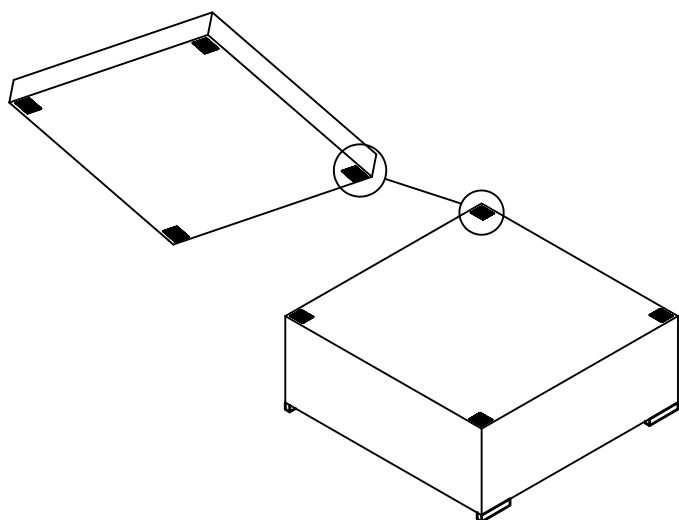
Flip the assembly back then place the seat cushion on it.



SUNCROWN
FURNITURE

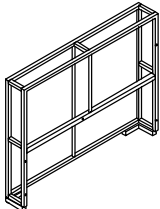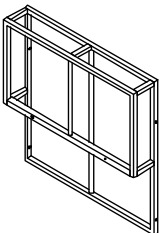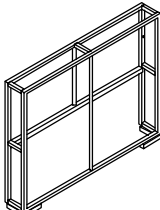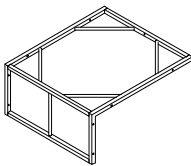
F002010B57-M Single Seat

Item no.	Reference Image	Description	Qty.
A		Right Arm Rest	1
B		Seat Back	1
C		Left Arm Rest	1
D		Seat Base	1
E		M6 x 35 Socket Head Cap Screw	13
F		Flat Washer	13
G		4-mm Allen Key	1

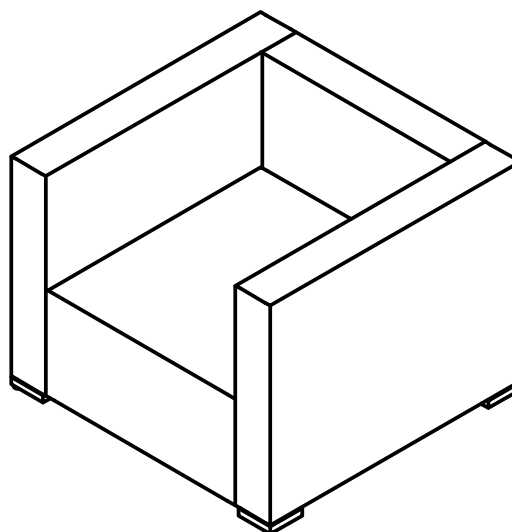


1

Attach the right arm rest (A) and the seat back (B) using M6 x 35 socket head cap screws (E) with flat washers (F). Do this in two places.

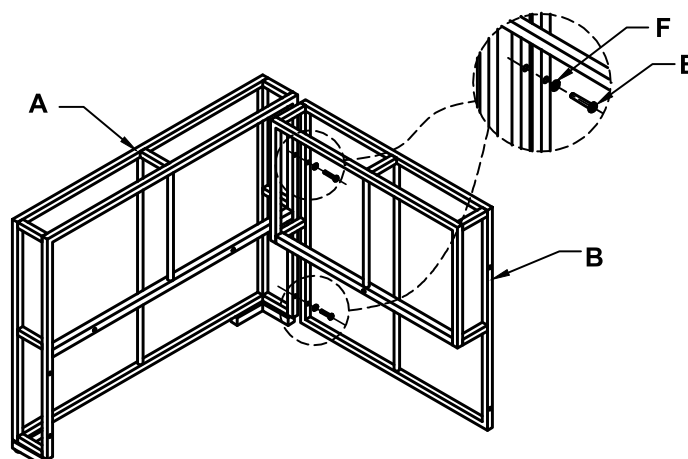


2

Flip the assembly upside down. Attach the left arm rest (C) to the assembly using M6 x 35 socket head cap screws (E) with flat washers (F). Do this in two places.

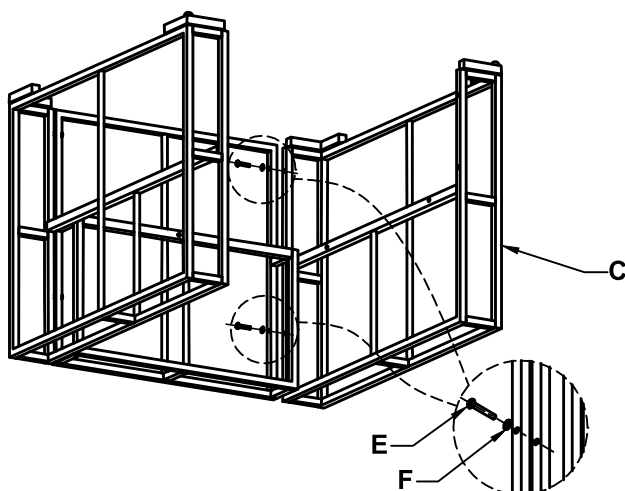


SUNCROWN
FURNITURE**F002010B57-M**
Single Seat**3**

With the assembly still flipped over, attach the seat base (D) using M6 x 35 socket head cap screws (E) with flat washers (F). Do this in nine places.

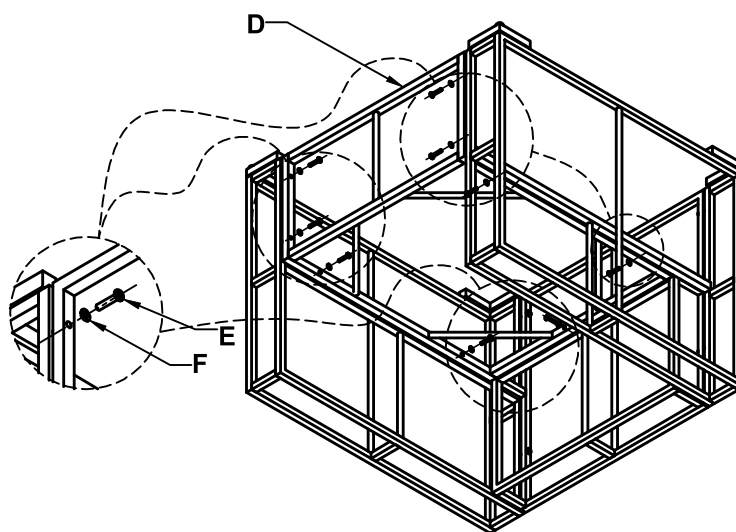**4**

Flip the assembly back then place the seat cushion on it.

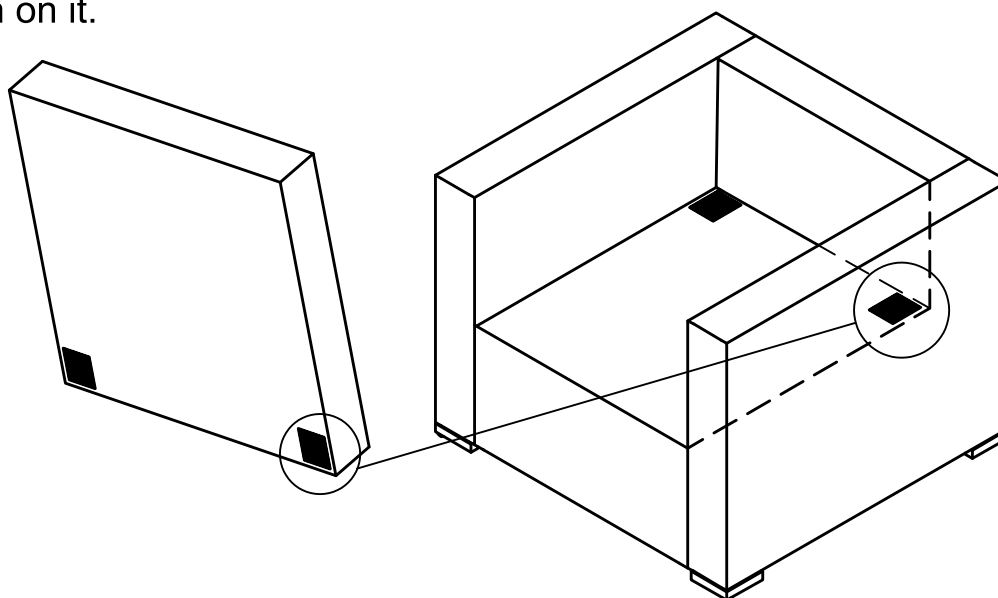

SUNCROWN
FURNITURE**F002010B57-M**
Finish Assembly**1**

After finishing assembly, use plastic clips to attach each sofa piece.

