

# CRYSTORAMA

1958

95 Cantiague Rock Road , Westbury NY 11590



ph: 516.931.9090 fax: 516.931.1254

info@crystorama.com, www.crystorama.com

## MODEL#: 5780-AB ASSEMBLY AND DRESSING INSTRUCTIONS



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

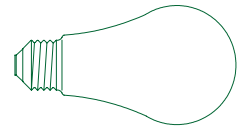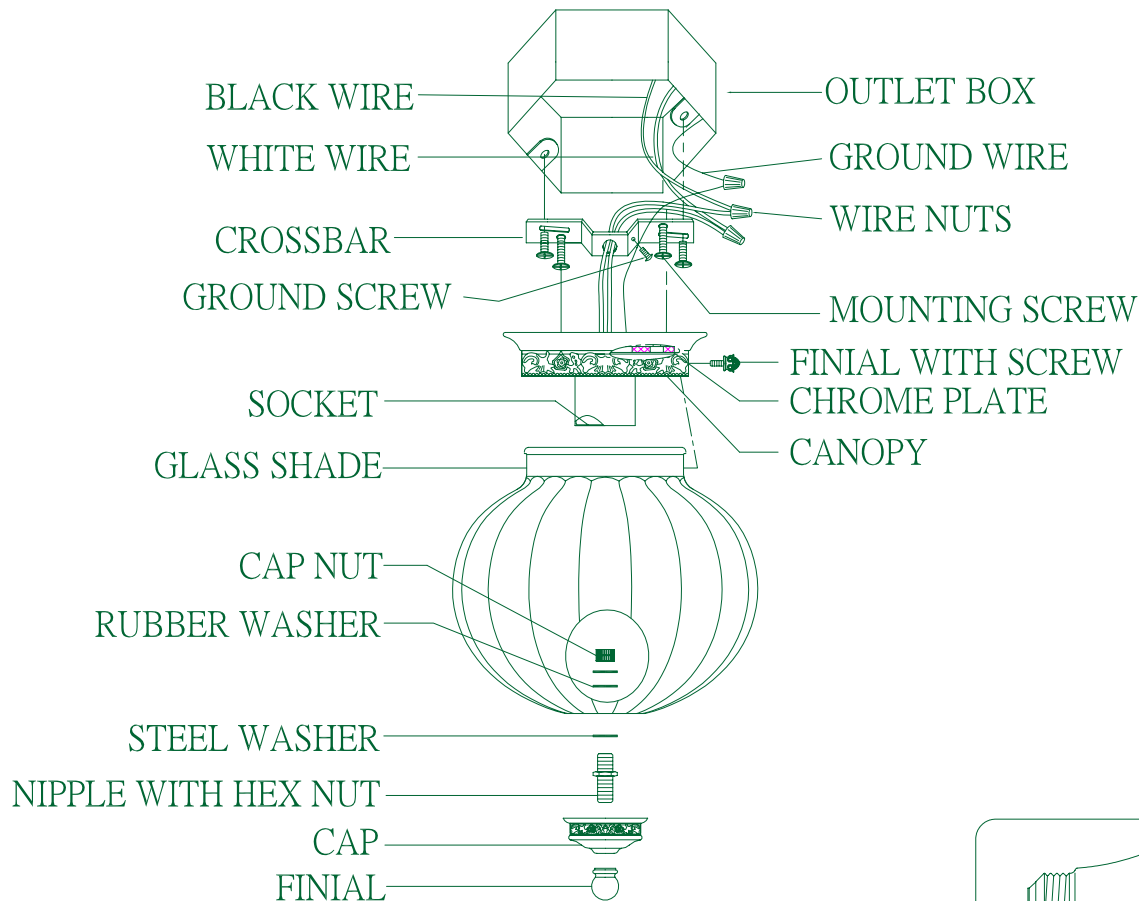

You will need 27-cand.Bulb  
60 Watts Recommended  
(Bulb not included)

## **FIXTURE ASSEMBLY, MOUNTING, AND WIRING INSTRUCTIONS:**

1. Carefully remove the fixture out of the carton and check that all parts are included, referring to the above illustration. Make sure that the electricity is turned off.
2. Thread 2 Mounting screws properly into the relevant mounting holes pre-drilled on the Cross bar;
3. Attach the Cross bar to outlet box using 2 Outlet box screws upwards;
4. Make wire connections:
  - Attach ground wire to house ground wire using a wire nut (or attach them to the cross bar with a green ground screw).
  - Attach ribbed wire from light to white wire from power source with a wire nut.
  - Attach smooth wire from light to black wire from power source with a wire nut.
5. Tuck the wire connection neatly into the outlet box;
6. Attach the fixture body to the ceiling and let the 2 mounting screws protrude through the 2 pre-drilled keyholes on the Canopy;
7. Turn power on at fuse or circuit box.
8. Install the bulb(not supplied)into socket;
9. Thread nipple with hex nut through steel washer,glass shade,rubber washer into cap nut,then slide the cap onto nipple with hex nut,and secure it with finial;
10. Put the glass shade onto canopy the firstly,then install the finial with screw through canopy on the glass shade;
11. The fixture is ready for lamping and installation!