
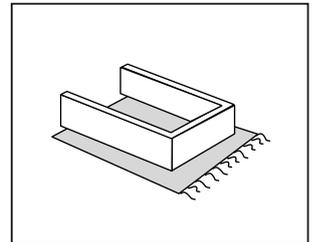
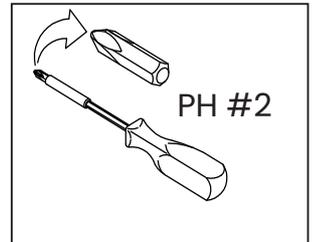
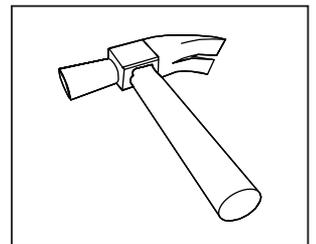
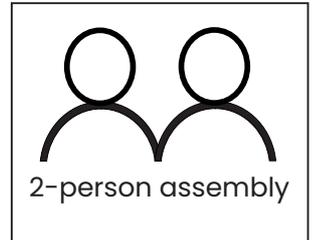


Assembly Instructions

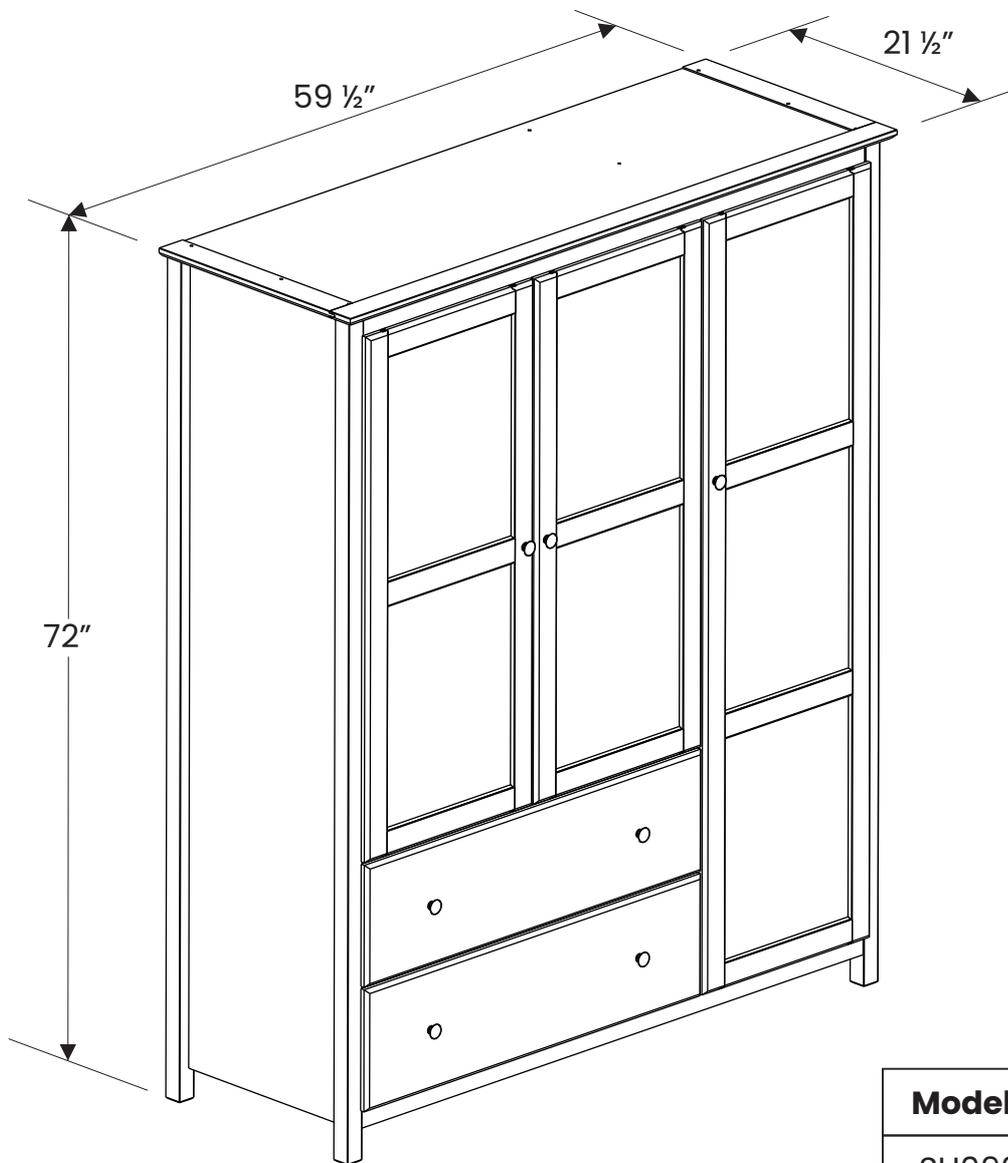

Model #	Finish
SH0901	Cherry
SH0902	Espresso
SH0904	Walnut

Thank you for choosing Grain Wood Furniture, it is an honor to be in your home!
 If you have any questions, feedback, or need replacement parts please contact us at:
grainwoodfurniture.com/help or support@grainwoodfurniture.com

Shaker Collection
3-Door Wardrobe




GrainWood
 FURNITURE.COM


PLEASE READ BELOW BEFORE BEGINNING ASSEMBLY


- Enlist help from a friend or family member as most items require two people for proper assembly.
- Choose a spacious, open area near where the piece will be located once assembled. It is easier to move parts than to relocate the furniture after it is fully assembled.
- Do not throw away packaging material until assembly is complete.
- Assemble the item on a soft surface, such as cardboard or an old blanket in order to protect the finish from possible dents or scratches.
- Lay out the parts in order and count them twice. In case any parts are missing or damaged, document the problem with pictures and contact support so we can make it right.
- Solid wood furniture may present imperfections such as wood knots, minor splits or cracks which are a natural aspect of the material. Whenever stability of the furniture is not compromised, we recommend customers perform cosmetic touch-ups with wax crayon fillers sold at all major hardware stores.
- It is best to use the tools provided in the box, such as a hex key, because they may be specially sized for the piece of furniture.
- We do not recommend the use of power drills as they can damage your furniture if not used correctly.
- Use a carpenter's square or hardcover book to check angles when assembling drawers and doors. If they are not at 90 degrees, they will not close properly.
- If you have any problems, we are here to help. Just go to grainwoodfurniture.com/help.
- See grainwoodfurniture.com/care-guide for suggestions that will help your furniture last for years.

Enjoy your 100% solid wood furniture!

HARDWARE LIST

A1	 4,0x30	44 + 2
A4	 3,5x14	8 + 1
A9	 3,5x16	55 + 2
A16	 4,0x40	9 + 1
A18	 4,0x25	4 + 1
A25	 M4x25	7 + 1
B31	 6,0x10	20 + 1
C2	 8,0x25	57 + 2
D4	 metal	16 + 1
D10		2
D21		4 + 1
D27		5
E17	 RIGHT Side 450mm - 17 3/4"	2
E17	 Drawer RIGHT 450mm - 17 3/4"	2
E18	 LEFT Side 450mm - 17 3/4"	2
E18	 Drawer LEFT 450mm - 17 3/4"	2

F10		9
G1	 10x10	45 + 2
G11		6
H4	 Pz04	7

ANTI-TIPPING RESTRAINT KIT		
A8	 3,0x20	2 + 1
F8		2
F9		1



ATTENTION


Before starting assembly please verify the hardware set is complete.

For missing hardware please contact us at grainwoodfurniture.com/help

WARNING:

CHOKING HAZARD


Small parts, not for children.
To be assembled by an adult.

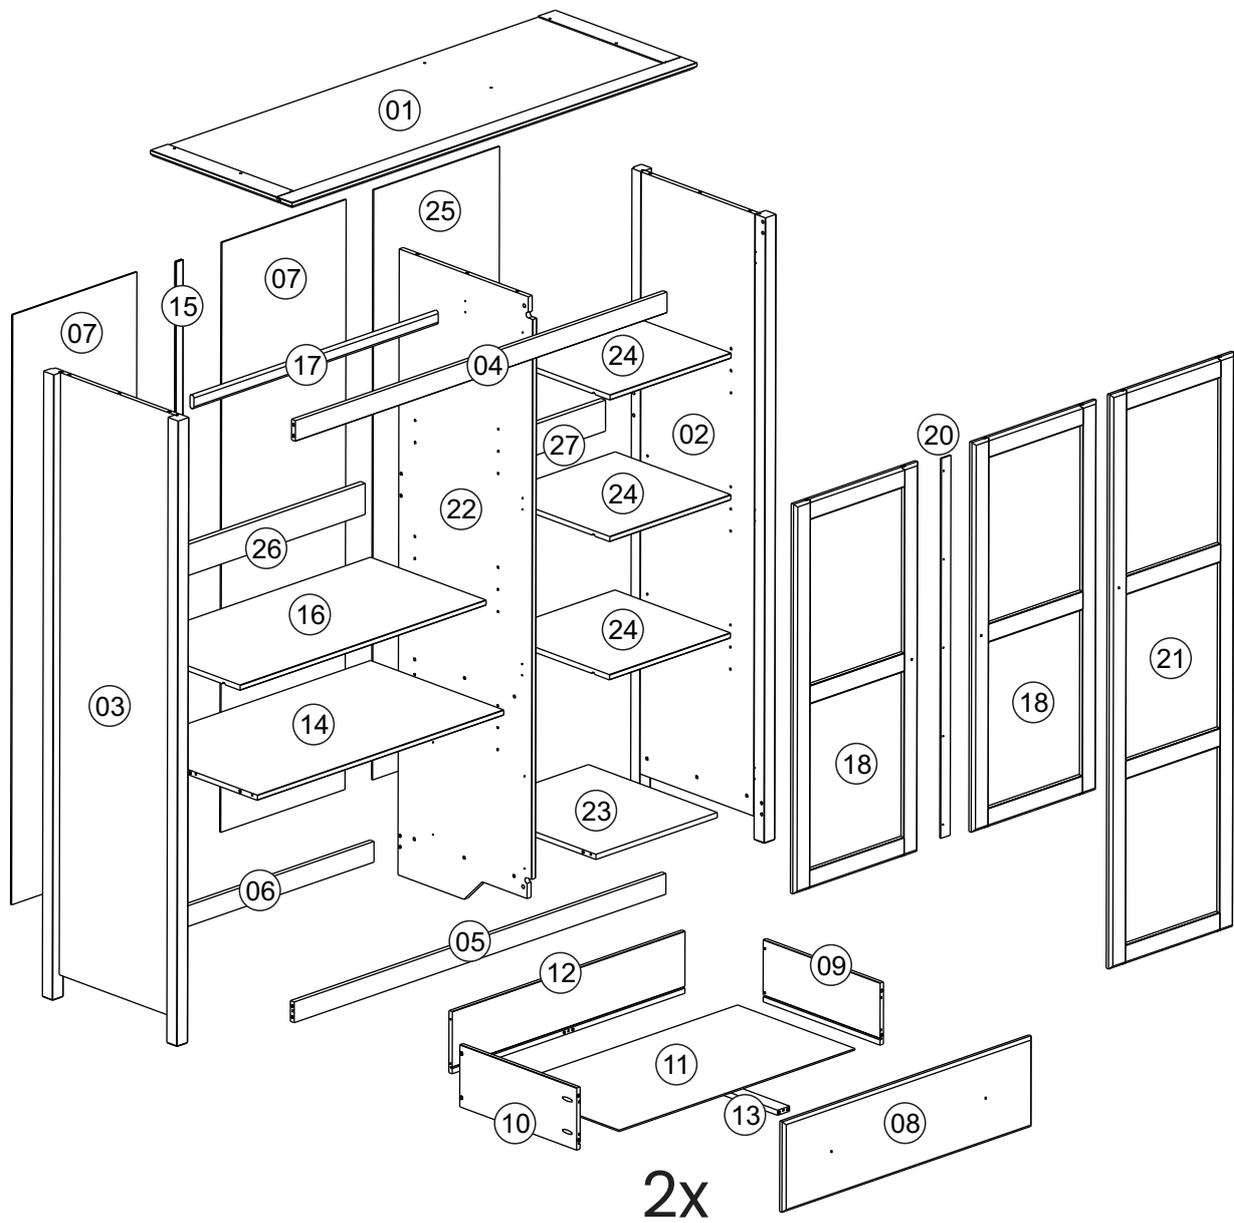

BOX A - 1 of 2		
Part #	Description	Qty.
01	Top	1
02	Right side	1
03	Left side	1
04	Upper crosspiece	1
05	Lower crosspiece	1
07	Back panel	2
15	Profile "H"	1
20	Door stop	1
21	Right door - tall	1
22	Division	1
25	Back panel	1

BOX B - 2 of 2		
Part #	Description	Qty.
06	Rear crosspiece	1
08	Drawer front	2
09	Drawer right side	2
10	Drawer left side	2
11	Drawer bottom	2
12	Drawer back	2
13	Drawer bottom support	2
14	Fixed shelf	1
16	Wide shelf (adjustable)	1
17	Hanging bar	1
18	Door - short	2
23	Base short	1
24	Narrow shelf (adjustable)	3
26	Long stabilizer	1
27	Short stabilizer	1
HW	Hardware	1

1) Tip:
Use a hammer in case dowels
are hard to install by hand.

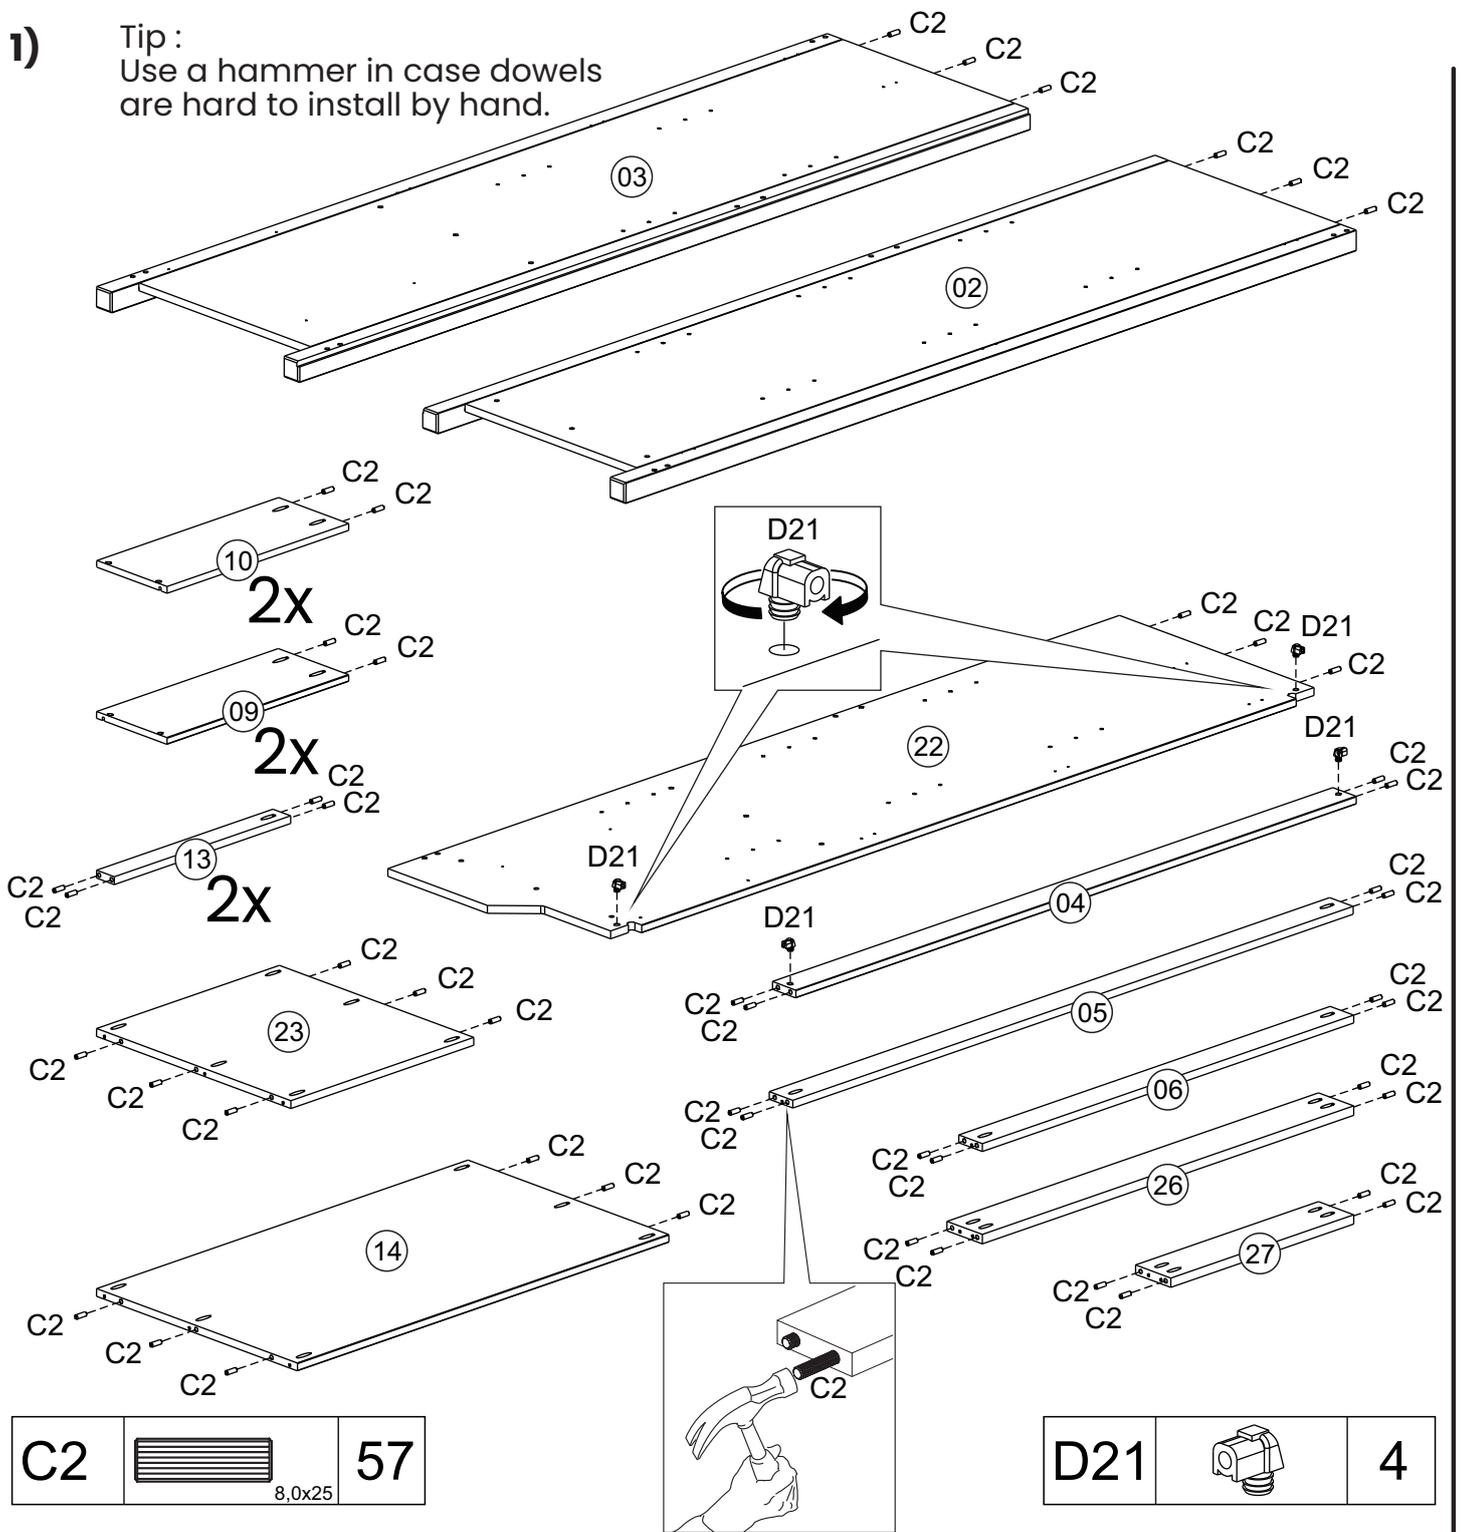


C2		57
	8,0x25	


D21		4
-----	---	---

ATTENTION PLEASE!

Attach hinge (F10) to hinge plate if it comes separated.
Push hinge against plate until it clicks.

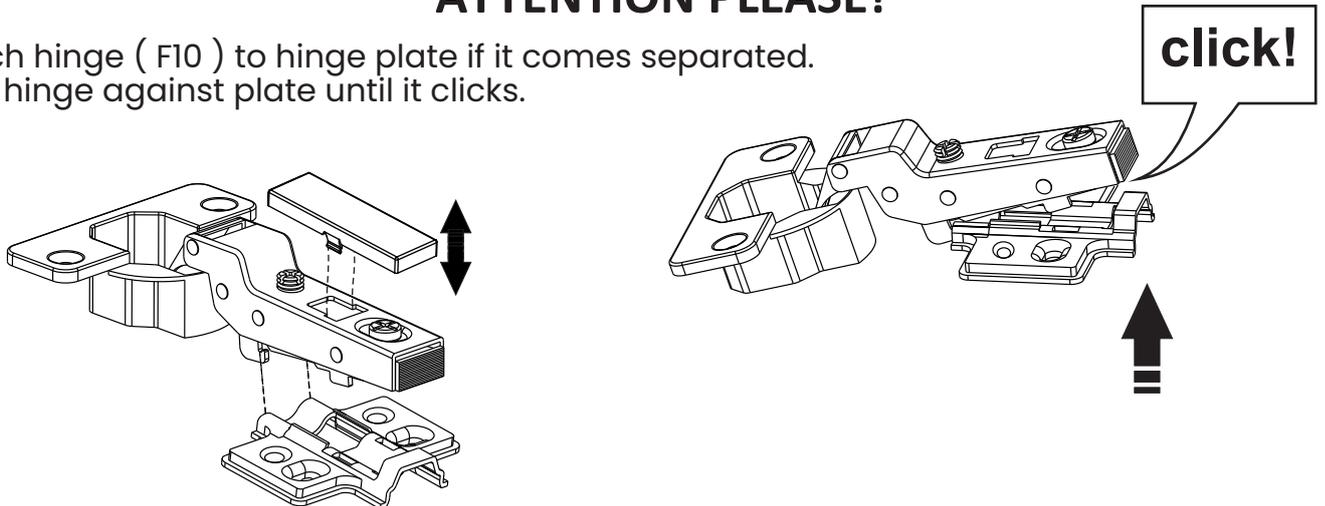


2)

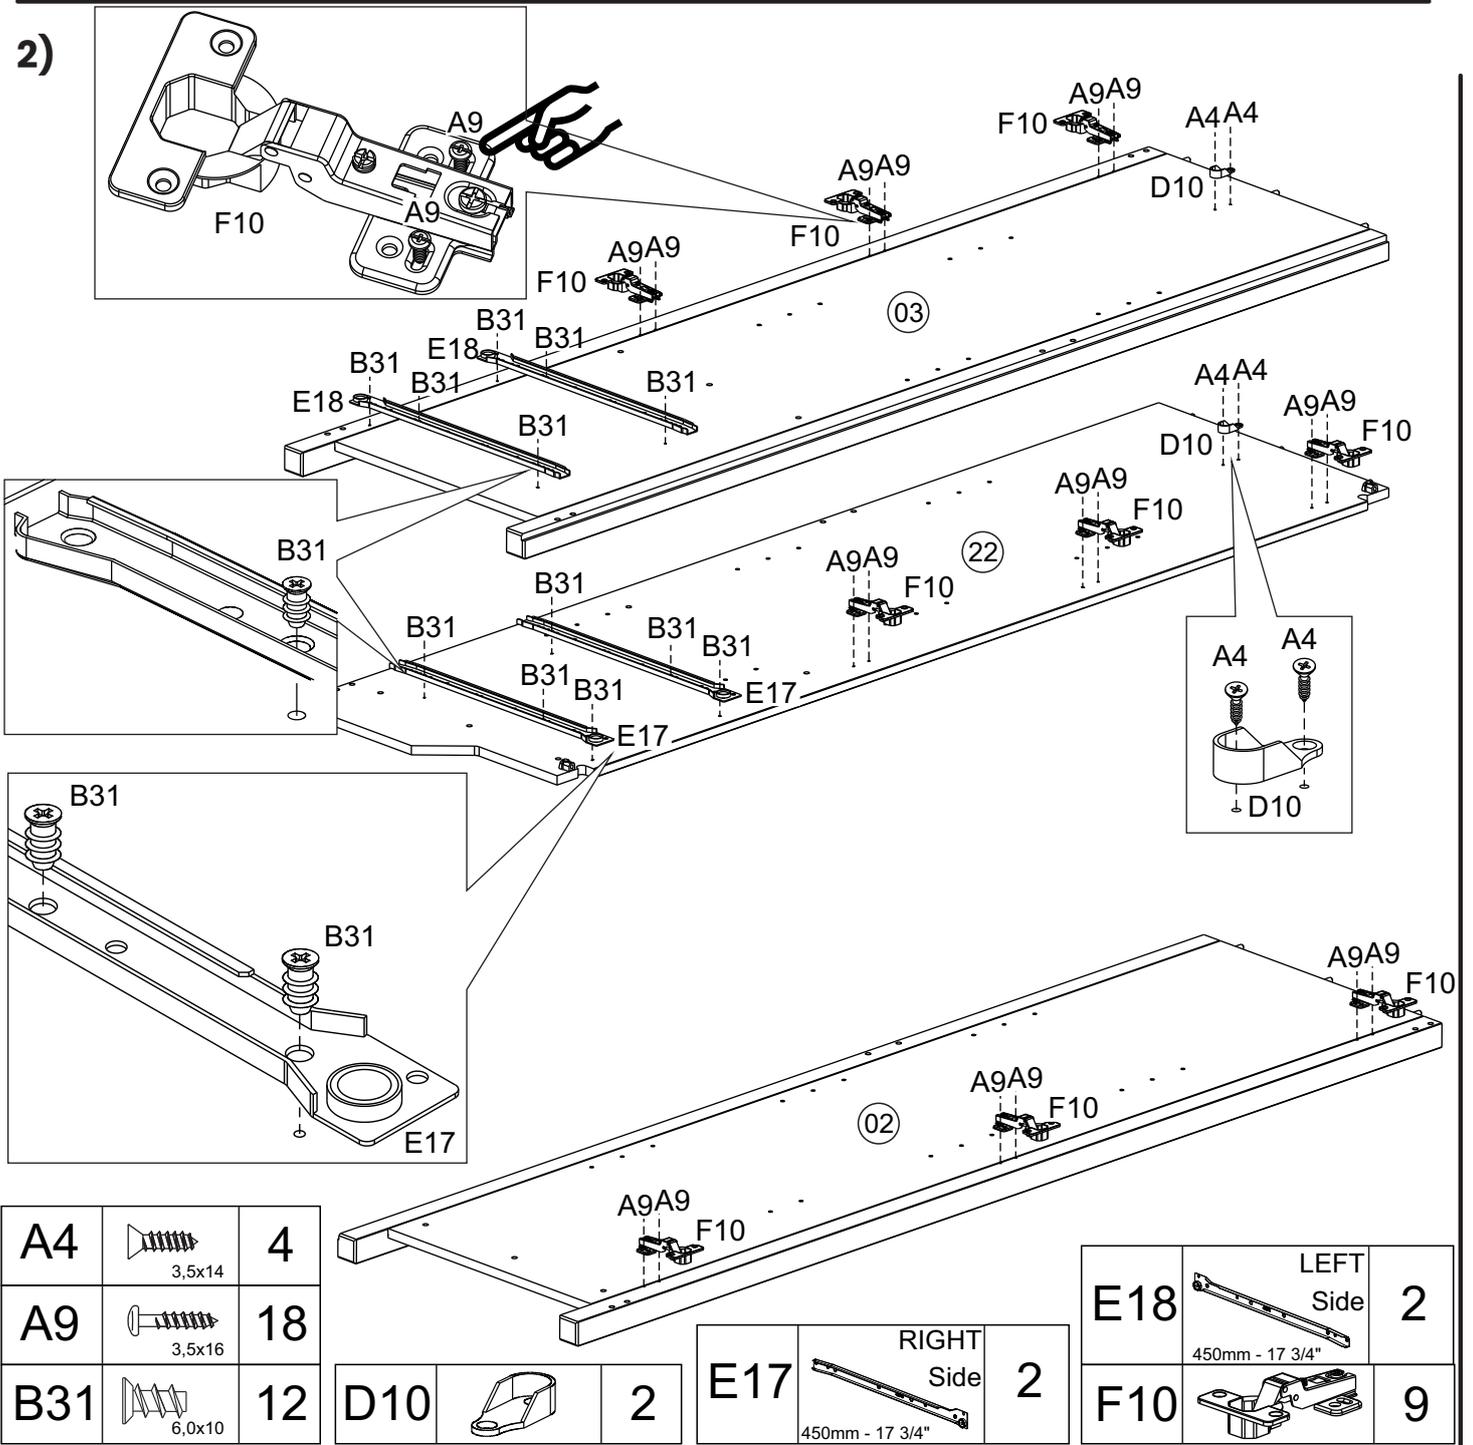


A4	 3,5x14	4
A9	 3,5x16	18
B31	 6,0x10	12

D10		2
-----	---	---


E17	 450mm - 17 3/4"	2
-----	--	---

E18	 450mm - 17 3/4"	2
F10		9



3)

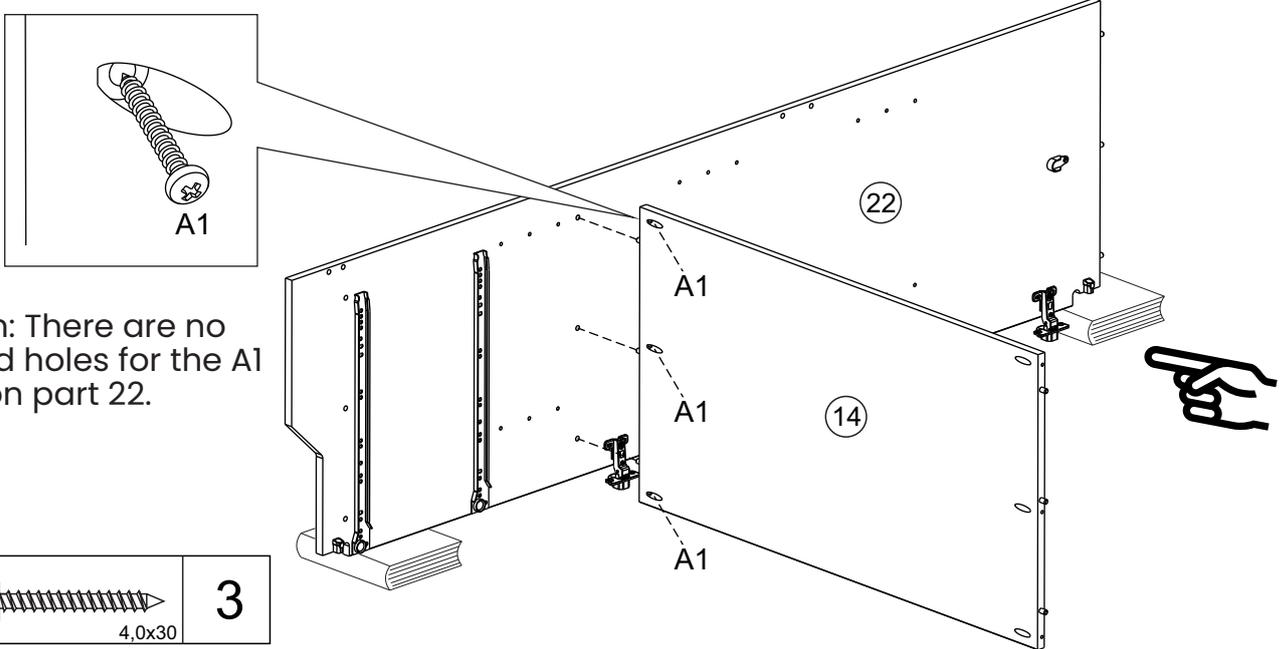



Attention: There are no predrilled holes for the A1 screws on part 22.

A1	 4,0x30	3
----	--	---

4)

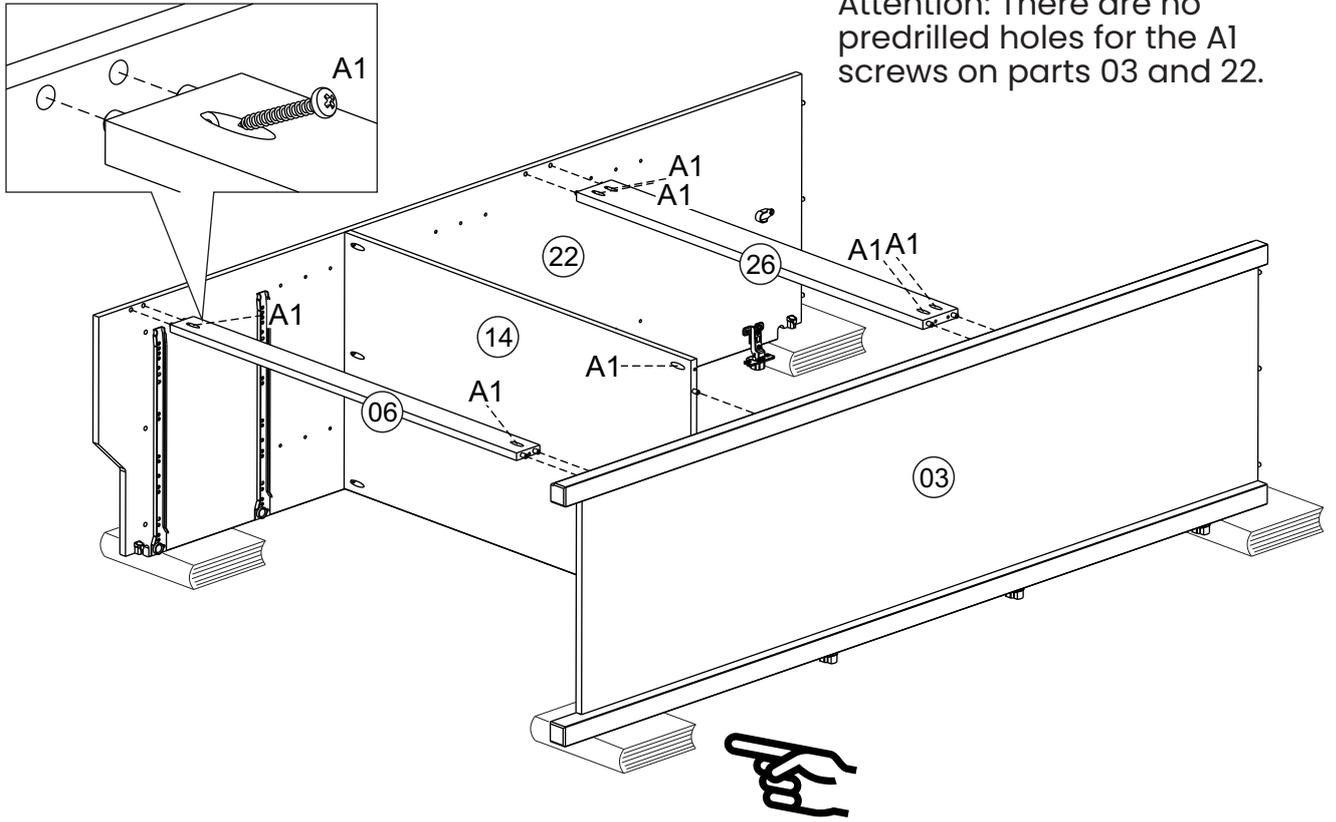




5)

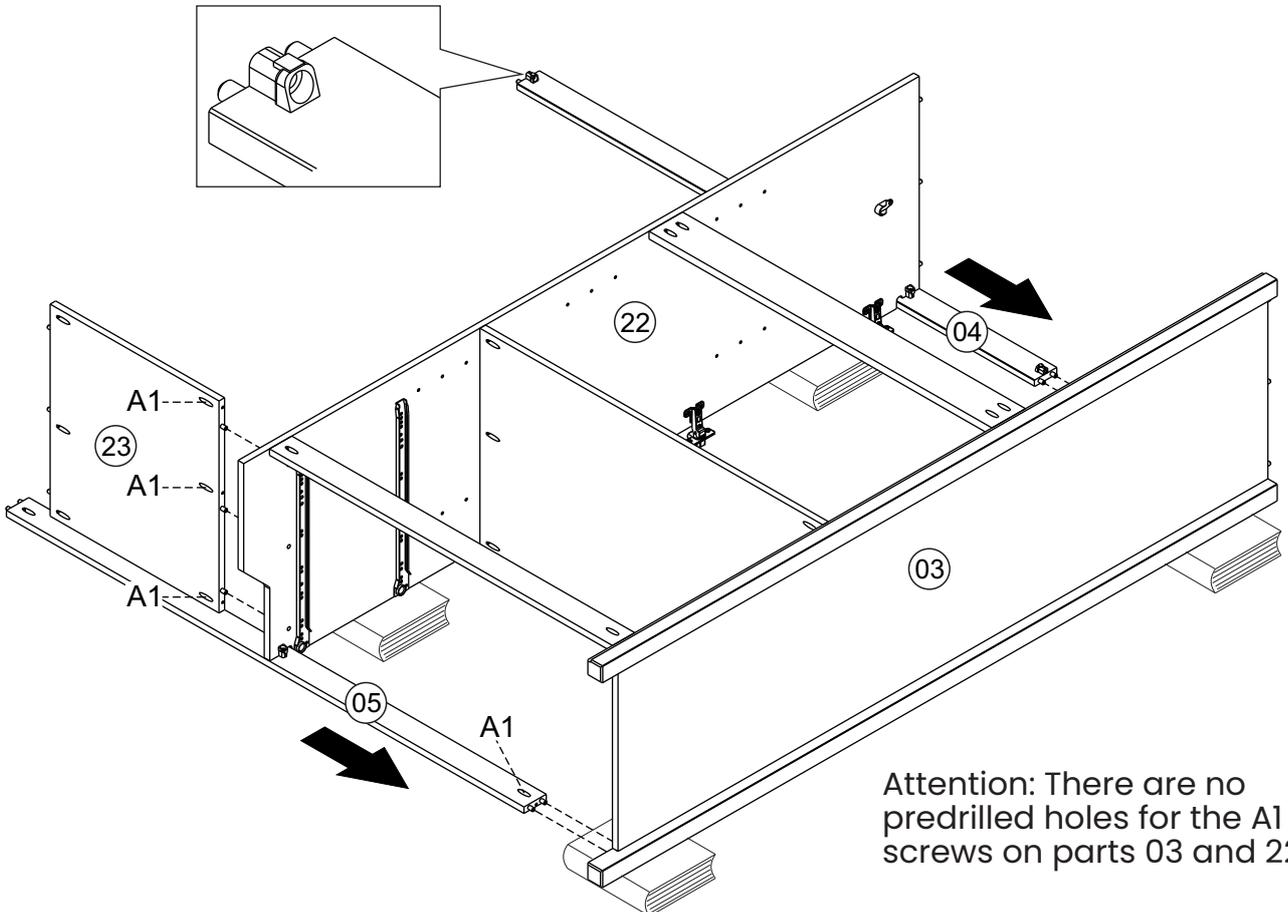


6)

Attention: There are no predrilled holes for the A1 screws on parts 02 and 22.



Attention: There are no predrilled holes for the A18 screws on parts 02 and 03.

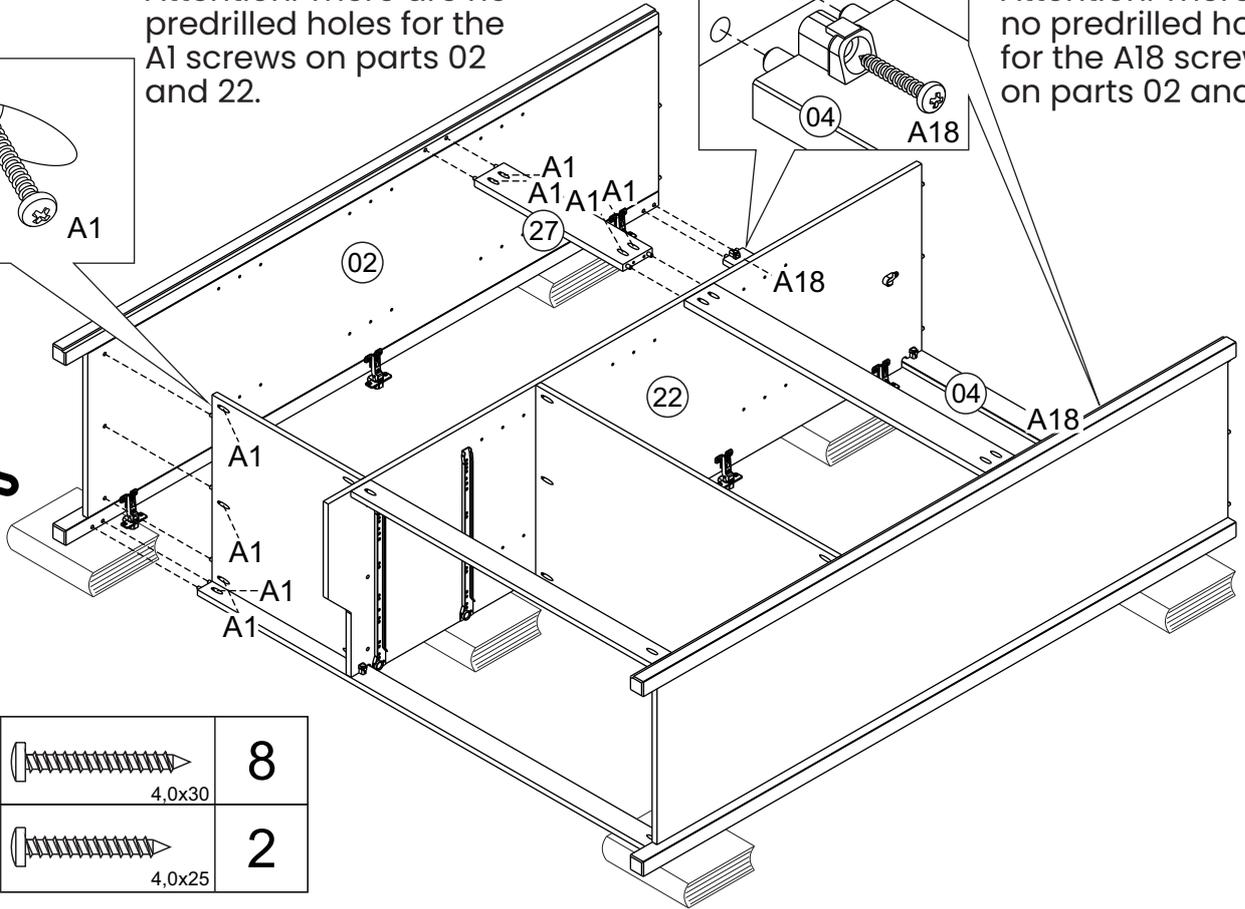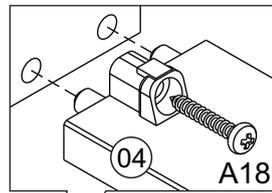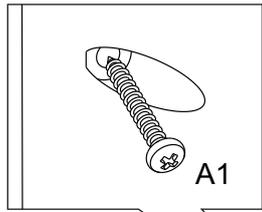



A1		8
4,0x30		
A18		2
4,0x25		


7)

Attention: There are no predrilled holes for the A18 screws on part 04.

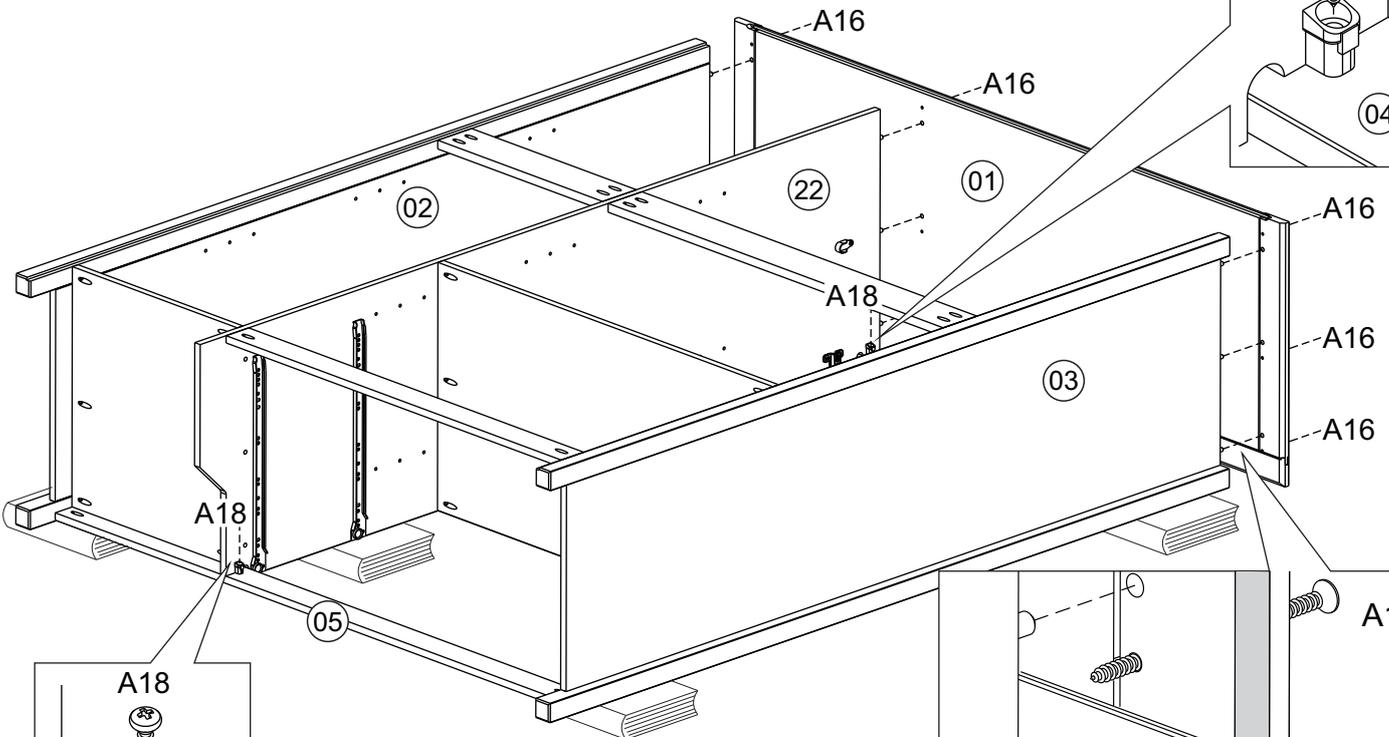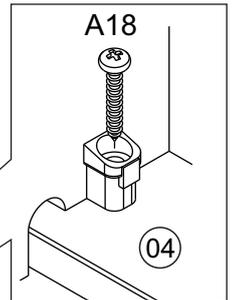



Attention: There are no predrilled holes for the A16 screws on parts 02, 03 and 22.

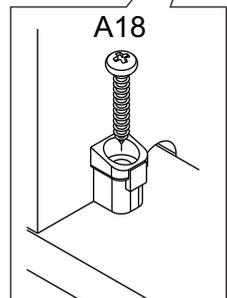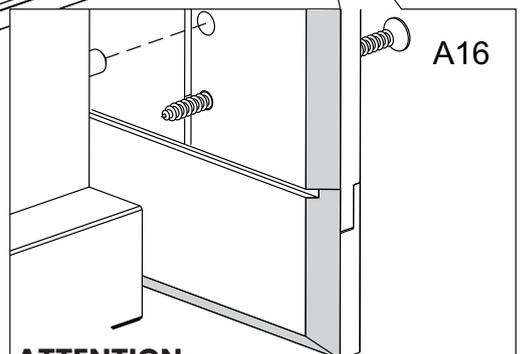

A16		9
4,0x40		
A18		2
4,0x25		



ATTENTION
Make sure the Finished surface is facing the inside of the Wardrobe.

8) Make sure back panels are perfectly aligned with side panels and top and there are NO gaps.

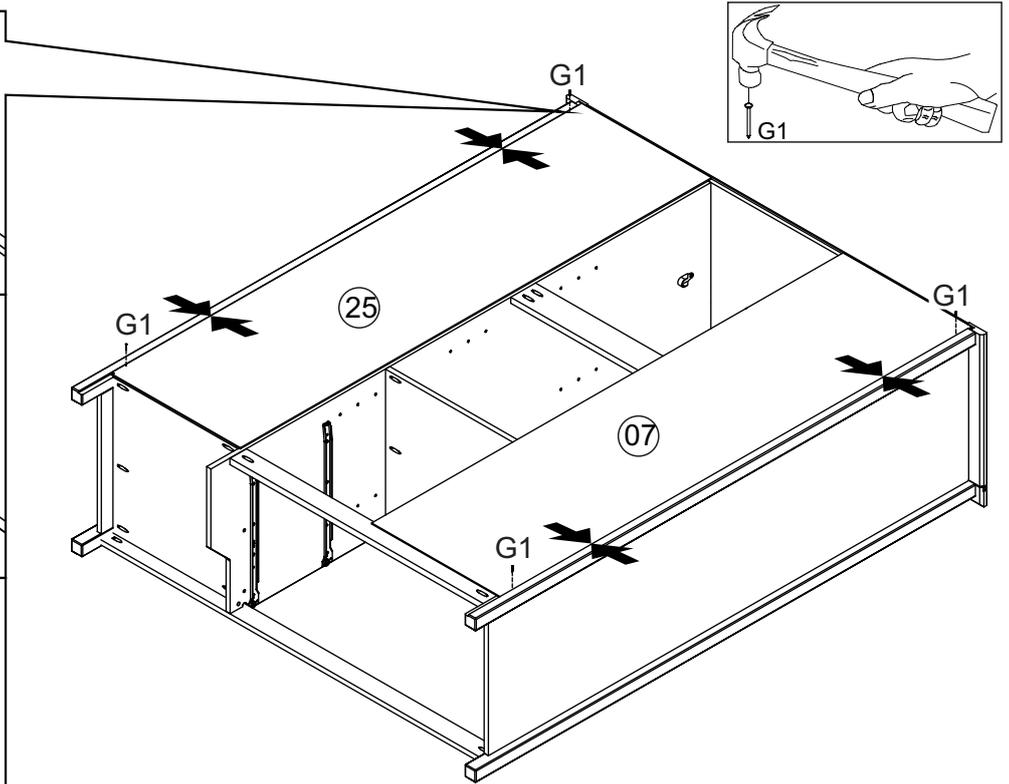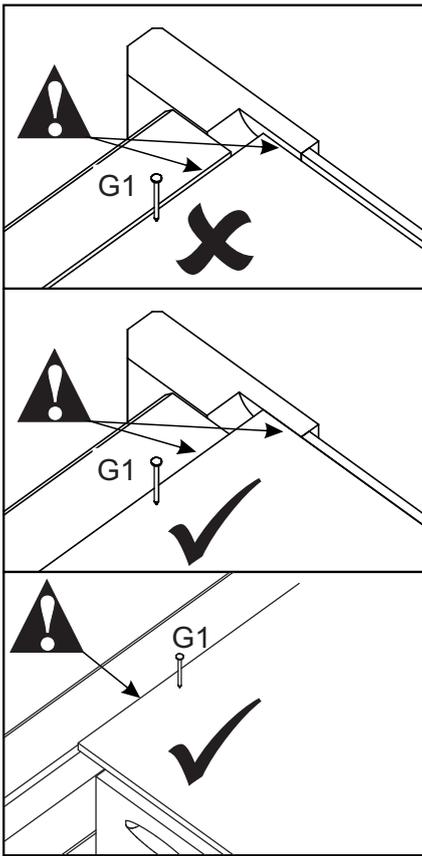



G1		4
		10x10

9)

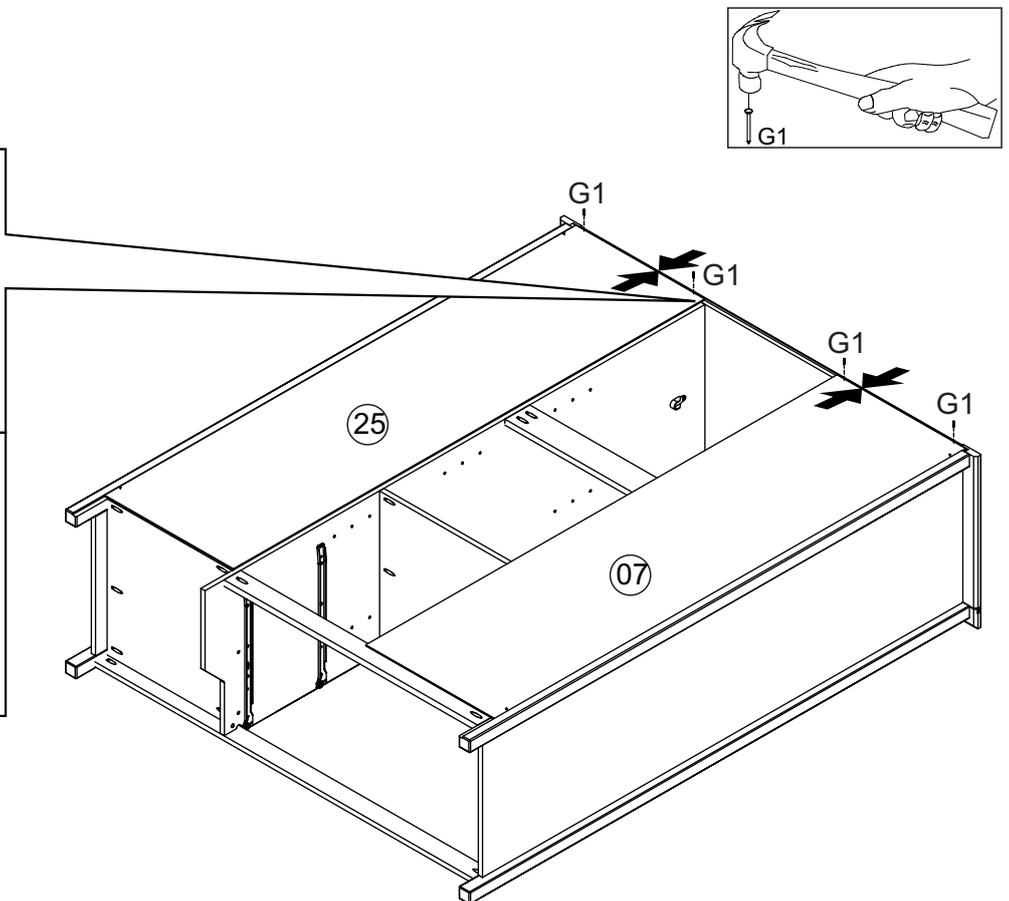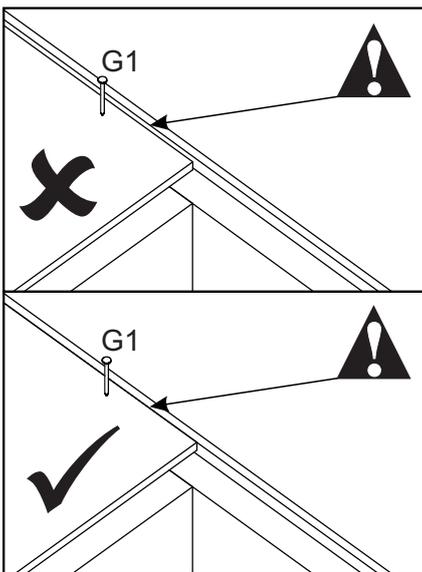




G1		4
		10x10

10)

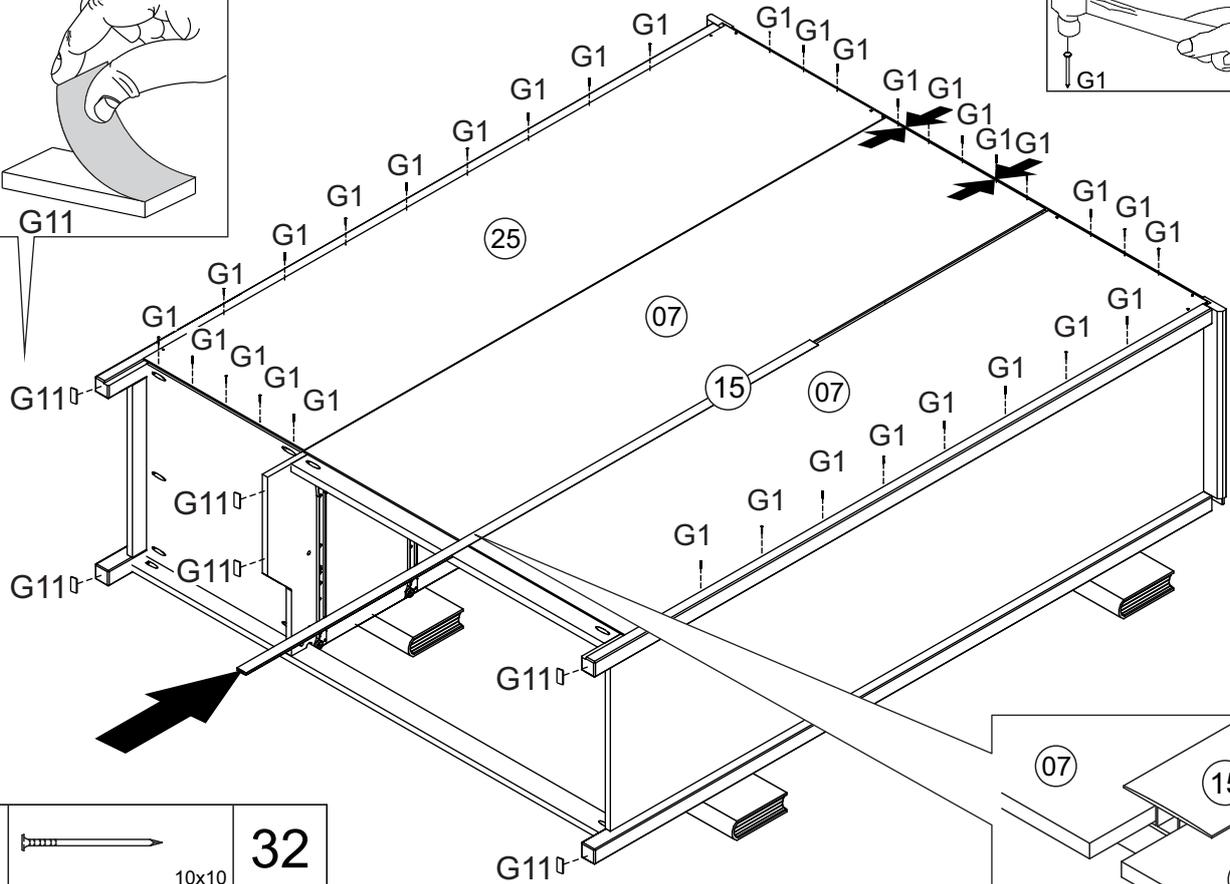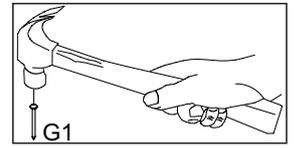

G1	 10x10	32
G11		6


11)

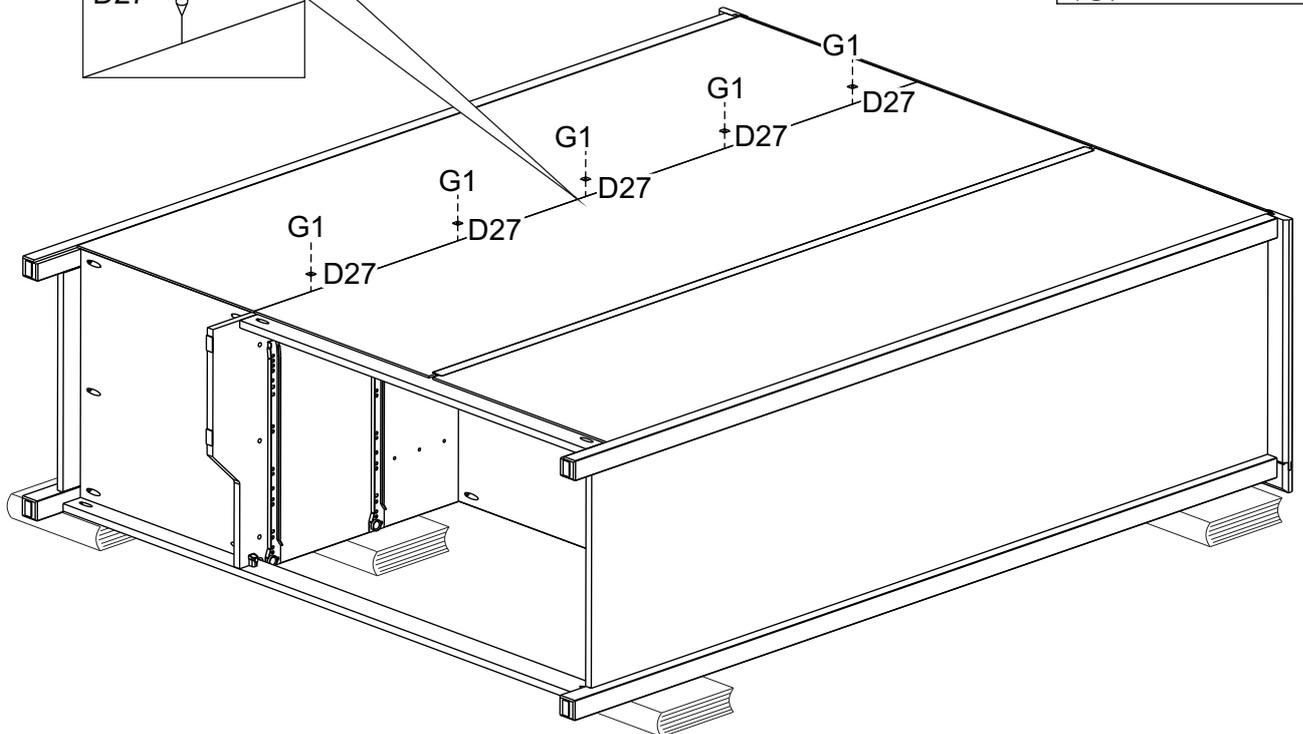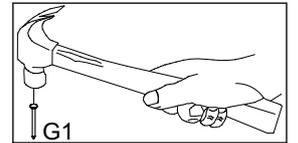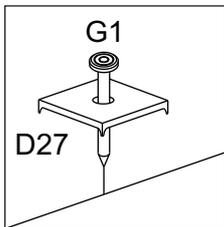



D27		5
-----	---	---

G1	 10x10	5
----	---	---

12)



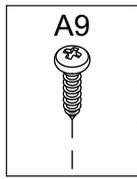


Attention: There are no predrilled holes for the A9 screws on parts 06, 07 and 25.

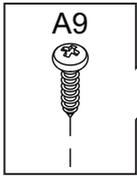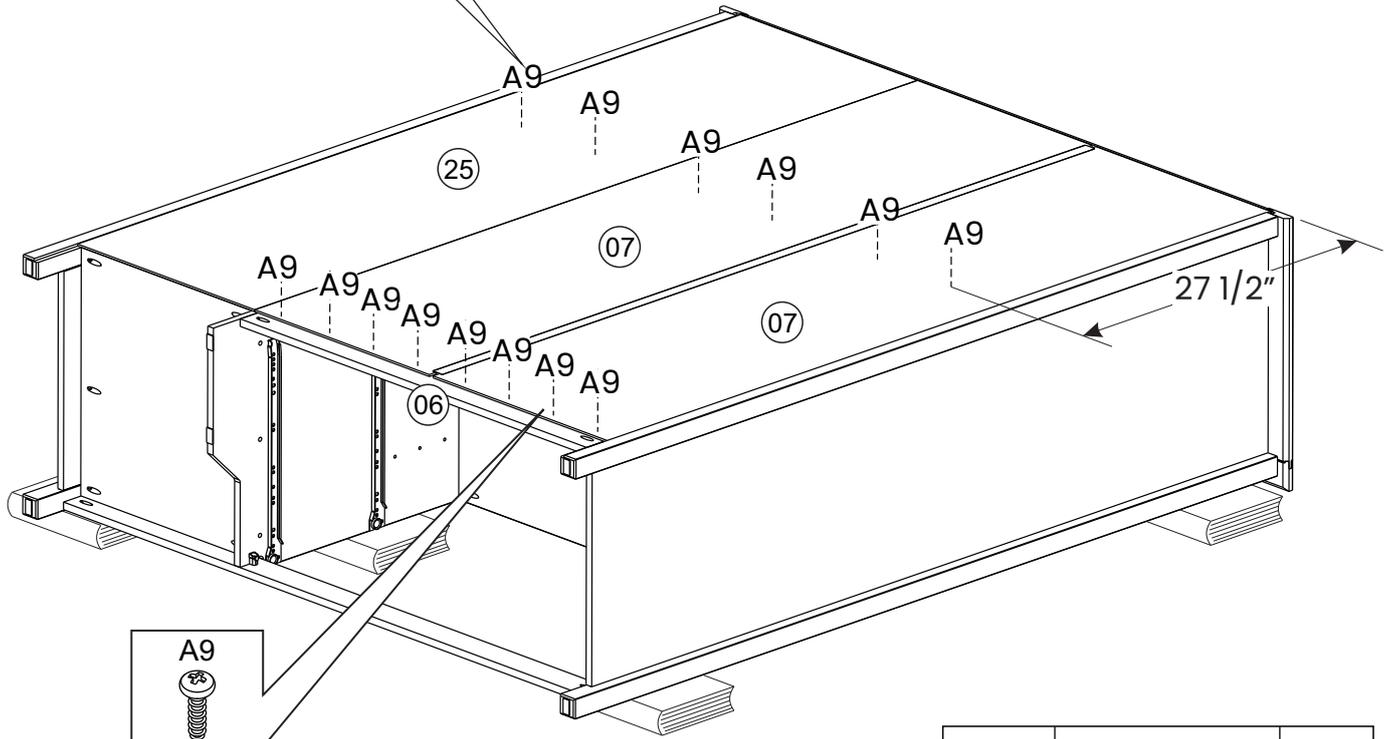

A9		14
	3,5x16	


13)

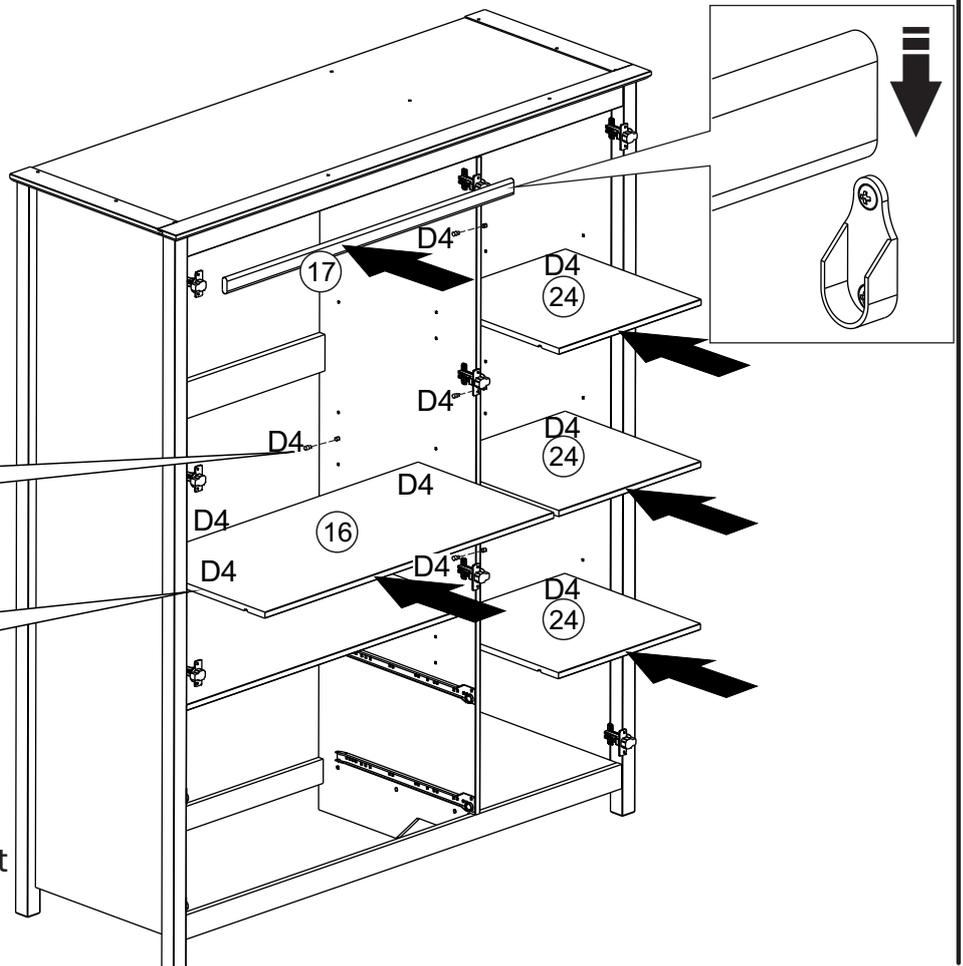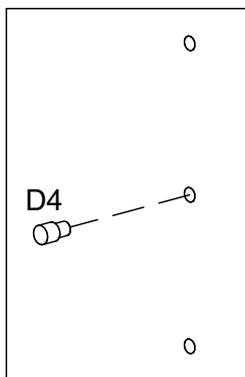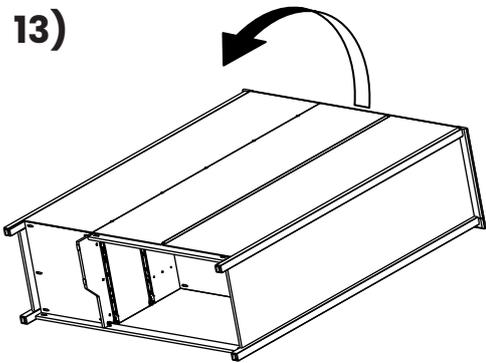


Choose the desired shelf height and insert metal supports.

D4		16
	metal	


14)

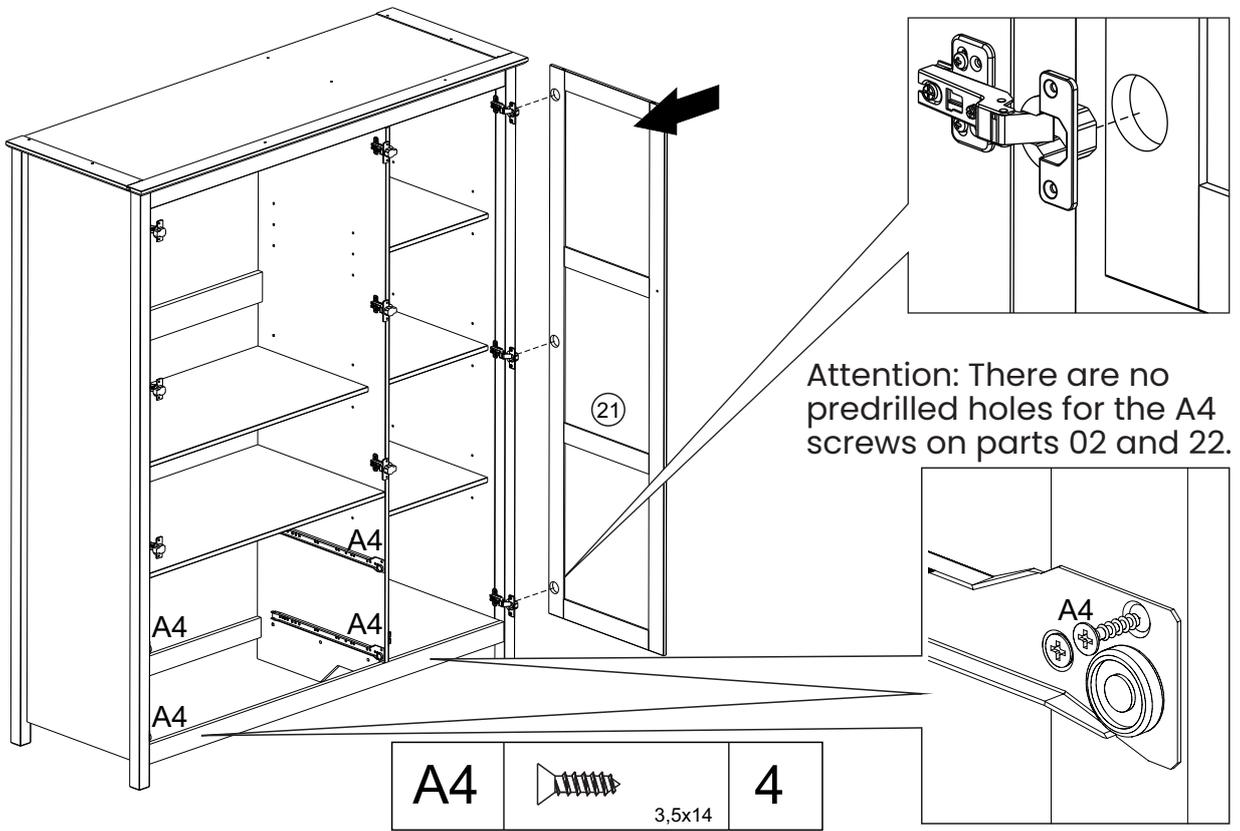


15)

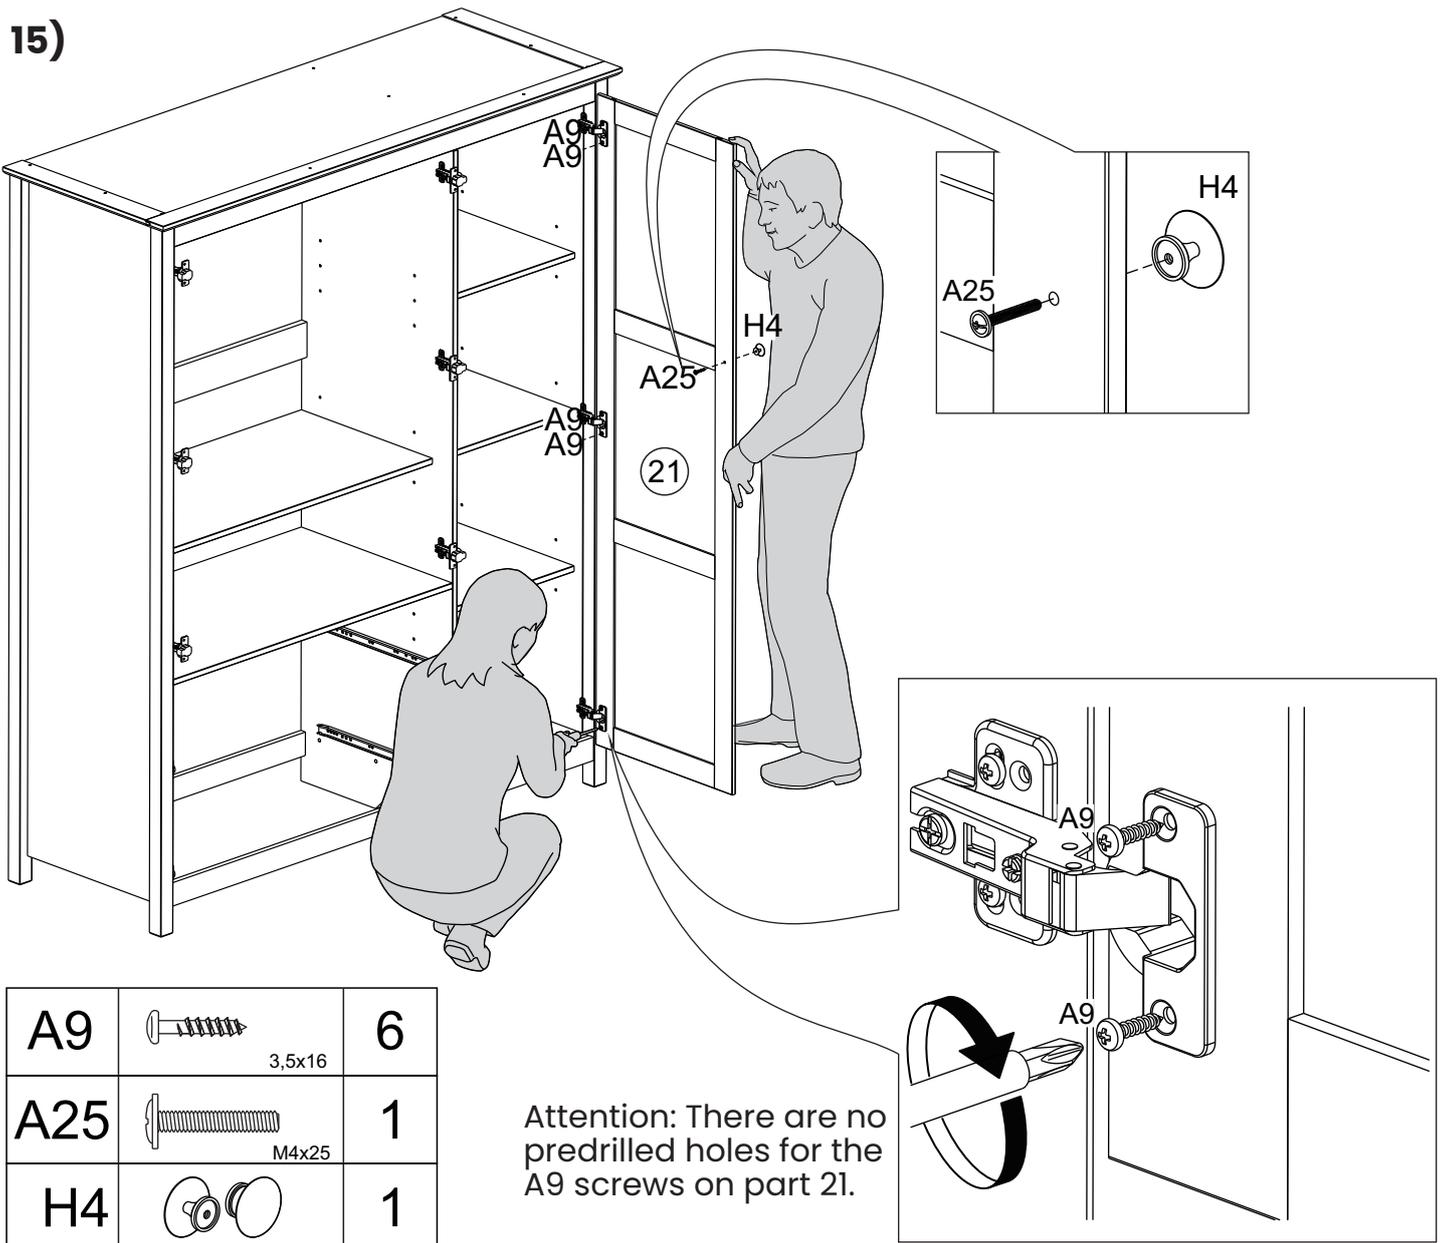

16)

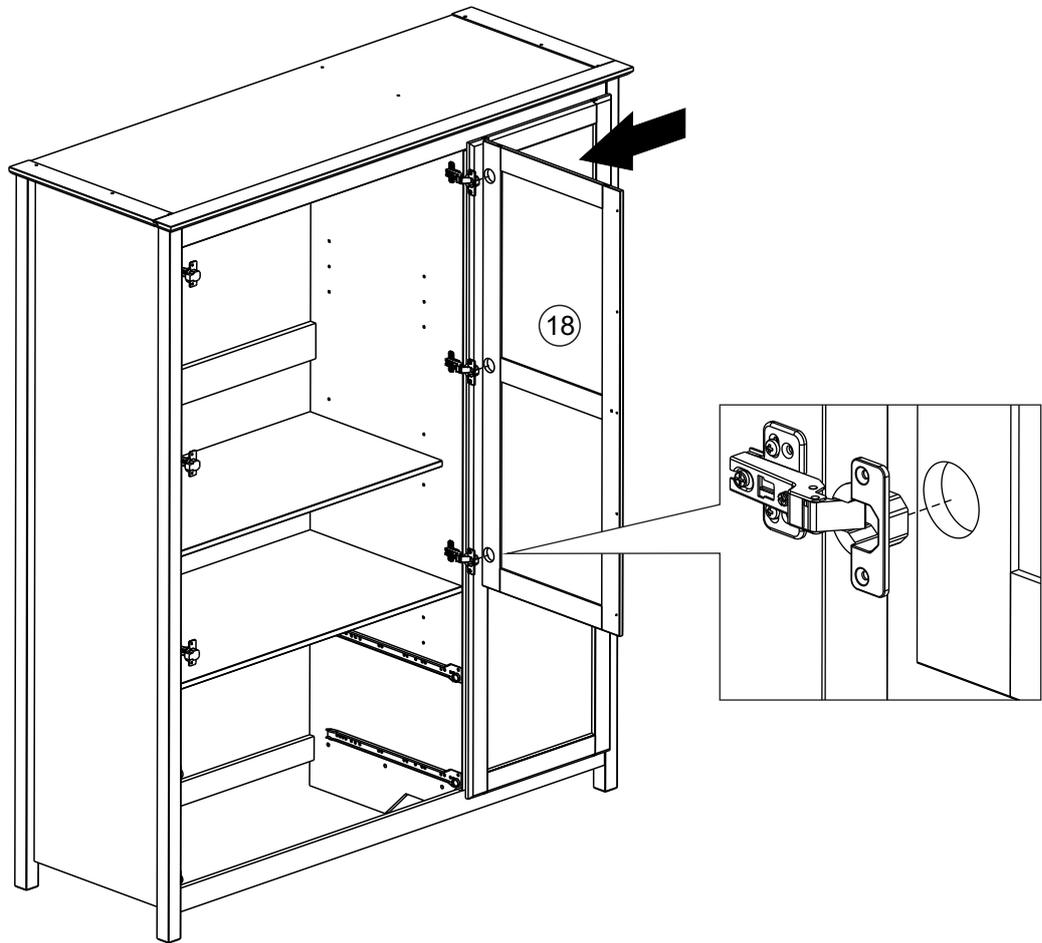


17)

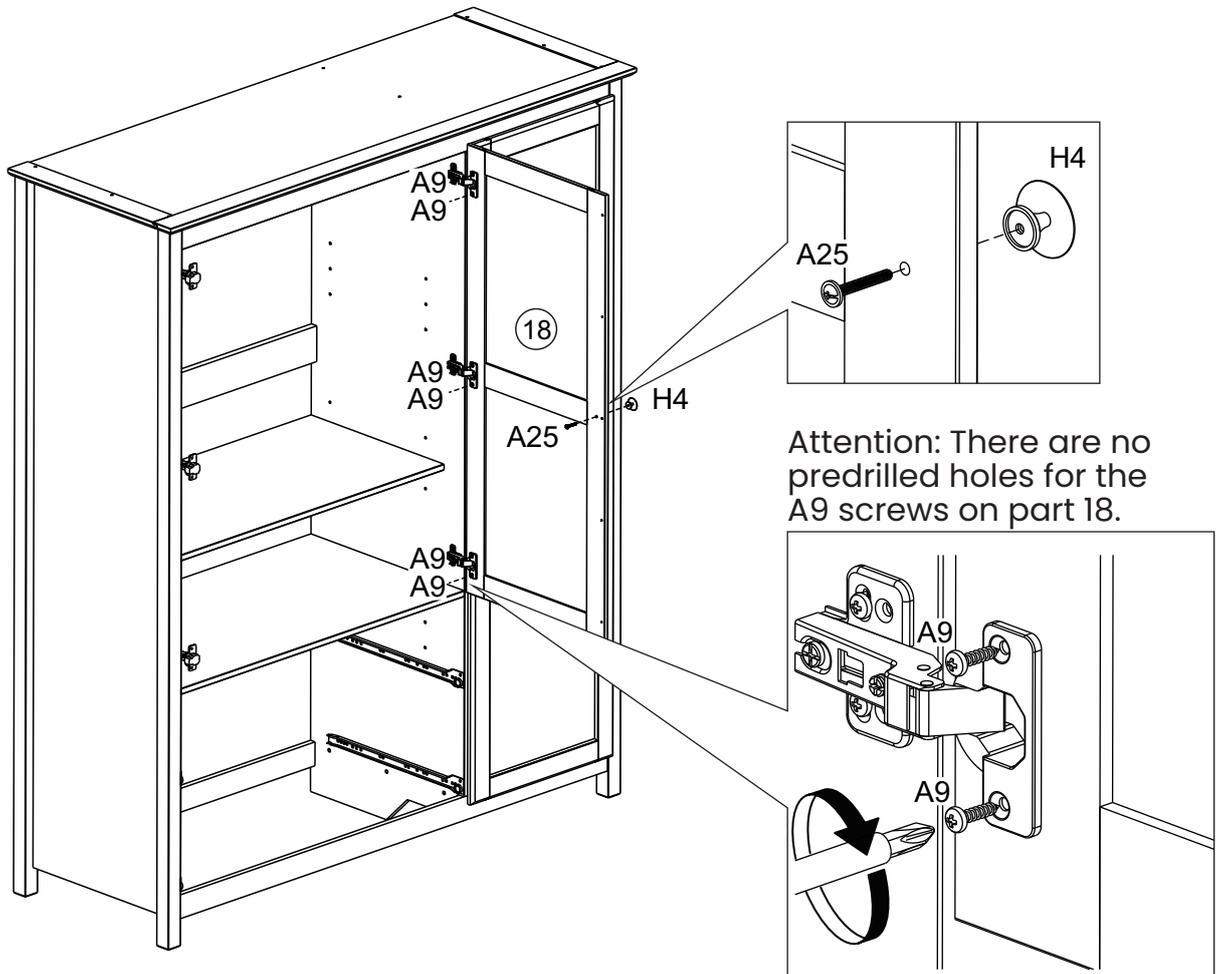


Attention: There are no predrilled holes for the A9 screws on part 18.

A9	 3,5x16	6	A25	 M4x25	1	H4		1
----	---	---	-----	--	---	----	---	---

18)

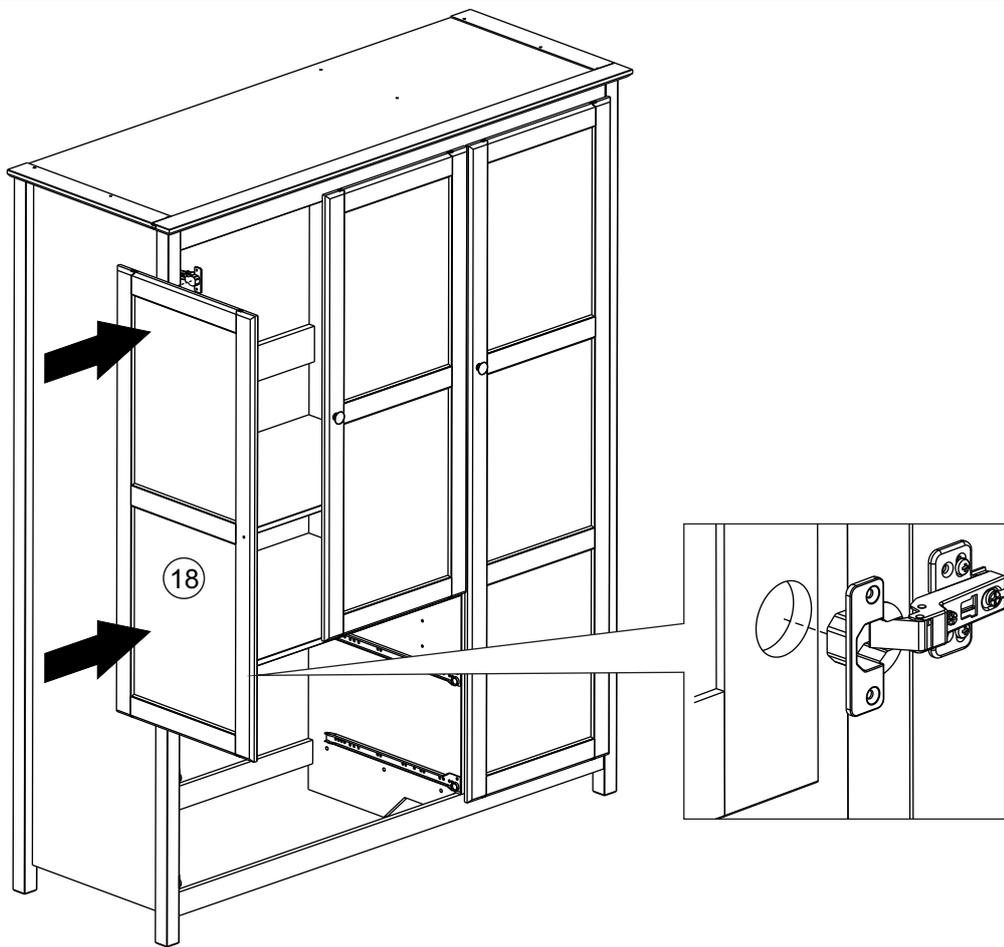





















19)

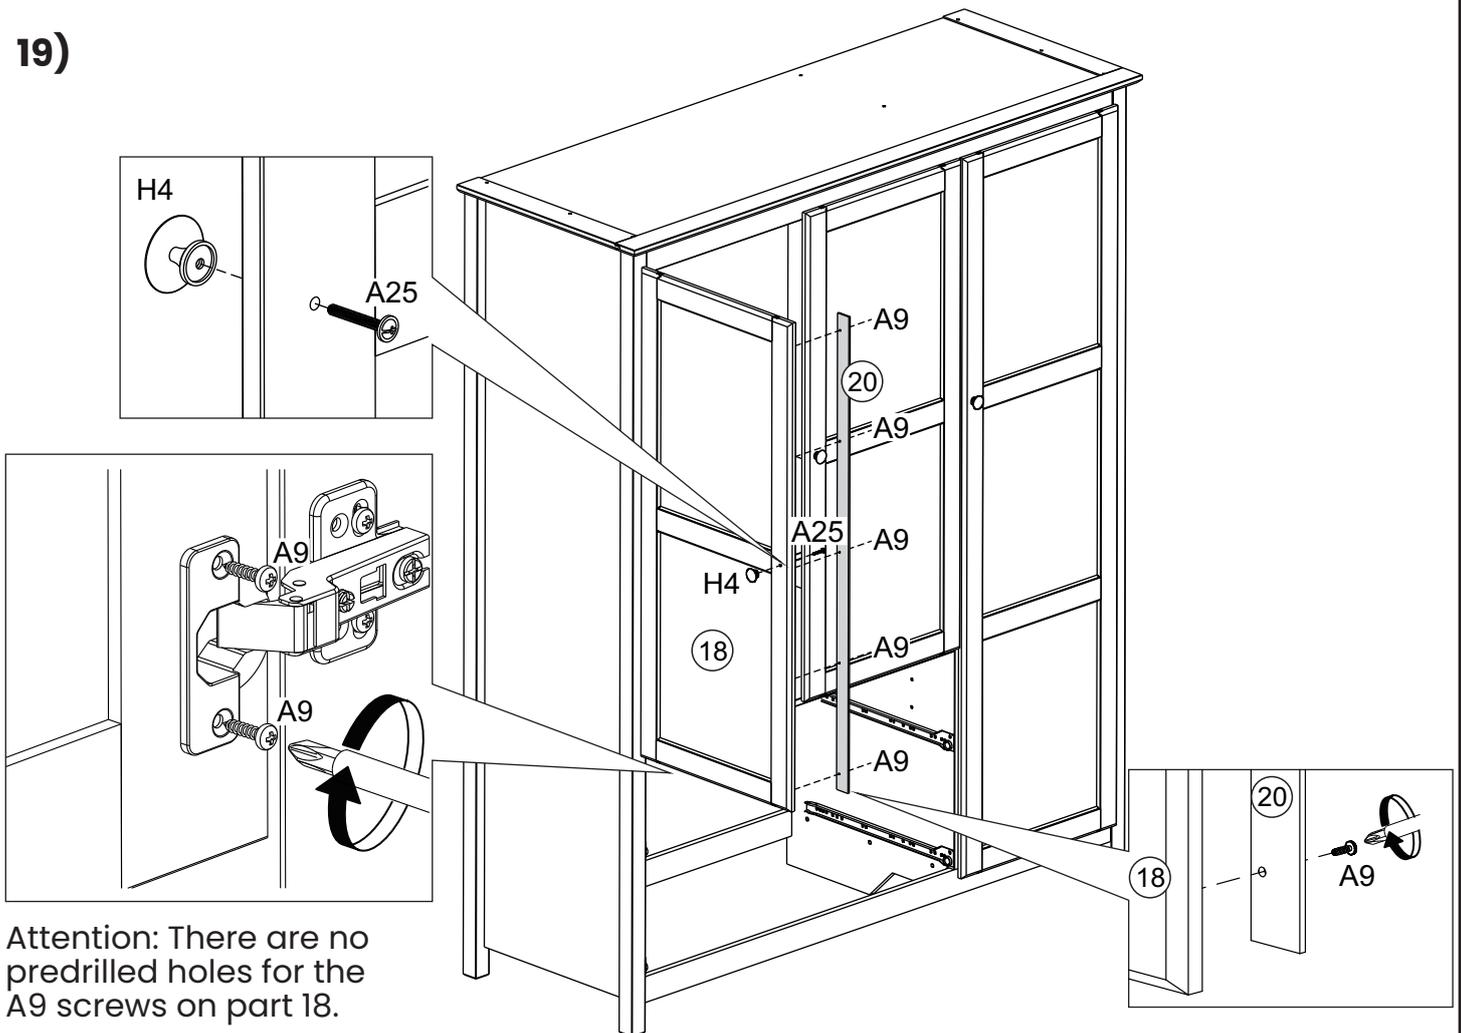

Attention: There are no predrilled holes for the A9 screws on part 18.




A9	 3,5x16	11	A25	 M4x25	1	H4		1
----	---	----	-----	--	---	----	---	---

20)

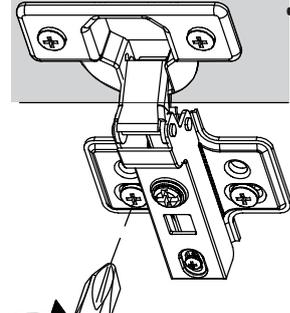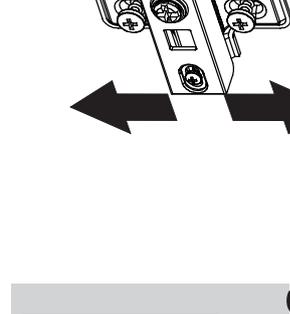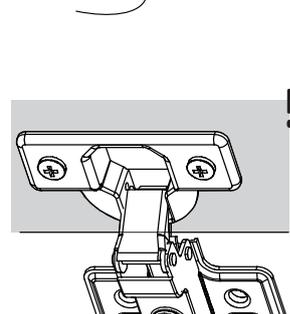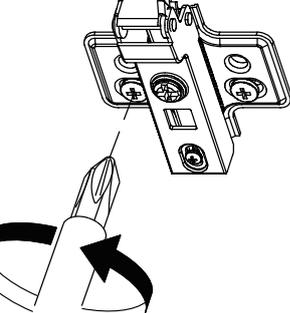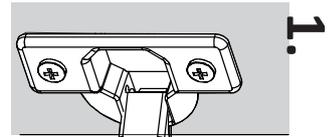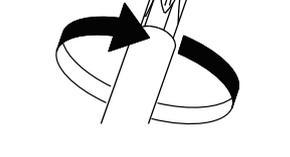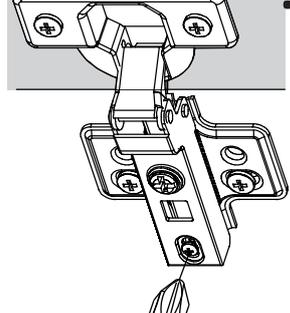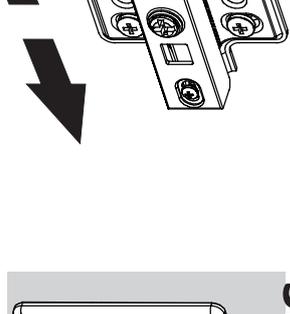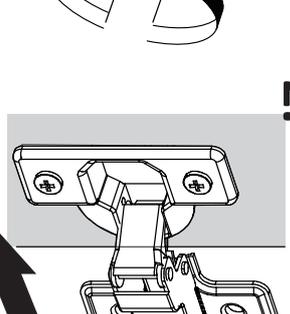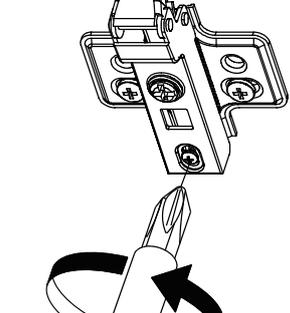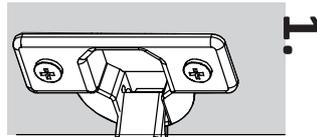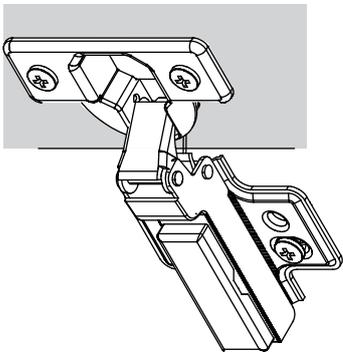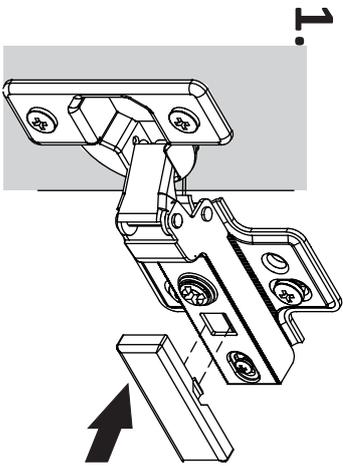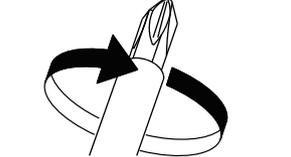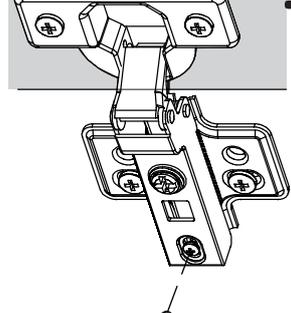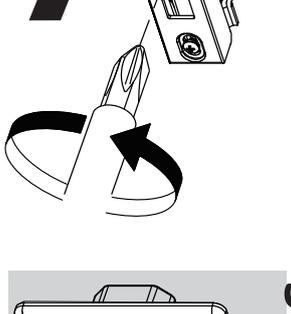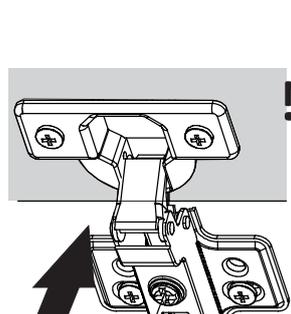
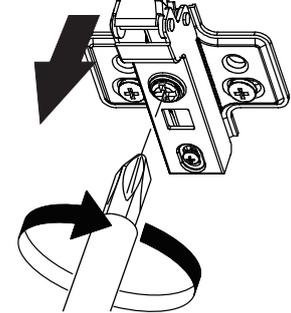
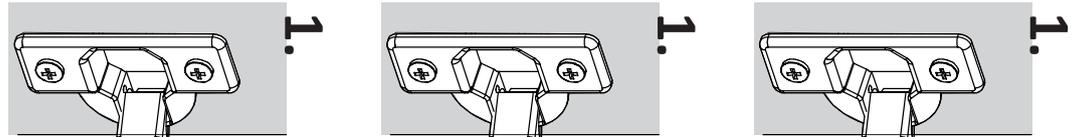
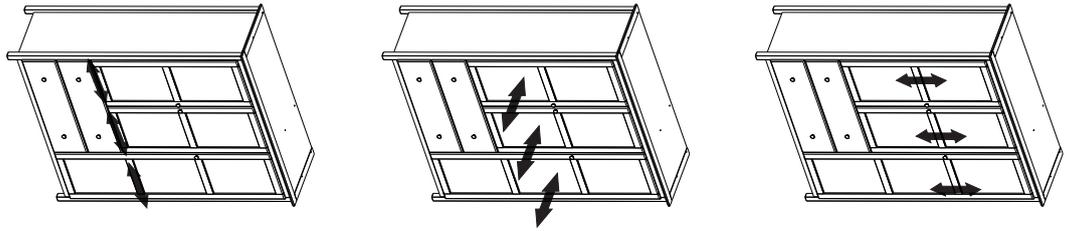


21)

2x

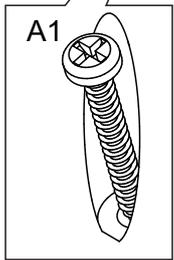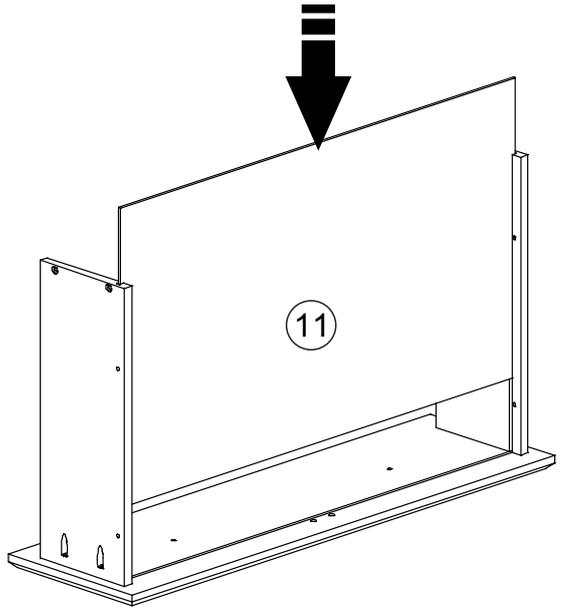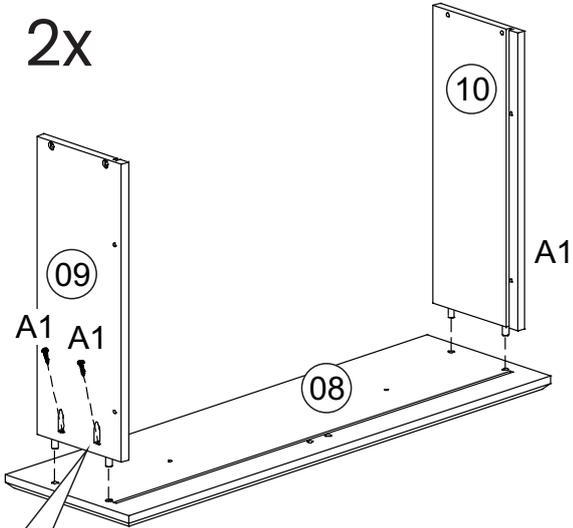


Attention: There are no predrilled holes for the A1 screws on part 08.

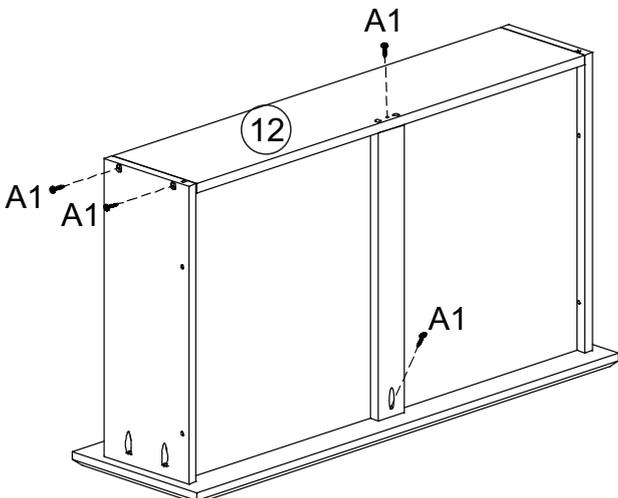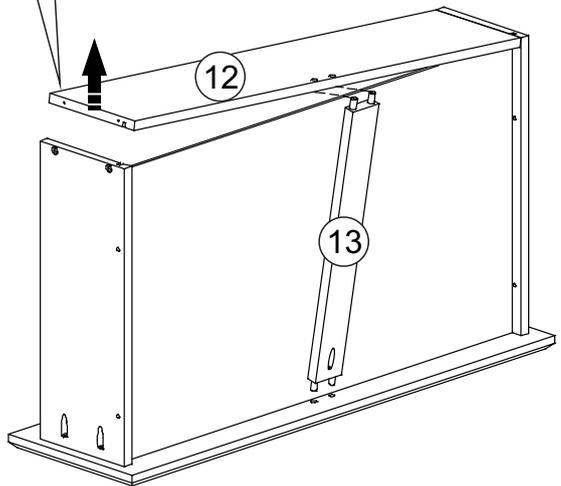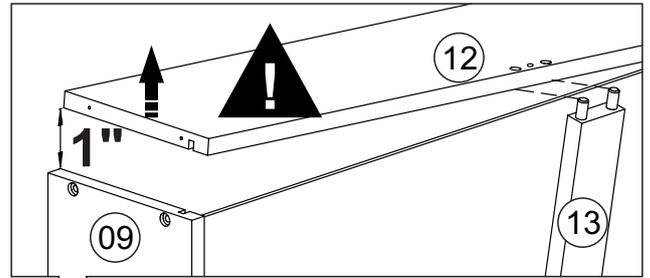
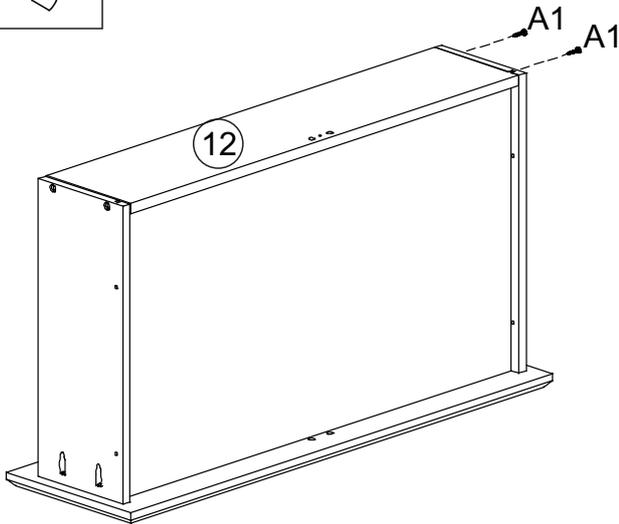


A1		20
		4,0x30

22) Flip the assembled drawer upside down to install glides.


2x

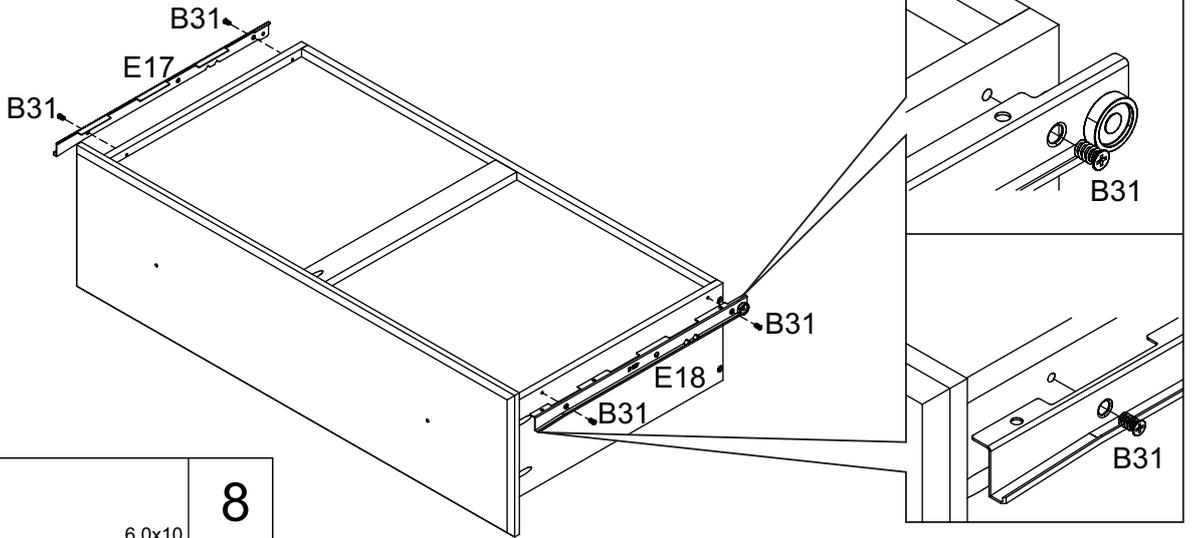

B31		6,0x10	8
E17		Drawer RIGHT	2
E18		Drawer LEFT	2
	450mm - 17 3/4"		


23)

2x

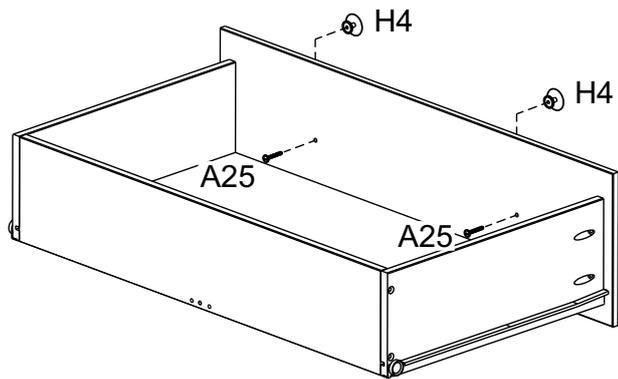


A25		M4x25	4
H4			4

24)





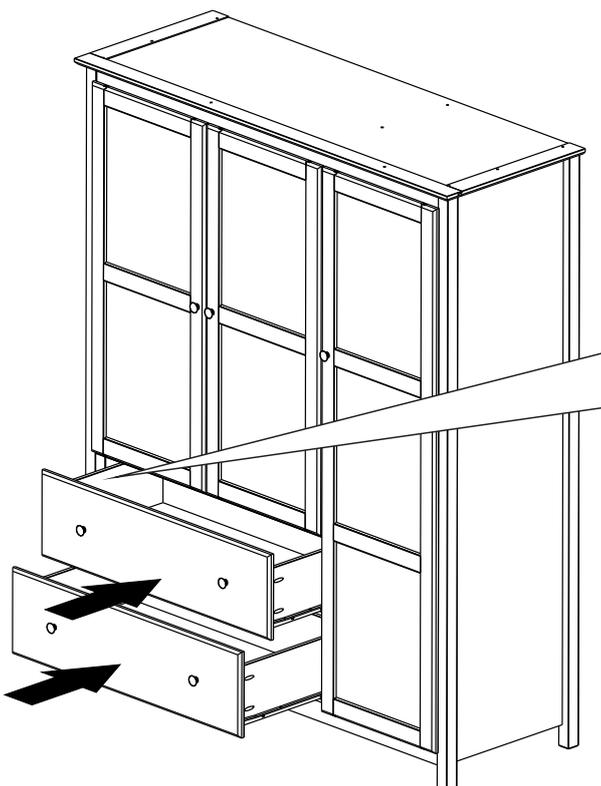



Place the labeled drawer on the top position.

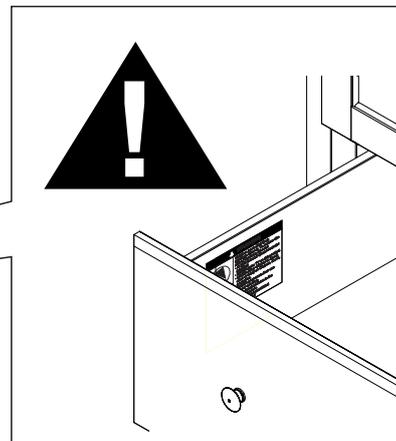

25)

ANTI-TIPPING RESTRAINT KIT

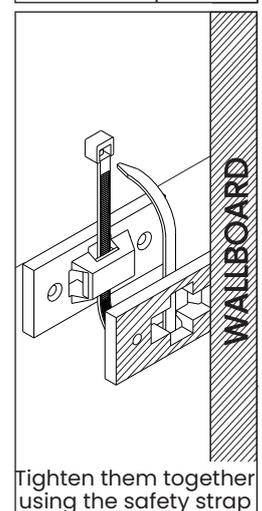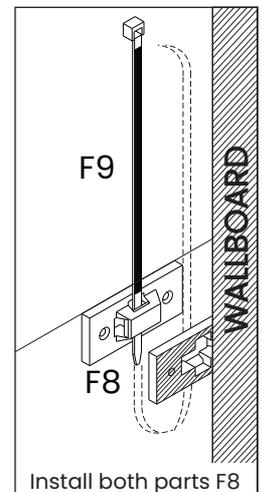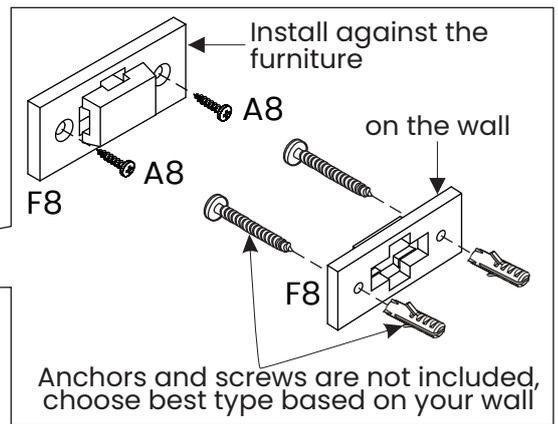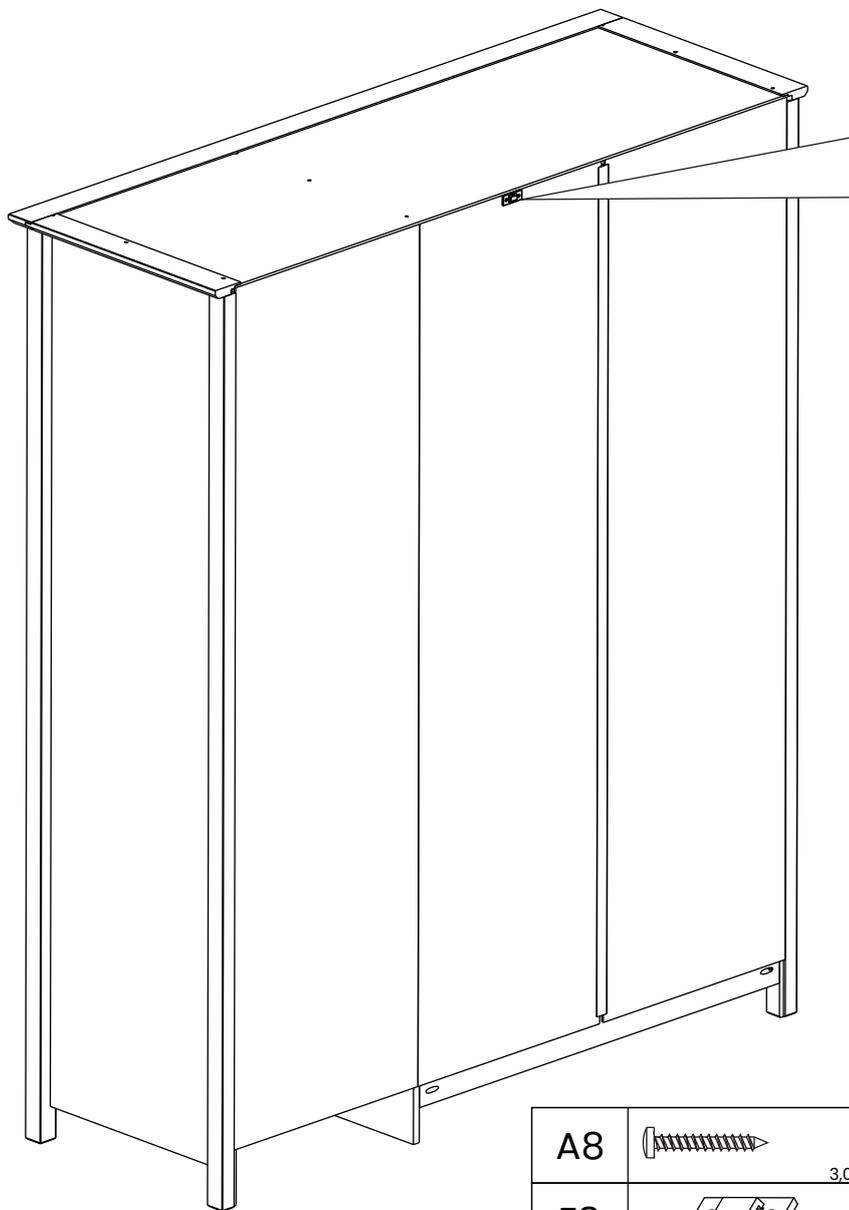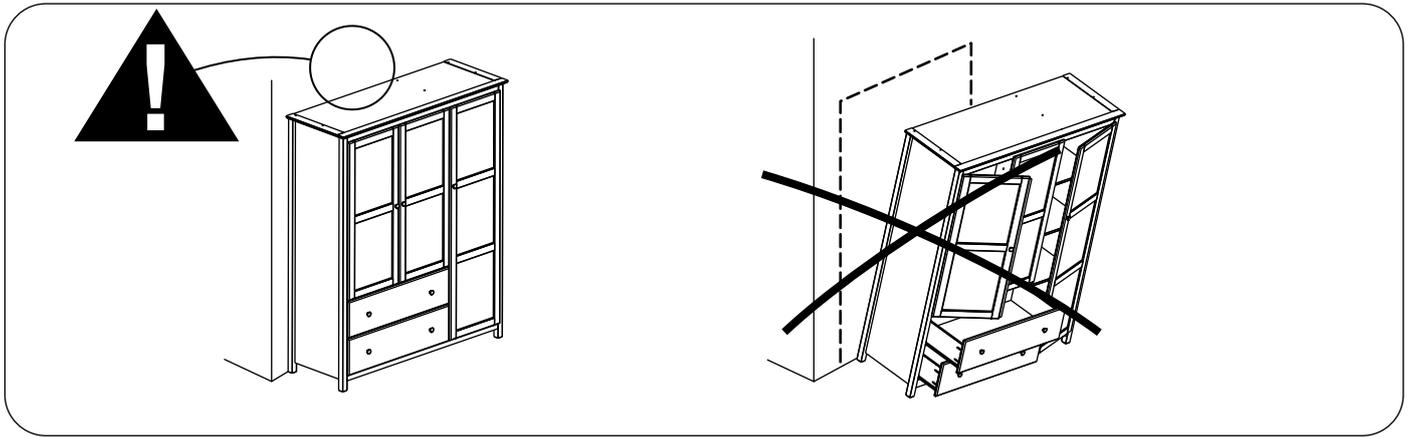

A8		3,0x20	2
F8			2
F9			1