
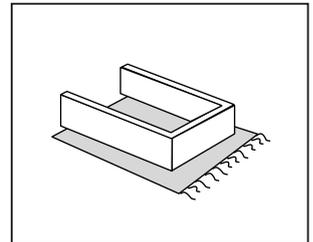
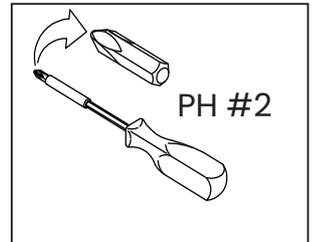
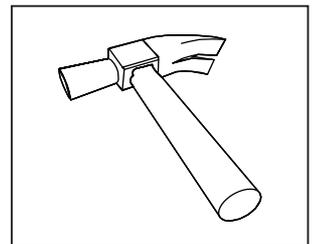
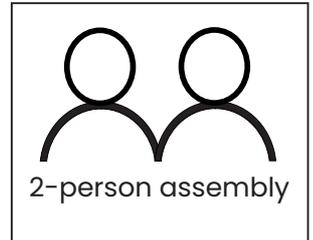


# Assembly Instructions

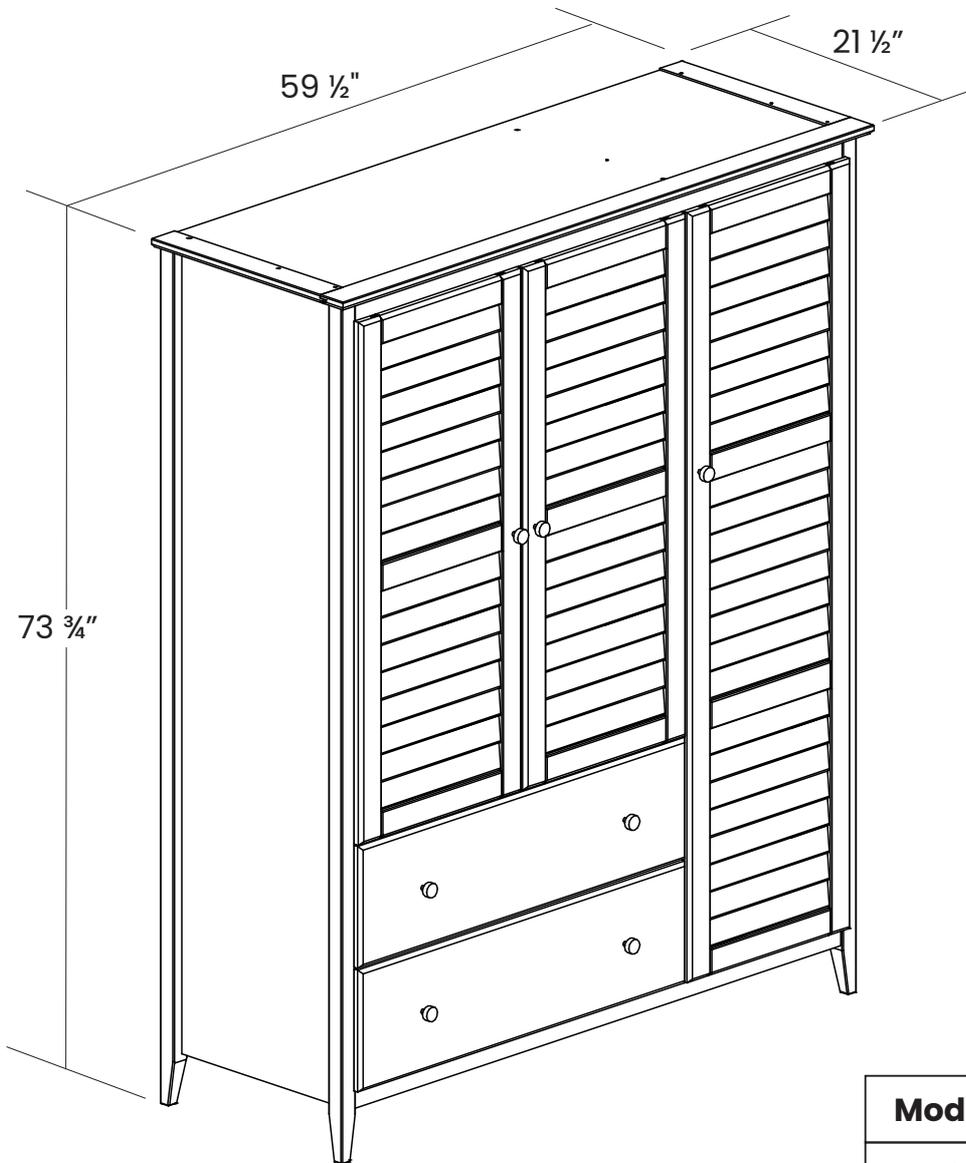

Model #	Finish
GP0903	Brushed White
GP0916	Brushed Driftwood
GP0940	Brushed Grey

Thank you for choosing Grain Wood Furniture, it is an honor to be in your home!  
 If you have any questions, feedback, or need replacement parts please contact us at:  
[grainwoodfurniture.com/help](http://grainwoodfurniture.com/help) or [support@grainwoodfurniture.com](mailto:support@grainwoodfurniture.com)

**Greenport Collection**  
**3-Door Wardrobe**

**GrainWood**  
 FURNITURE.COM




---

## PLEASE READ BELOW BEFORE BEGINNING ASSEMBLY


- Enlist help from a friend or family member as most items require two people for proper assembly.
- Choose a spacious, open area near where the piece will be located once assembled. It is easier to move parts than to relocate the furniture after it is fully assembled.
- Do not throw away packaging material until assembly is complete.
- Assemble the item on a soft surface, such as cardboard or an old blanket in order to protect the finish from possible dents or scratches.
- Lay out the parts in order and count them twice. In case any parts are missing or damaged, document the problem with pictures and contact support so we can make it right.
- Solid wood furniture may present imperfections such as wood knots, minor splits or cracks which are a natural aspect of the material. Whenever stability of the furniture is not compromised, we recommend customers perform cosmetic touch-ups with wax crayon fillers sold at all major hardware stores.
- It is best to use the tools provided in the box, such as a hex key, because they may be specially sized for the piece of furniture.
- We do not recommend the use of power drills as they can damage your furniture if not used correctly.
- Use a carpenter's square or hardcover book to check angles when assembling drawers and doors. If they are not at 90 degrees, they will not close properly.
- If you have any problems, we are here to help. Just go to [grainwoodfurniture.com/help](http://grainwoodfurniture.com/help).
- See [grainwoodfurniture.com/care-guide](http://grainwoodfurniture.com/care-guide) for suggestions that will help your furniture last for years.

**Enjoy your 100% solid wood furniture!**

# HARDWARE LIST

A1	 4,0x30	44 + 2
A4	 3,5x14	8 + 1
A9	 3,5x16	55 + 2
A16	 4,0x40	9 + 1
A18	 4,0x25	4 + 1
A25	 M4x25	7 + 1
B31	 6,0x10	20 + 1
C2	 8,0x25	57 + 2
D4	 metal	16 + 1
D10		2
D21		4 + 1
D27		5
E17	 450mm - 17 3/4" RIGHT Side	2
E17	 450mm - 17 3/4" Drawer RIGHT	2
E18	 450mm - 17 3/4" LEFT Side	2
E18	 450mm - 17 3/4" Drawer LEFT	2

F10		9
G1	 10x10	45 + 2
G11		6
H11		7


ANTI-TIPPING RESTRAINT KIT		
A8	 3,0x20	2 + 1
F8		2
F9		1

## ATTENTION

Before starting assembly please verify the hardware set is complete.

For missing hardware please contact us at [grainwoodfurniture.com/help](http://grainwoodfurniture.com/help)


**WARNING:**  
**CHOKING HAZARD**  
Small parts, not for children.  
To be assembled by an adult.

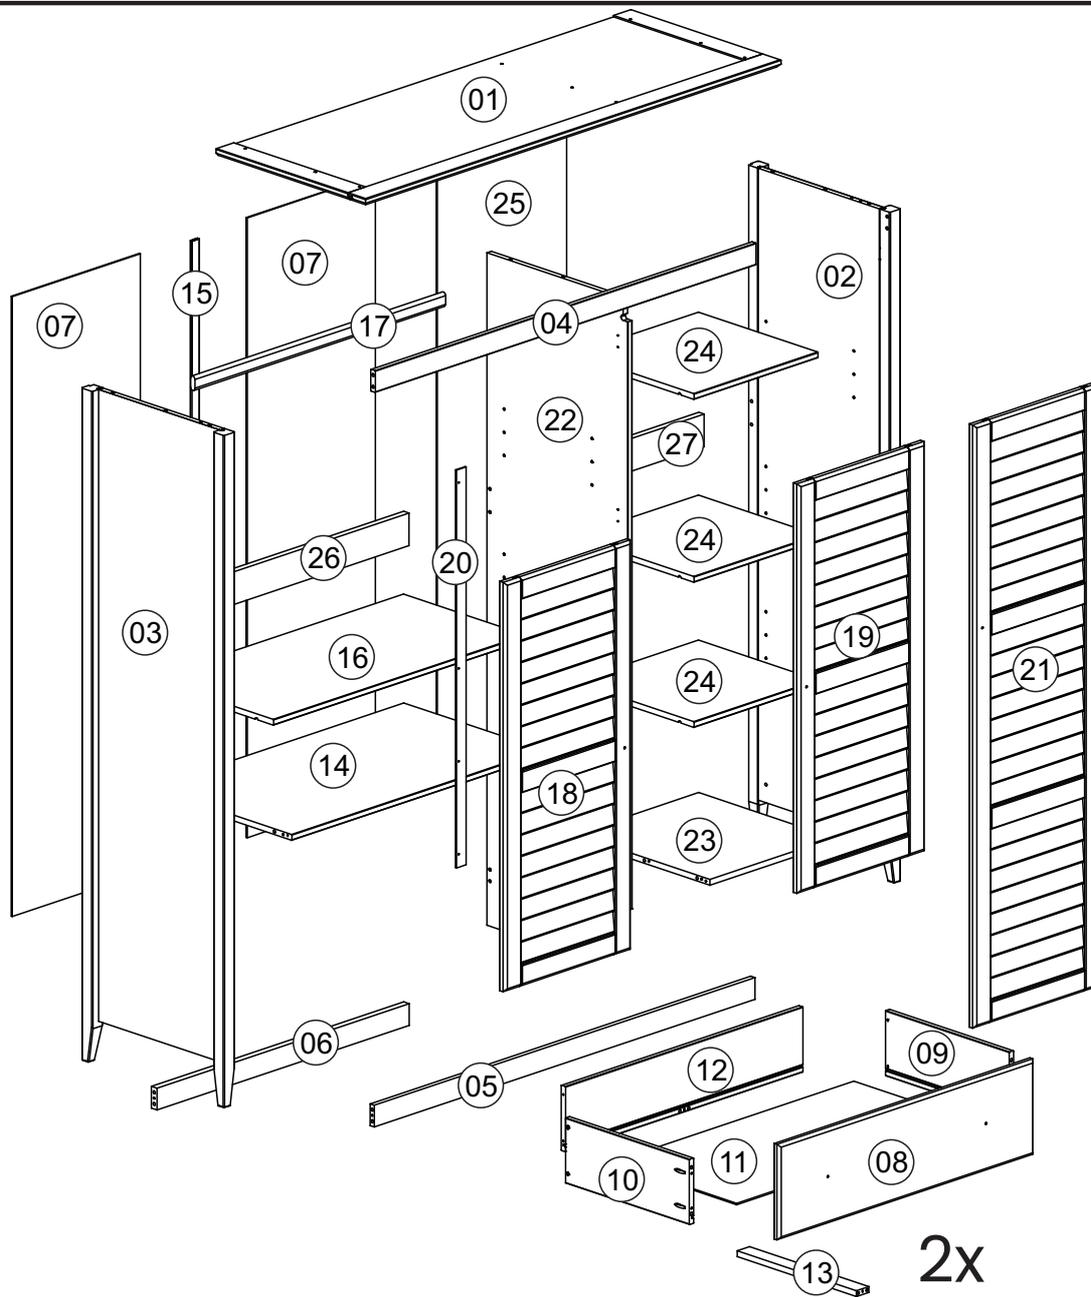


Box A - 1 of 2		
Part #	Description	Qty.
01	Top	1
02	Right side	1
03	Left side	1
04	Upper crosspiece	1
05	Lower crosspiece	1
07	Back panel	2
15	Profile "H"	1
20	Door stop	1
21	Right door - tall	1
22	Division	1
25	Back panel	1

Box B - 2 of 2		
Part #	Description	Qty.
06	Rear crosspiece	1
08	Drawer front	2
09	Drawer right side	2
10	Drawer left side	2
11	Drawer bottom	2
12	Drawer back	2
13	Drawer bottom support	2
14	Fixed shelf	1
16	Wide shelf (adjustable)	1
17	Hanging bar	1
18	Left door	1
19	Right door	1
23	Base short	1
24	Narrow shelf (adjustable)	3
26	Long stabilizer	1
27	Short stabilizer	1
HW	Hardware	1

1)

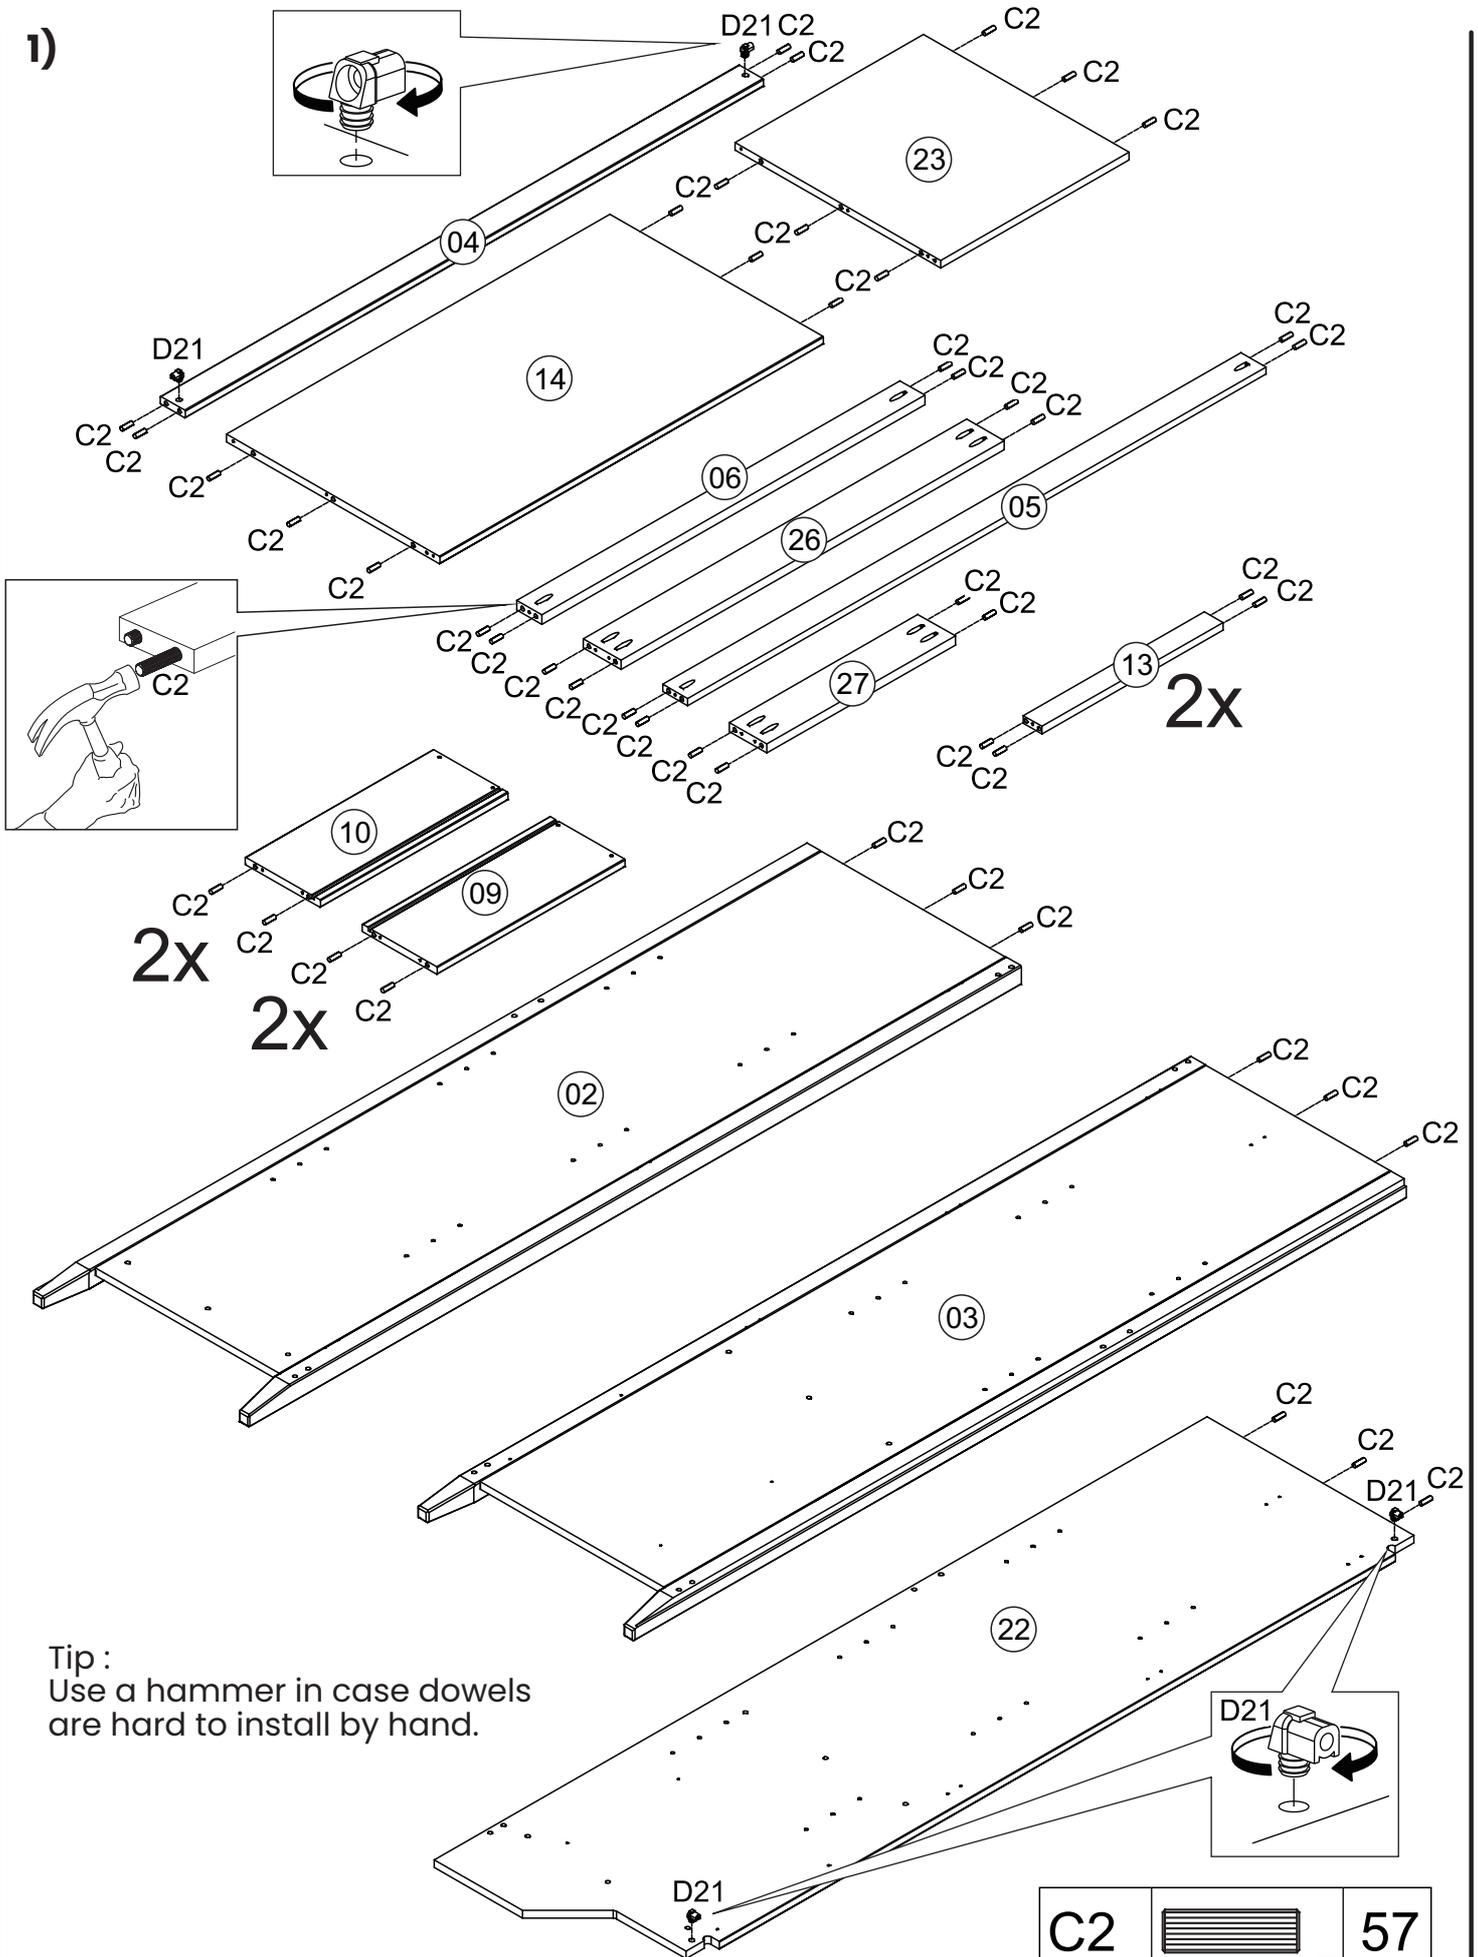



Tip:  
Use a hammer in case dowels  
are hard to install by hand.

C2	 8.0x25	57
D21		4





# ATTENTION PLEASE!

Attach hinge ( F10 ) to hinge plate if it comes separated.  
Push hinge against plate until it clicks.

**click!**

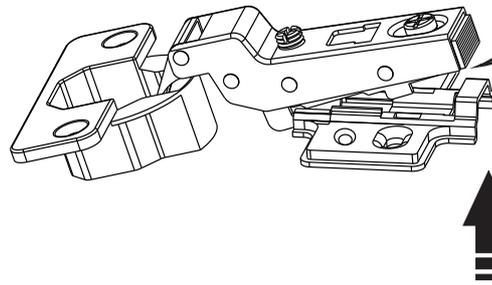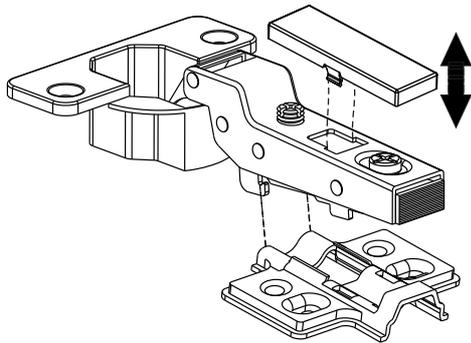

2)

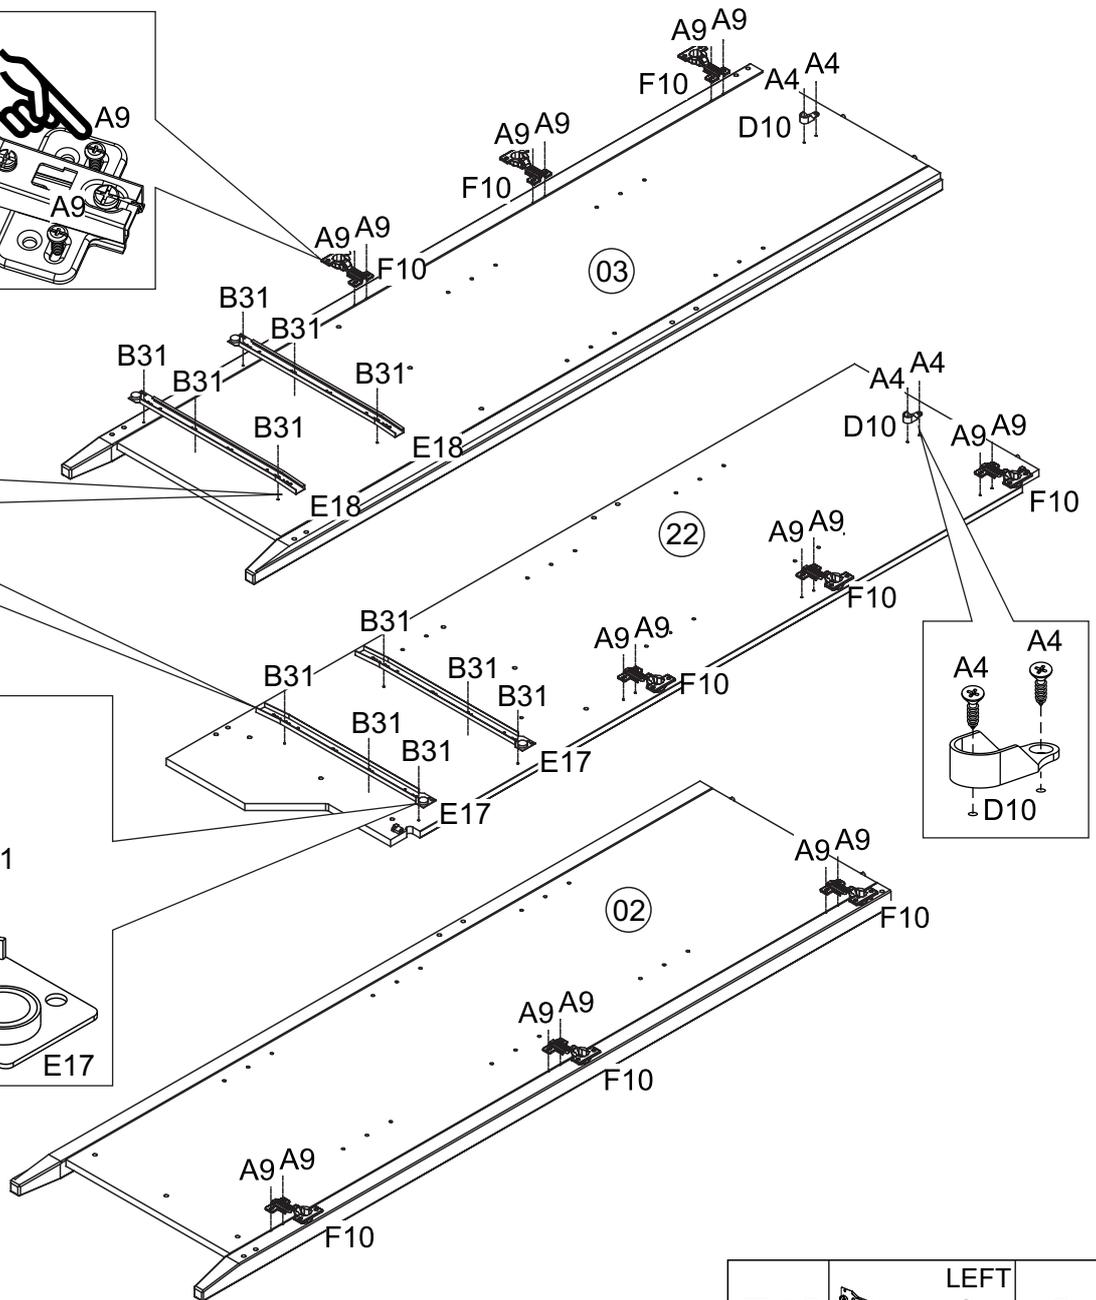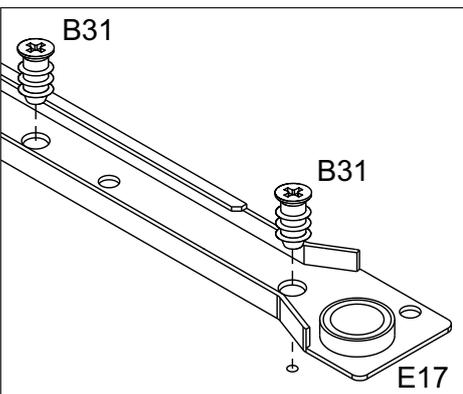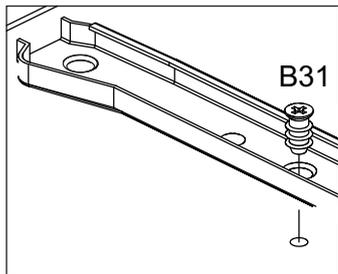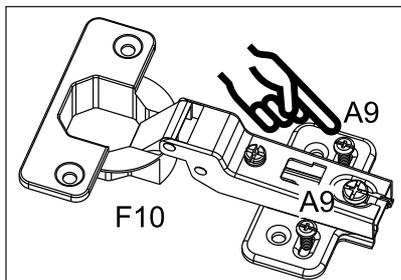


A4		4
A9		18
B31		12

D10		2
-----	---	---



E17		2
RIGHT Side		
450mm - 17 3/4"		

E18		2
LEFT Side		
450mm - 17 3/4"		
F10		9



3)

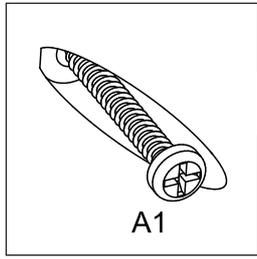


Attention: There are no predrilled holes for the A1 screws on part 22.

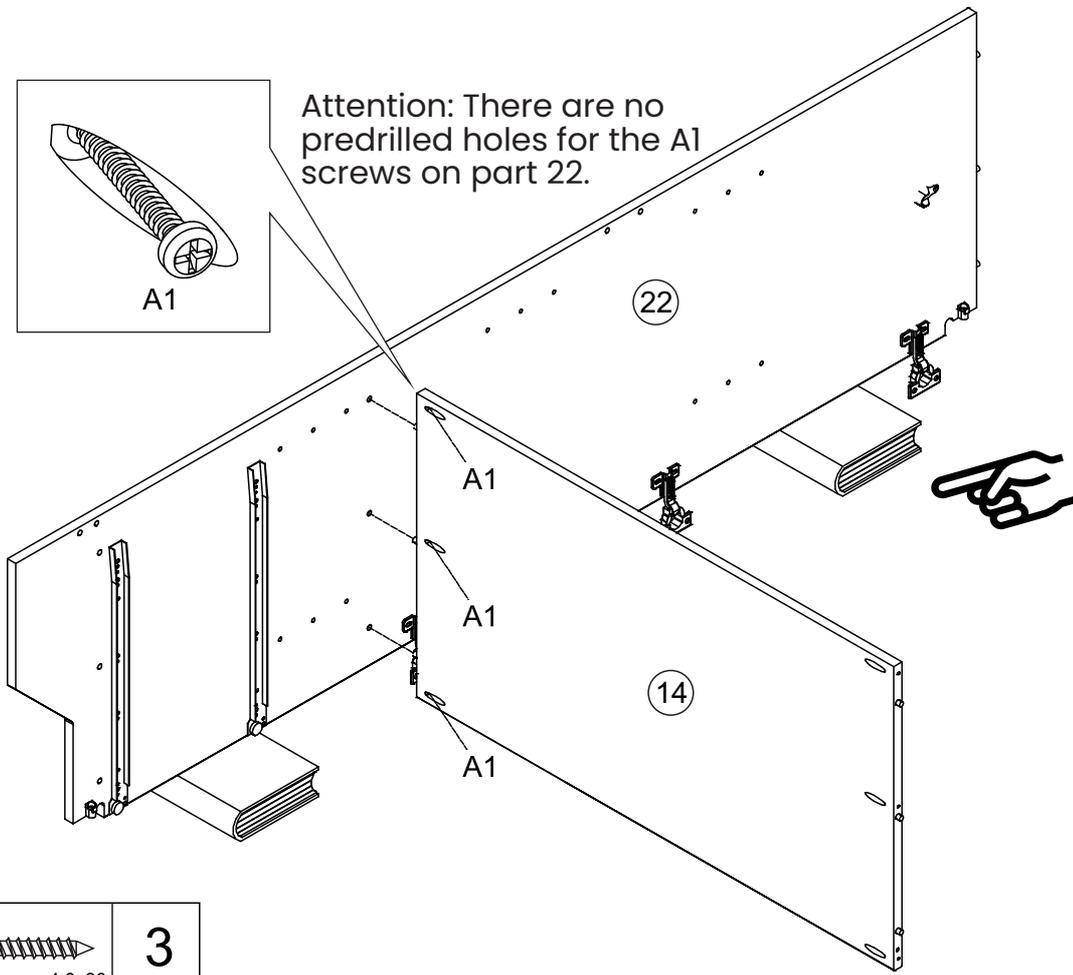



4)

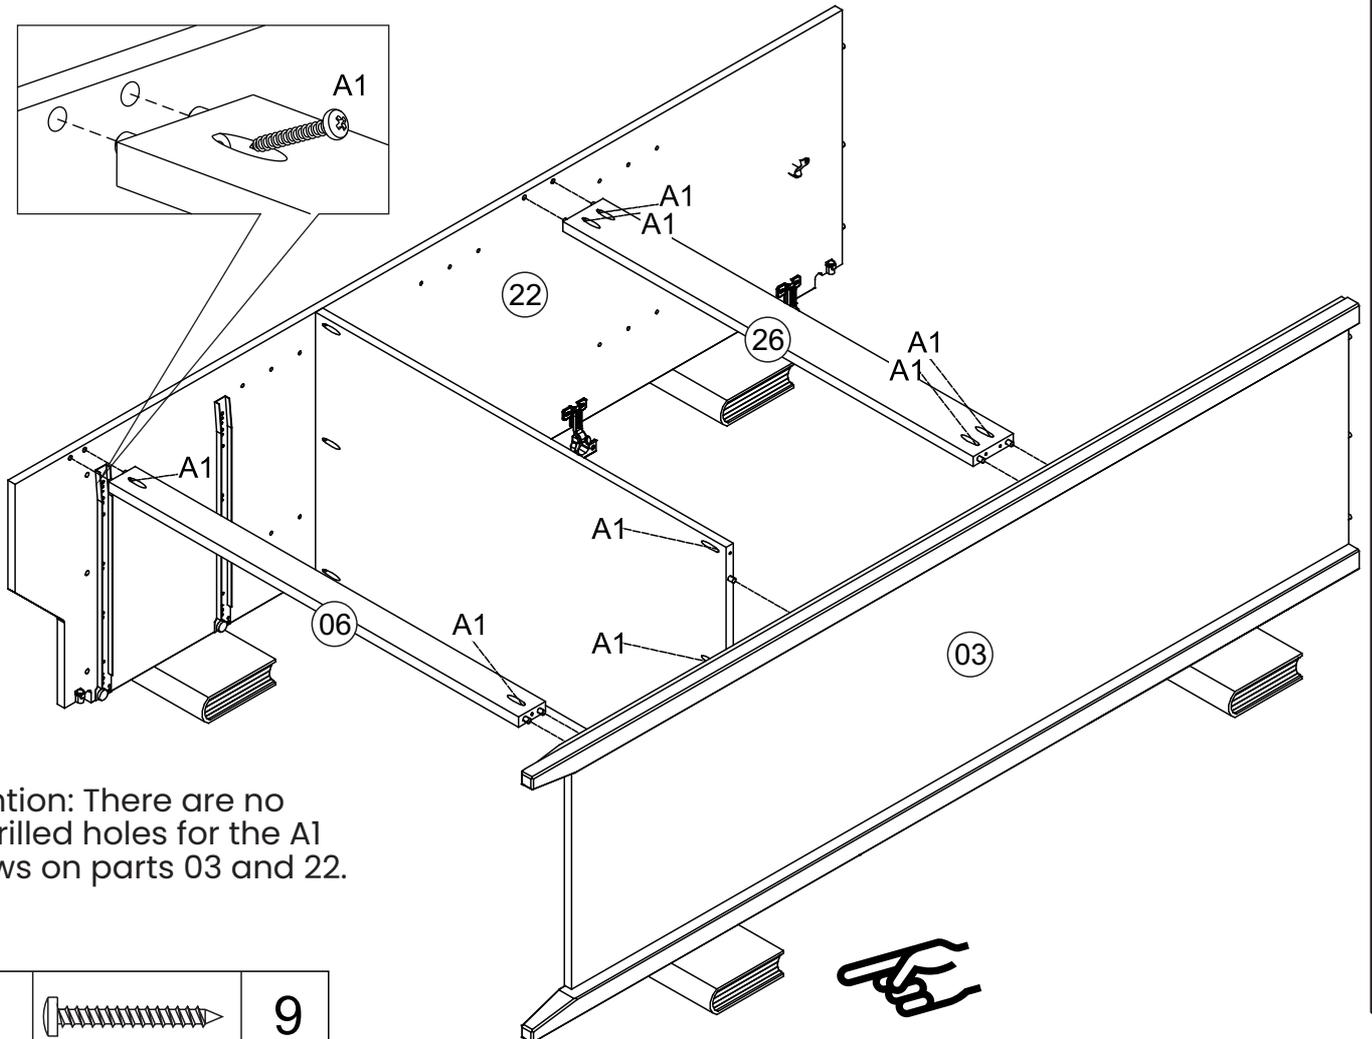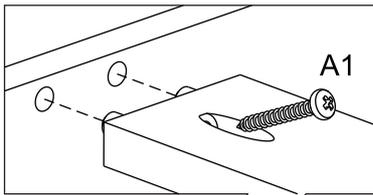

Attention: There are no predrilled holes for the A1 screws on parts 03 and 22.





5)

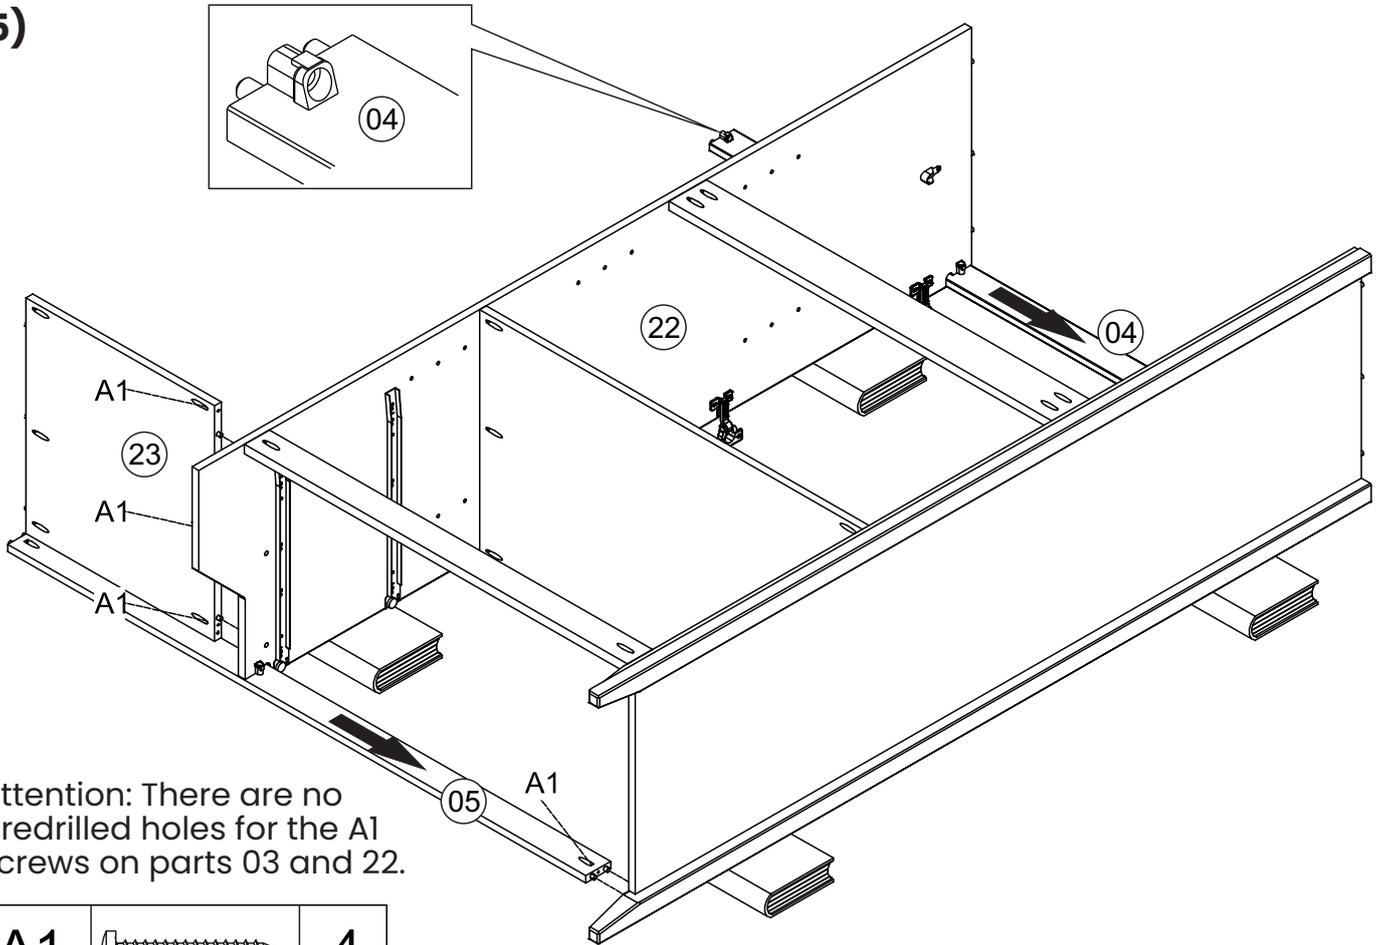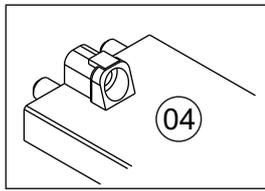


Attention: There are no predrilled holes for the A1 screws on parts 03 and 22.

A1		4
	4,0x30	

6)

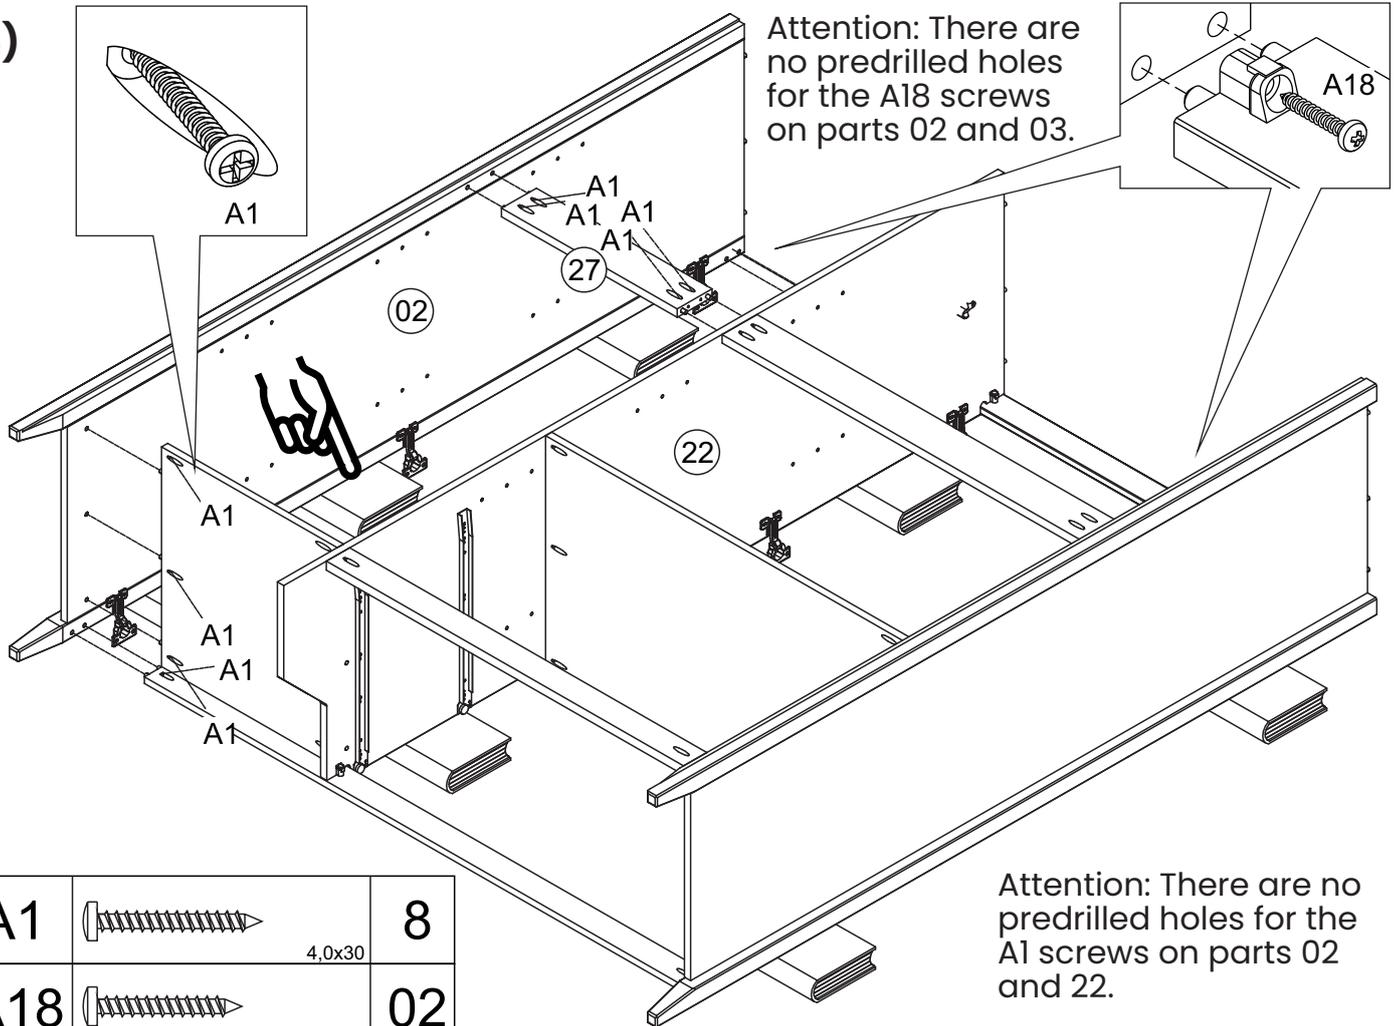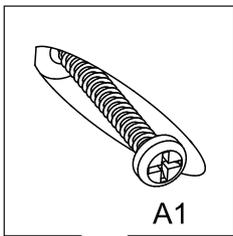

Attention: There are no predrilled holes for the A18 screws on parts 02 and 03.

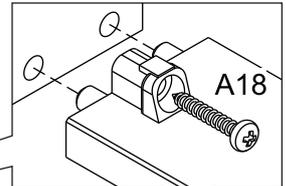

A1		8
	4,0x30	
A18		02
	4,0x25	

Attention: There are no predrilled holes for the A1 screws on parts 02 and 22.

7)

Attention: There are no predrilled holes for the A18 screws on parts 04 and 05.

Attention: There are no predrilled holes for the A16 screws on parts 02, 03 and 22.

**ATTENTION**  
Make sure the Finished surface is facing the inside of the Wardrobe




A16		9
A18		2

8)

Make sure back panels are perfectly aligned with side panels and top and there are NO gaps.




G1		4
----	--	---

9)

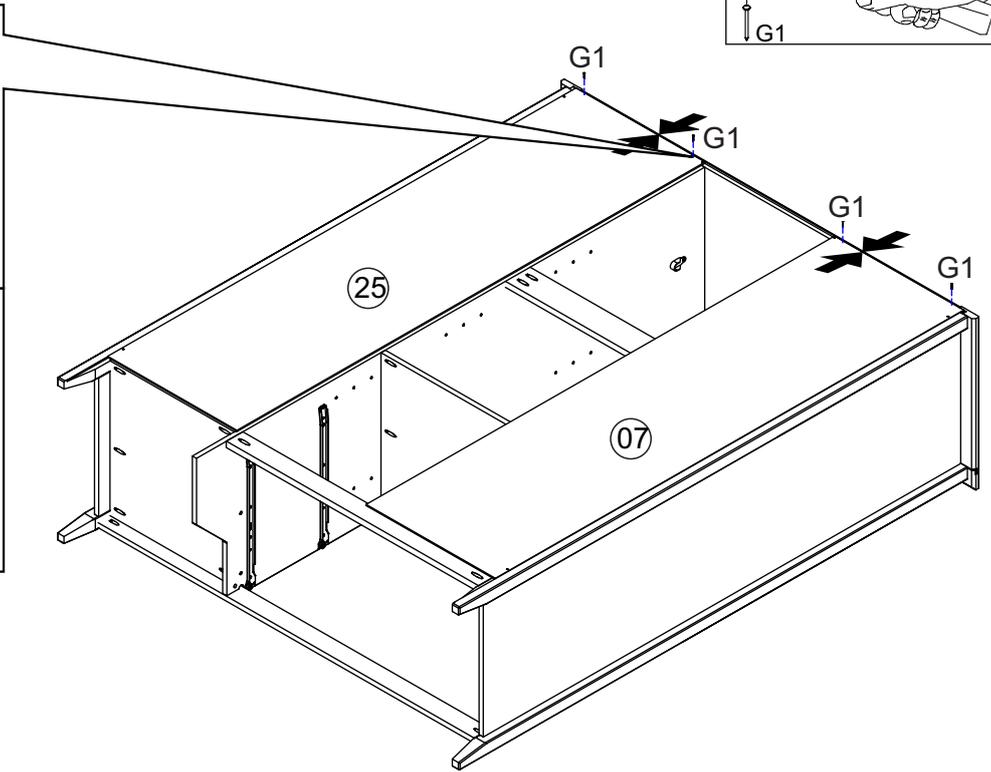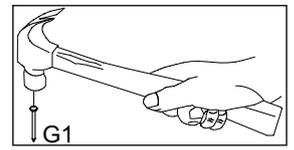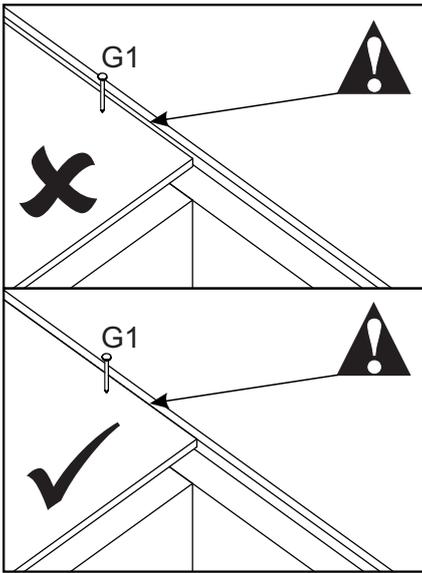




<b>G1</b>		<b>4</b>
	10x10	

10)

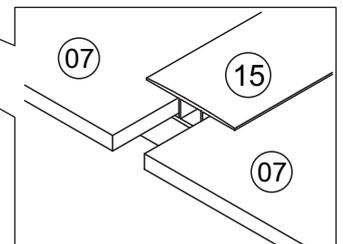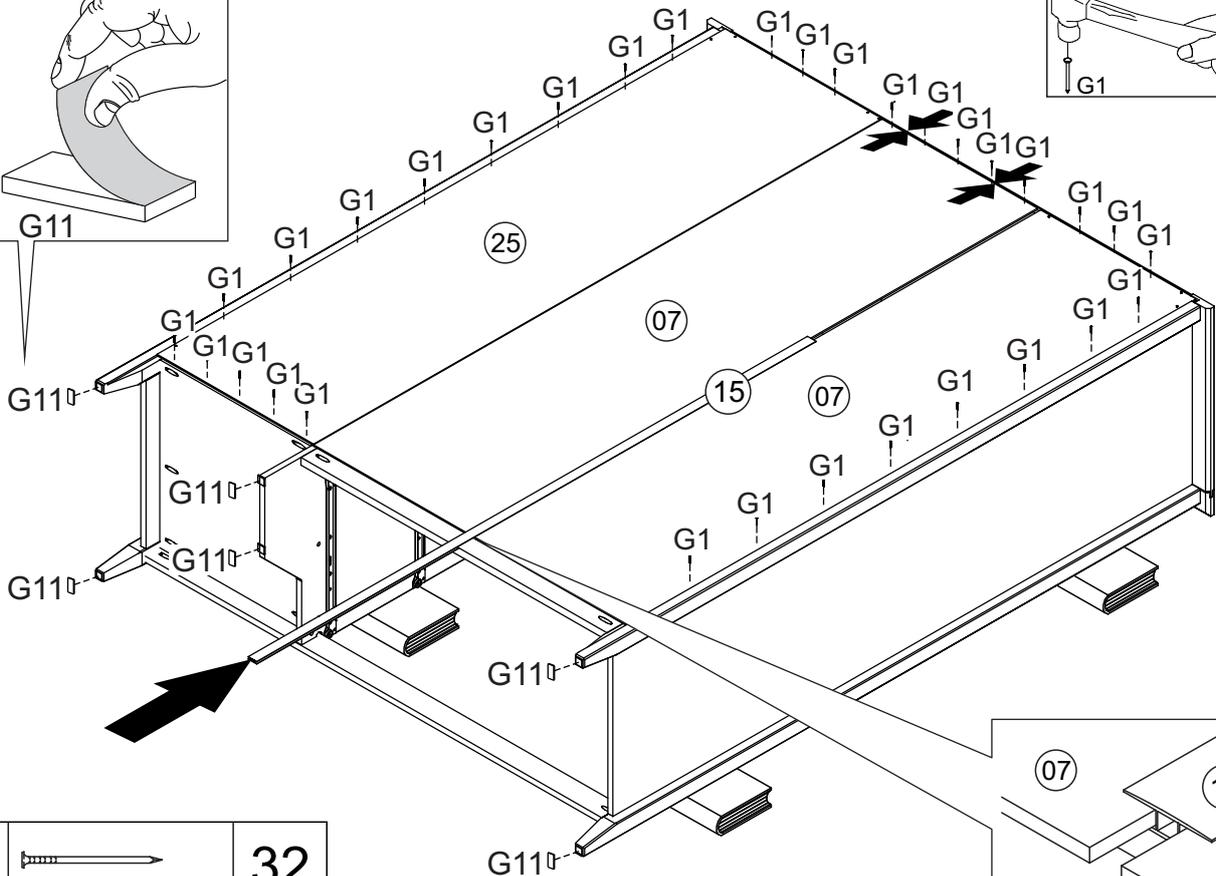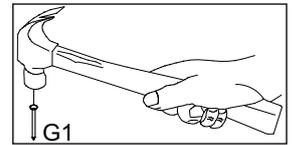

<b>G1</b>		<b>32</b>
	10x10	
<b>G11</b>		<b>6</b>

11)

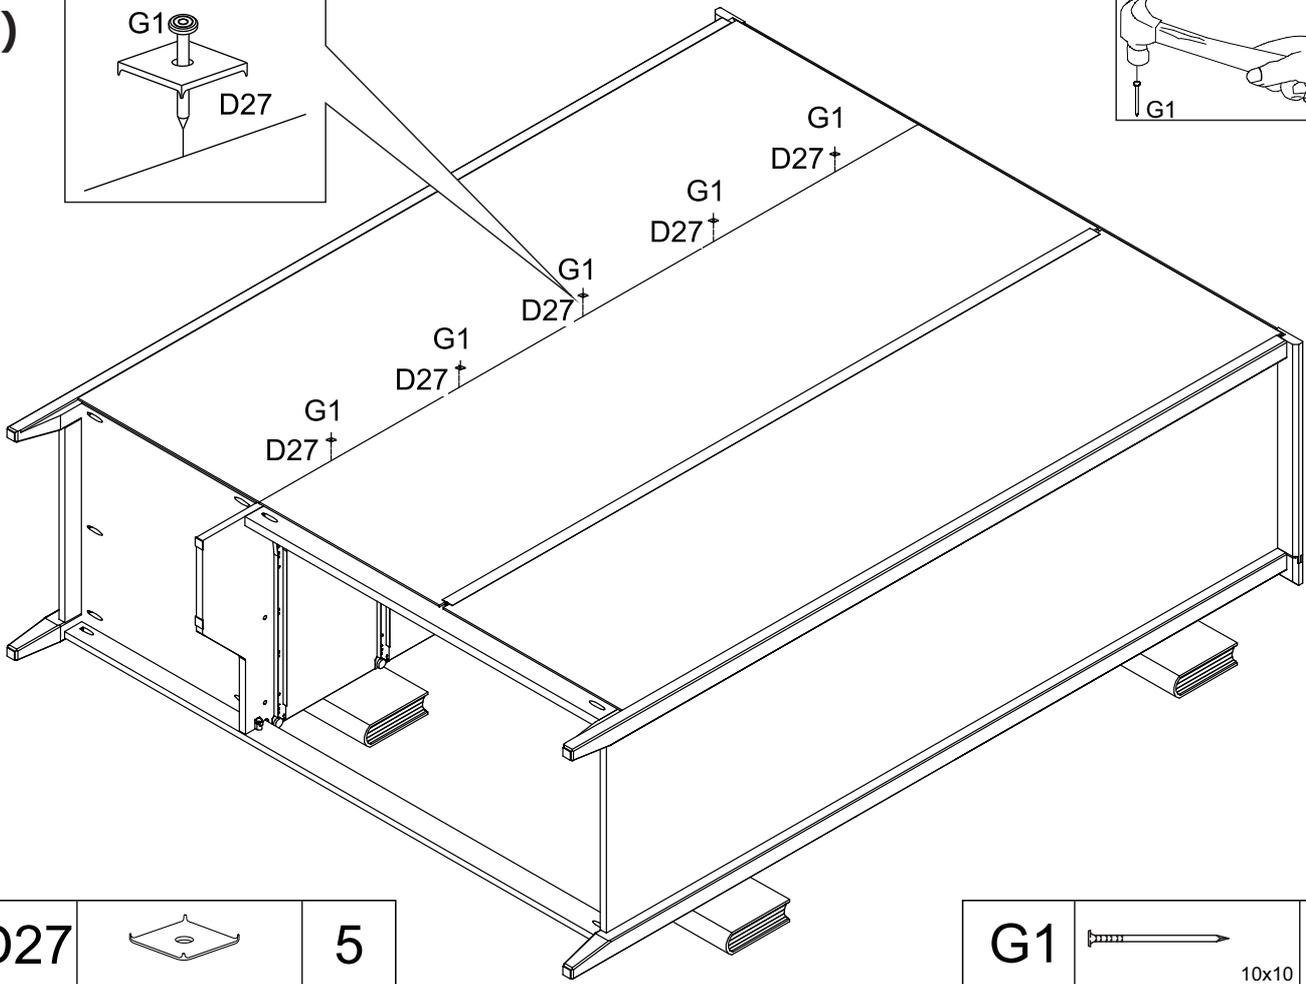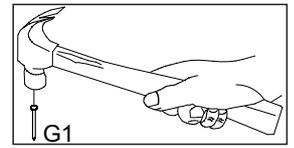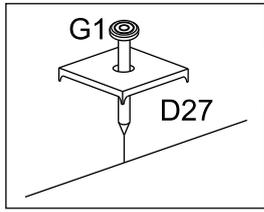


D27		5
-----	---	---


G1		5
10x10		

12)


Attention: There are no predrilled holes for the A9 screws on parts 06, 07 and 25.

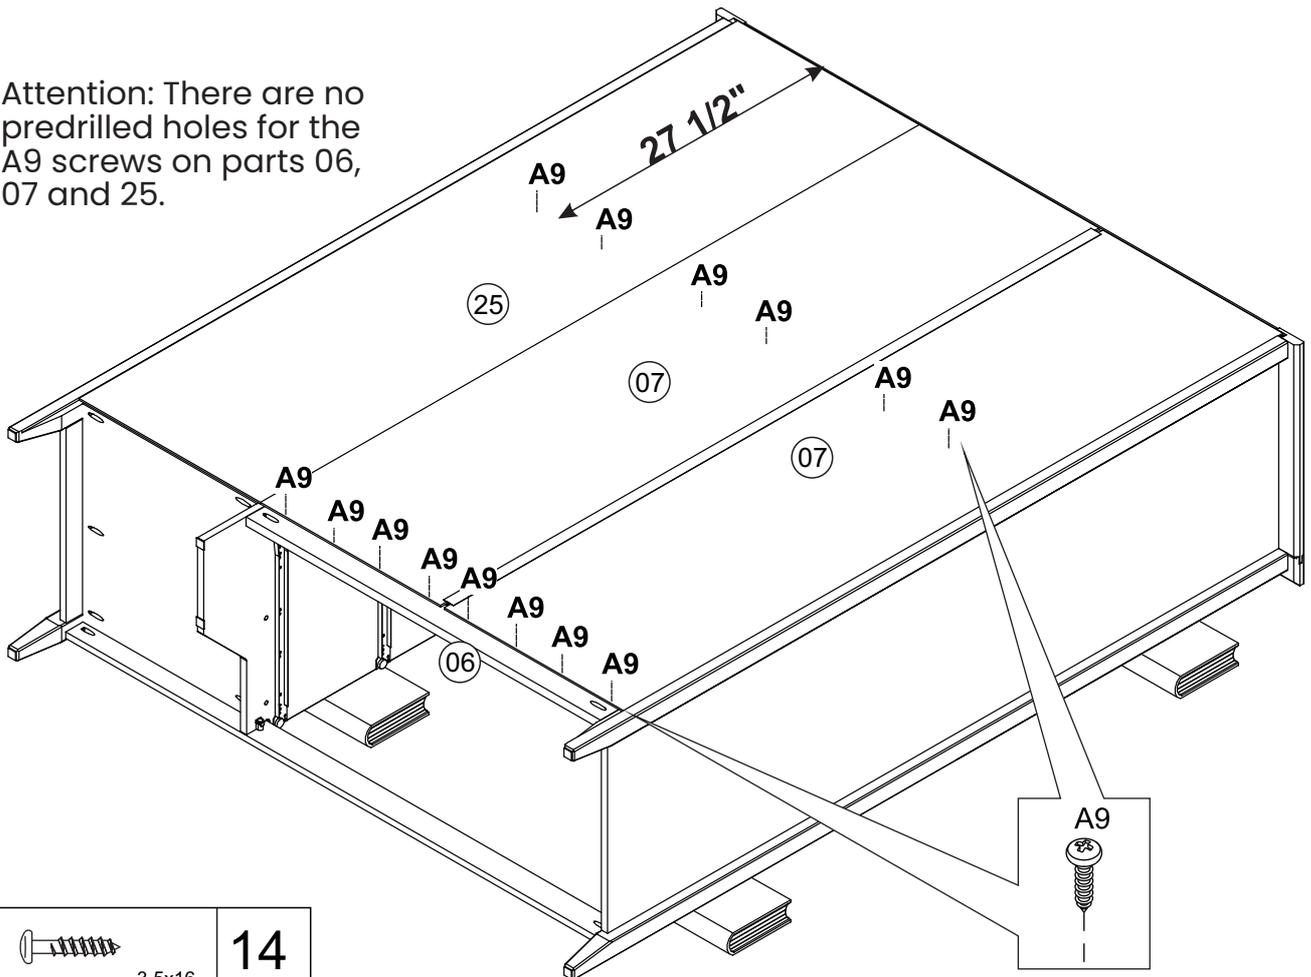


A9		14
3,5x16		

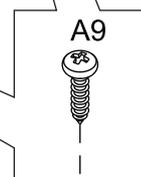


13)

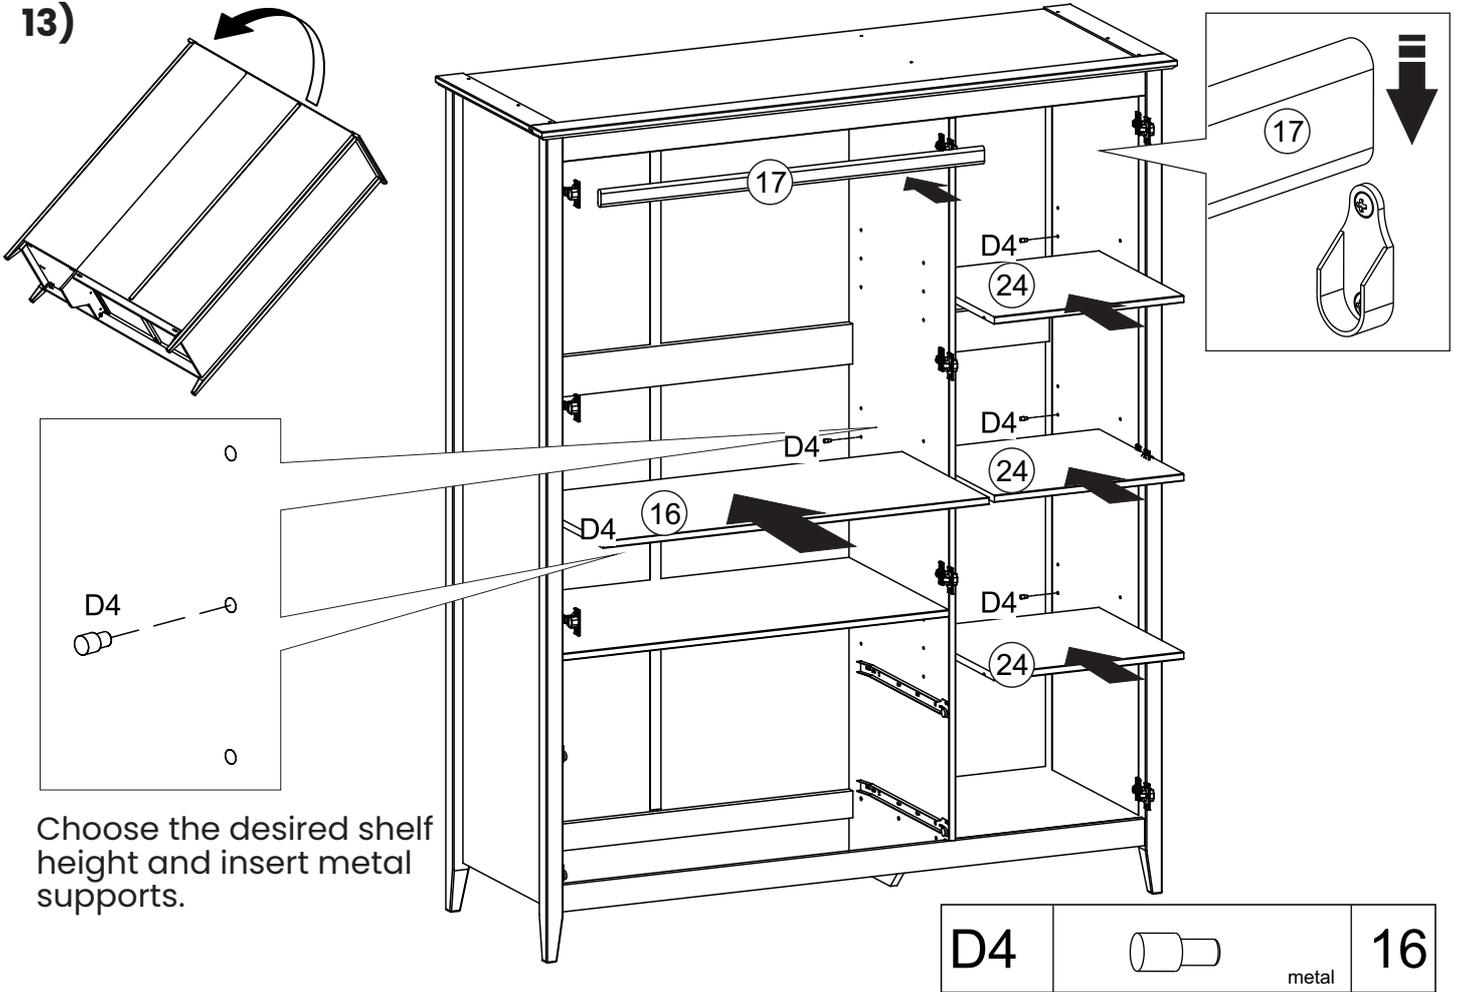


14)

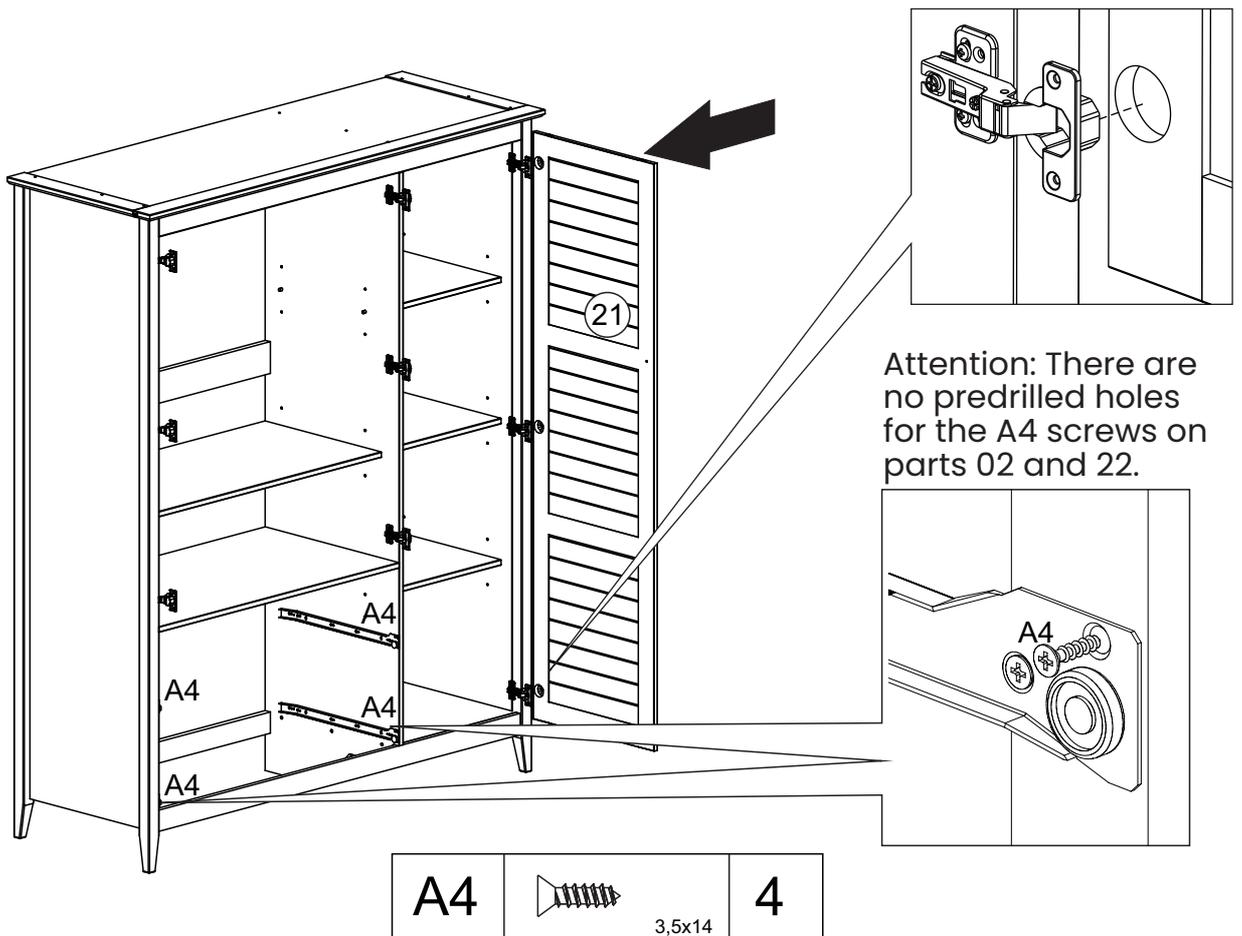


15)

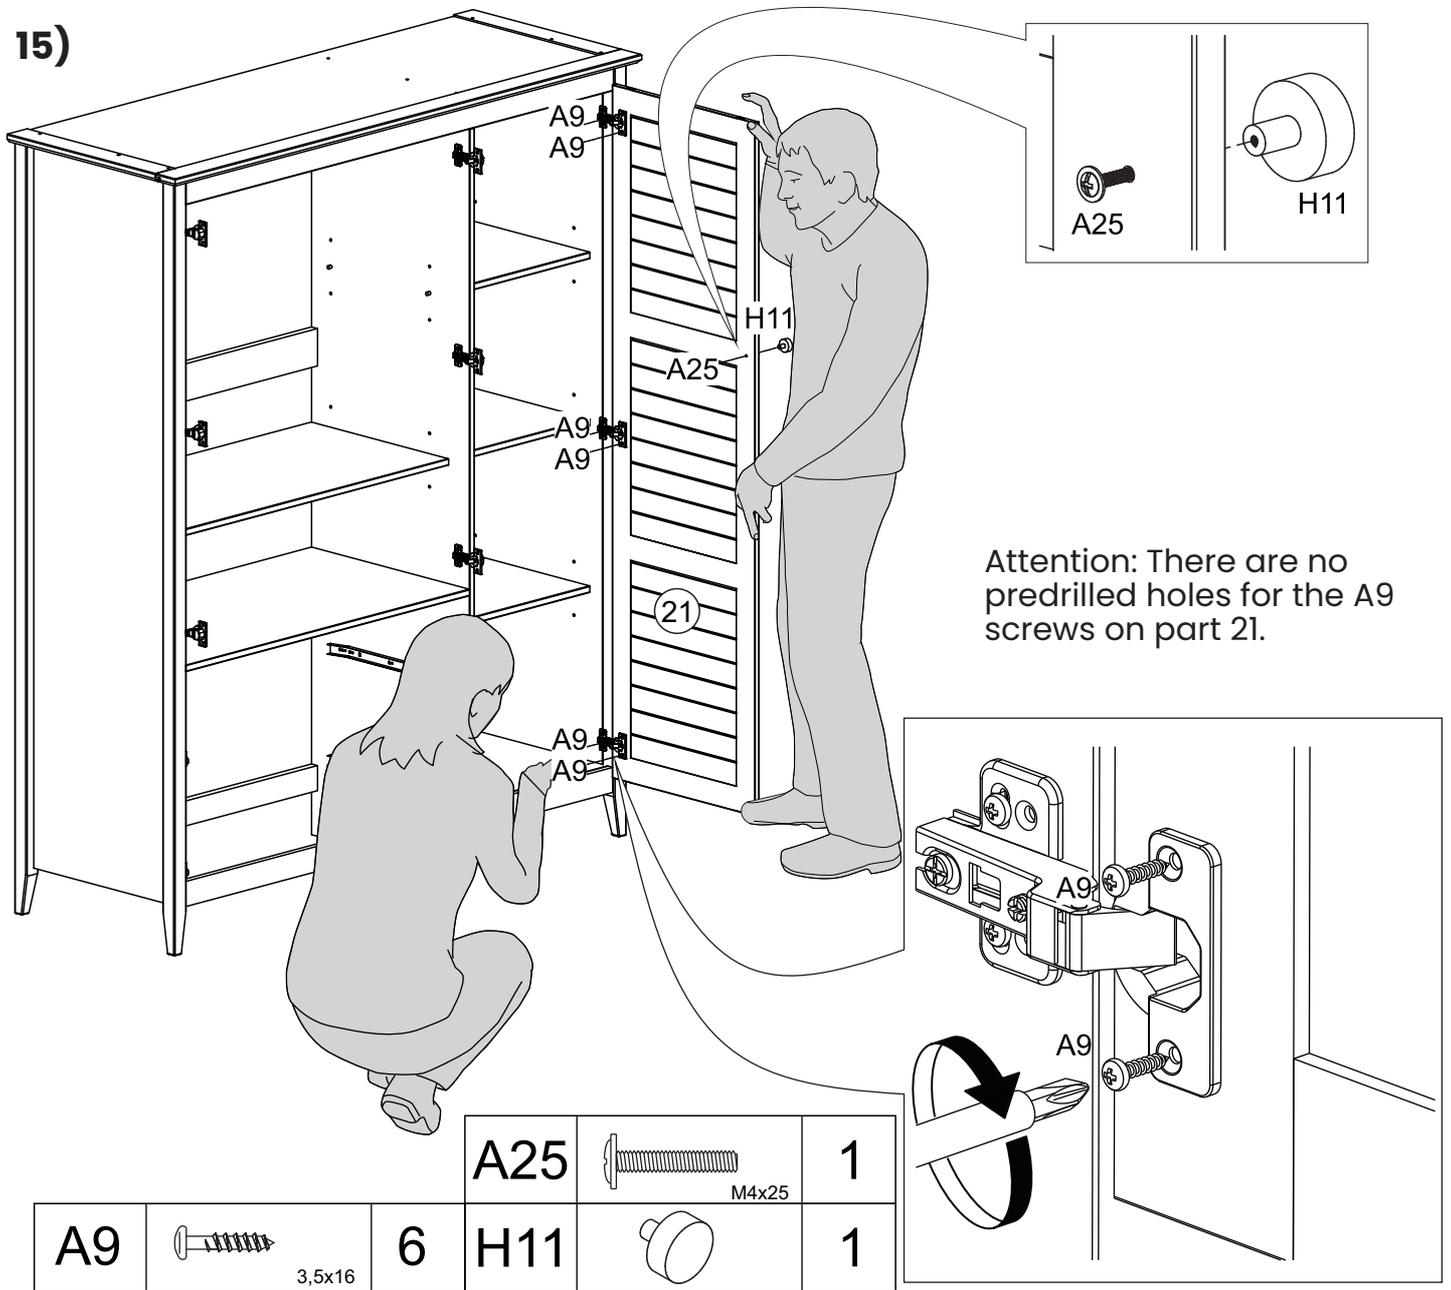


16)

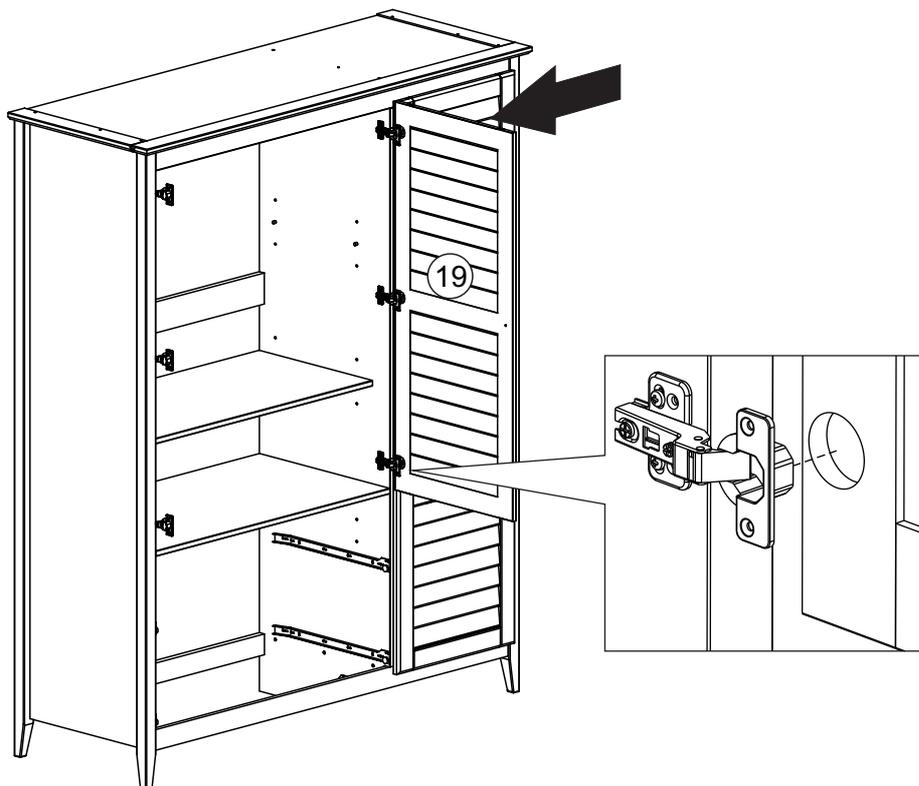

17)

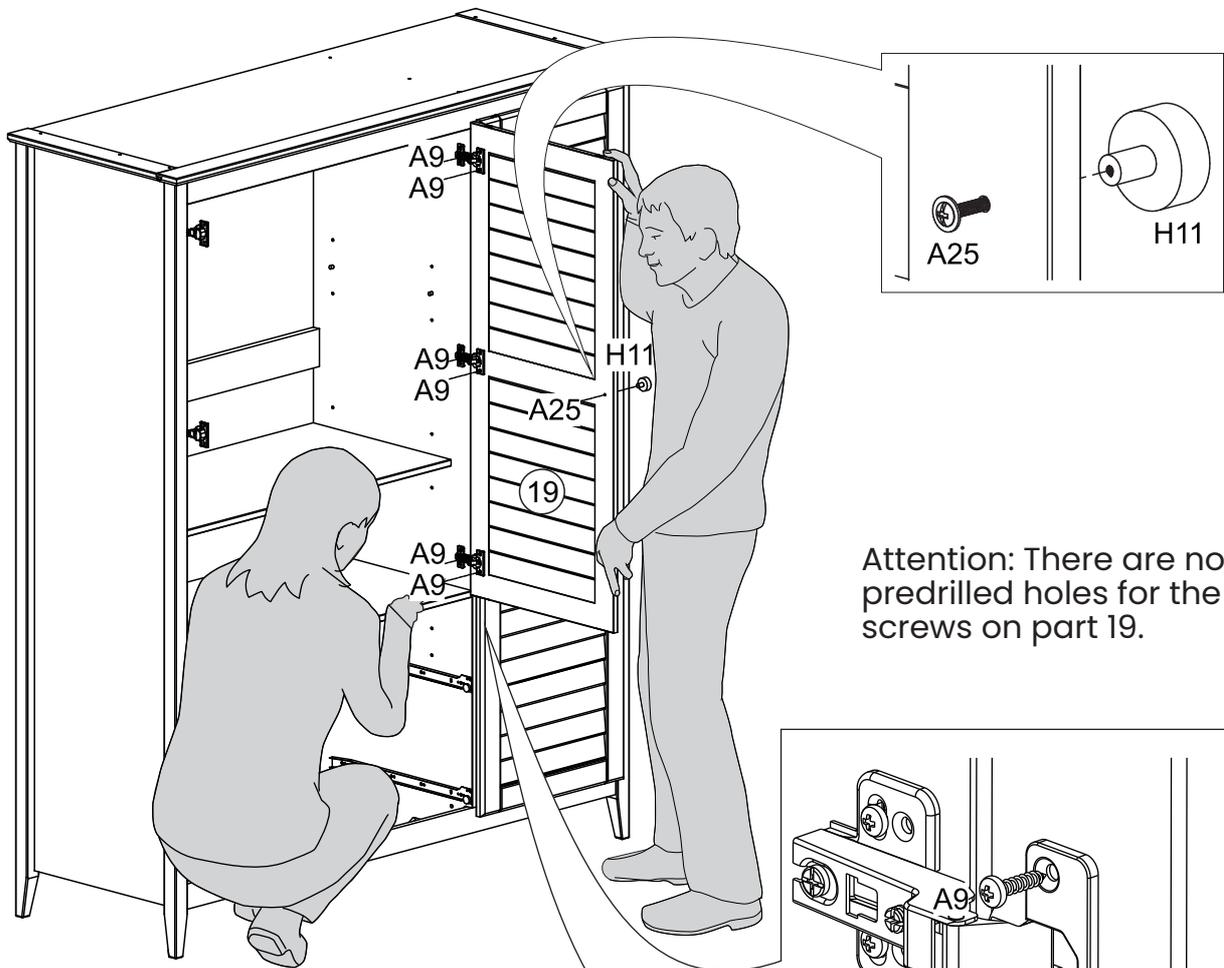


Attention: There are no predrilled holes for the A9 screws on part 19.

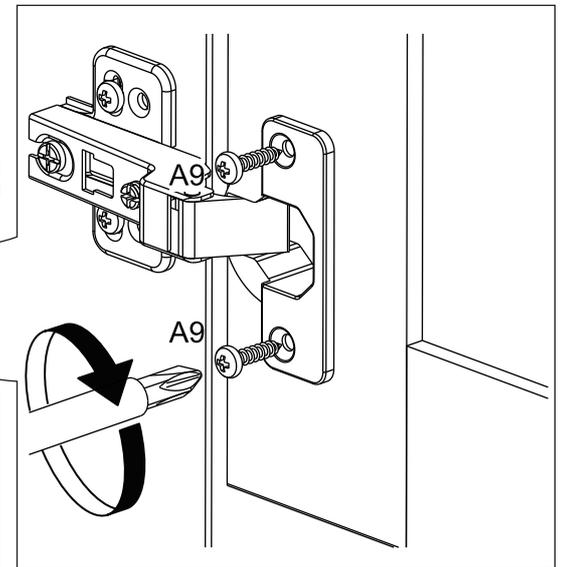


			A25		1
A9		6	H11		1
	3,5x16			M4x25	

18)

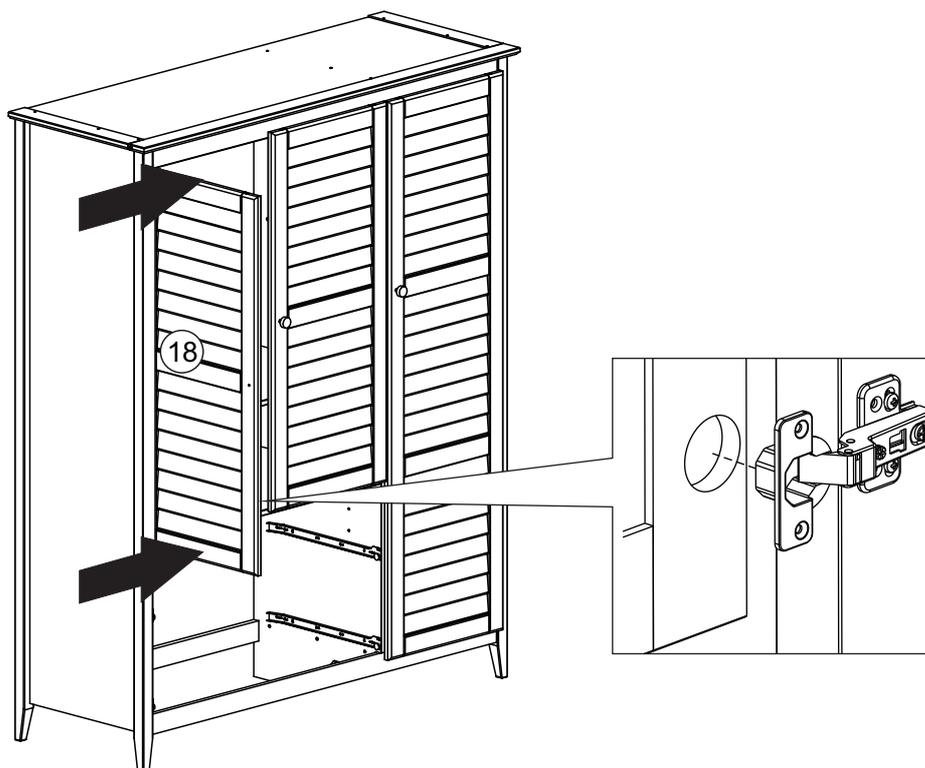













19)

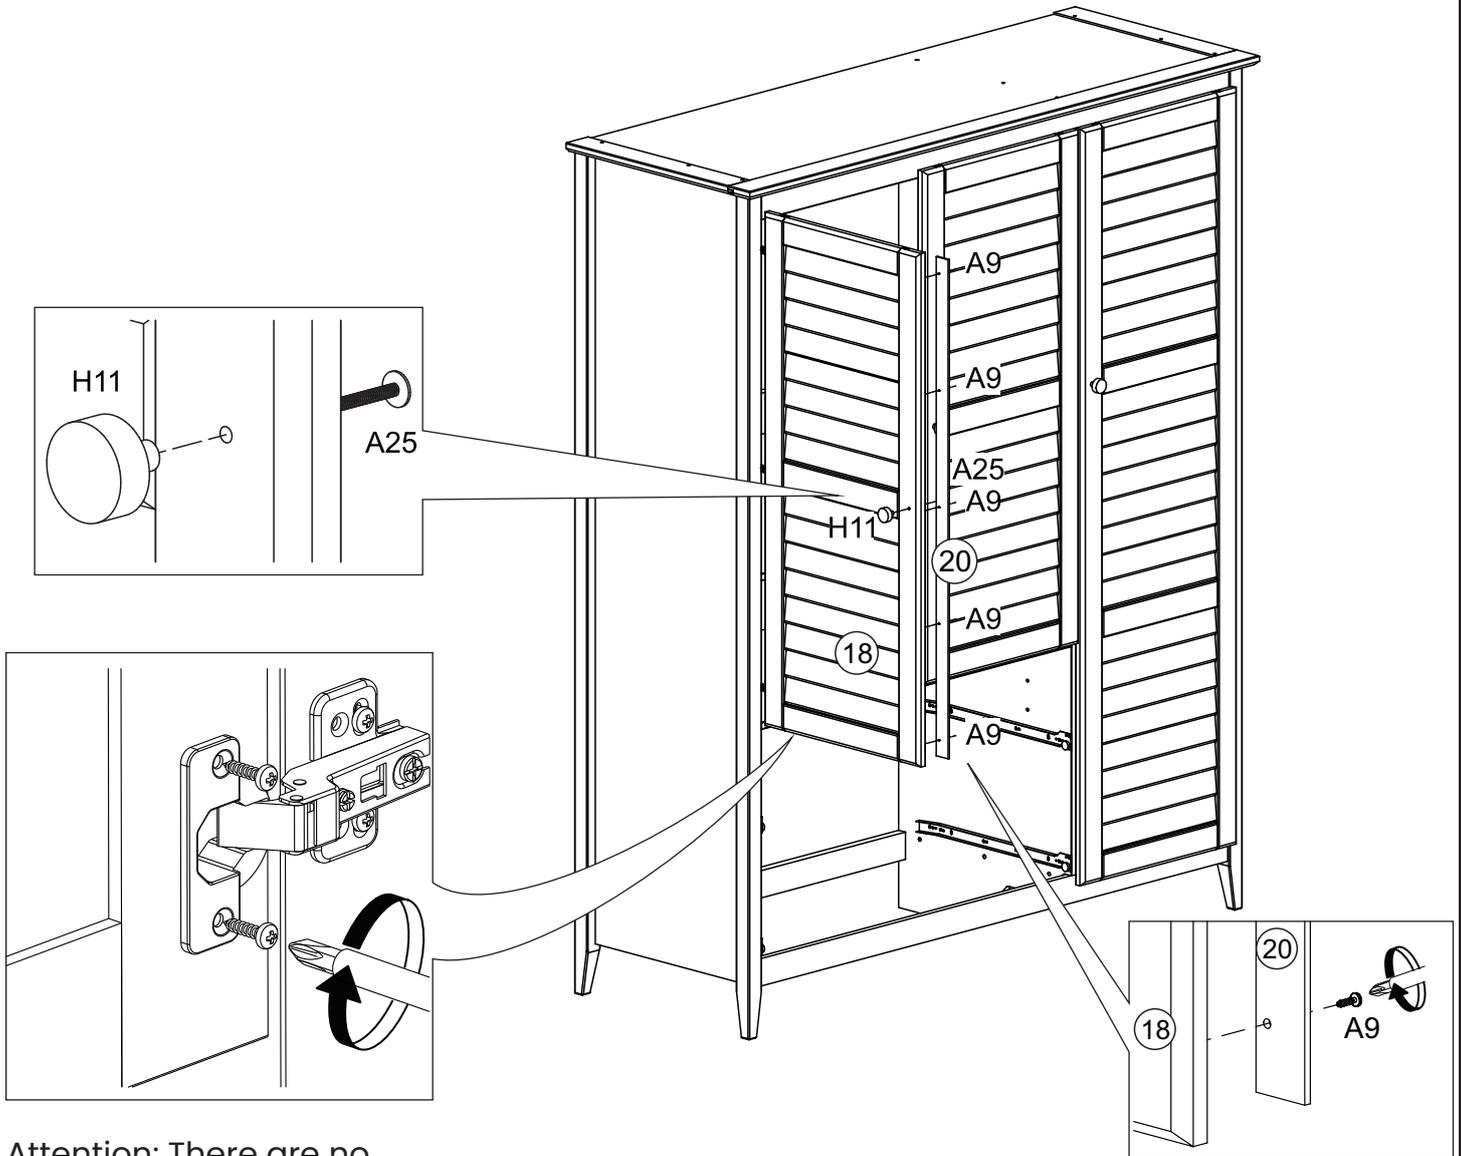

Attention: There are no predrilled holes for the A9 screws on part 18.




A9	 3,5x16	11	A25	 M4x25	1	H11		1
----	---	----	-----	--	---	-----	---	---

20)

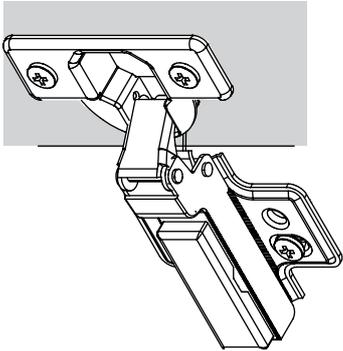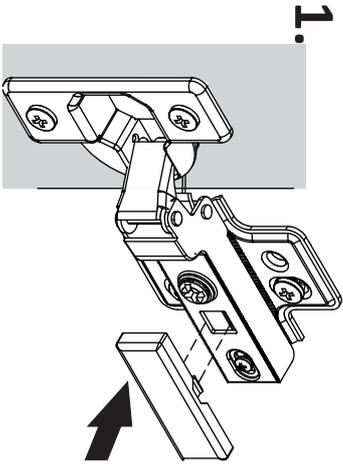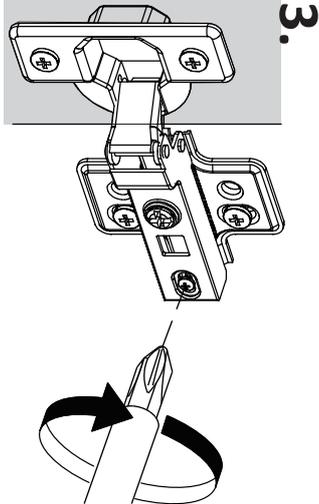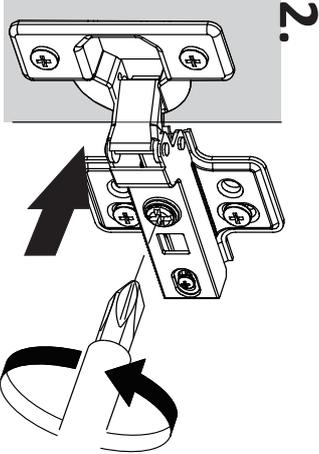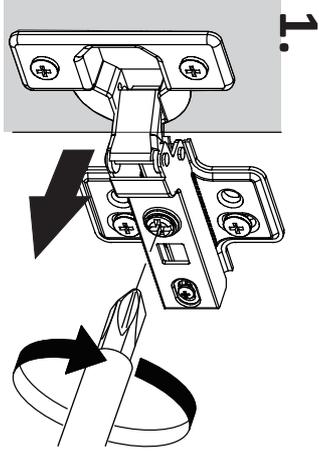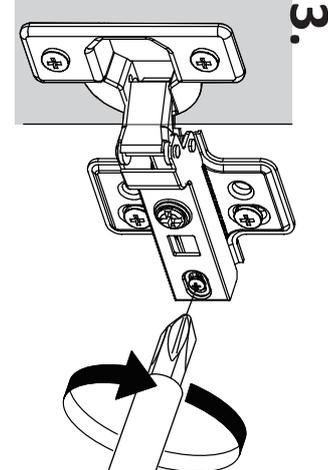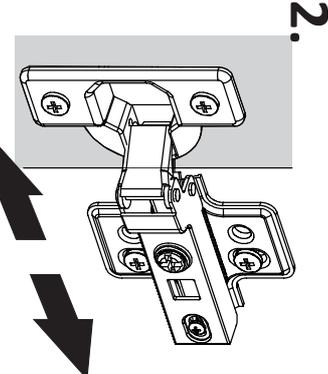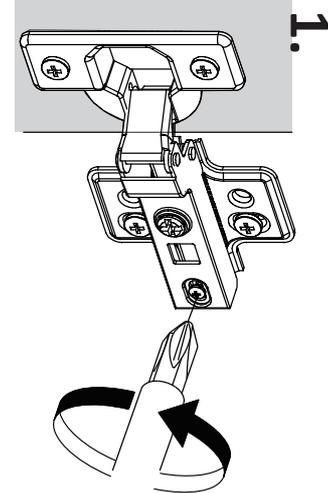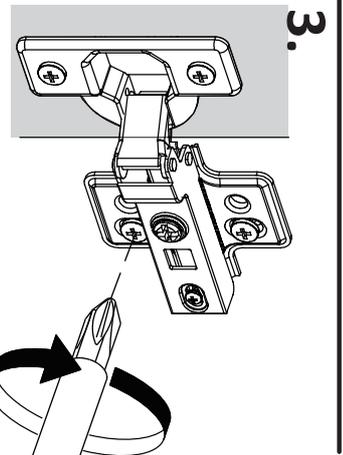
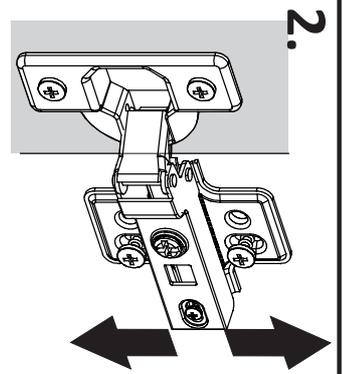
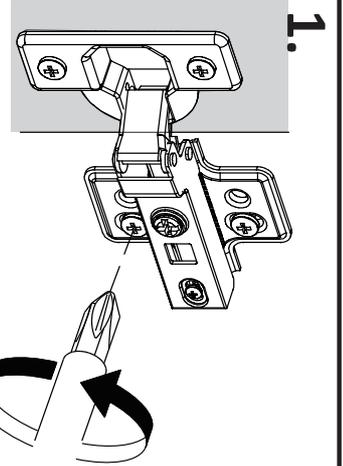
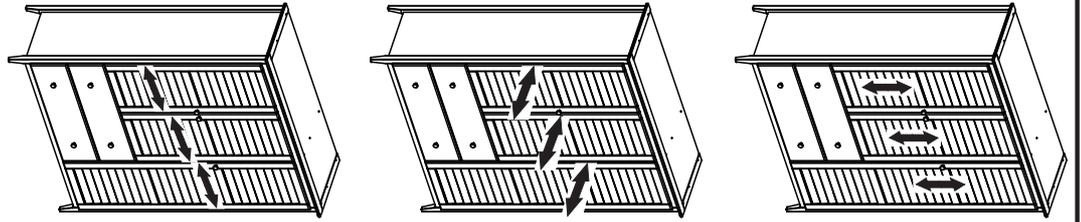



21)

2x

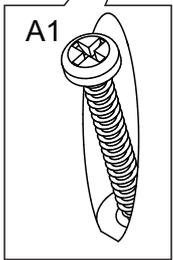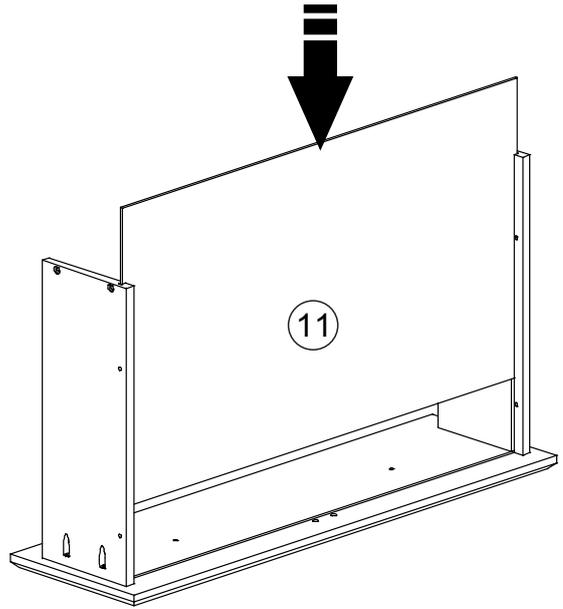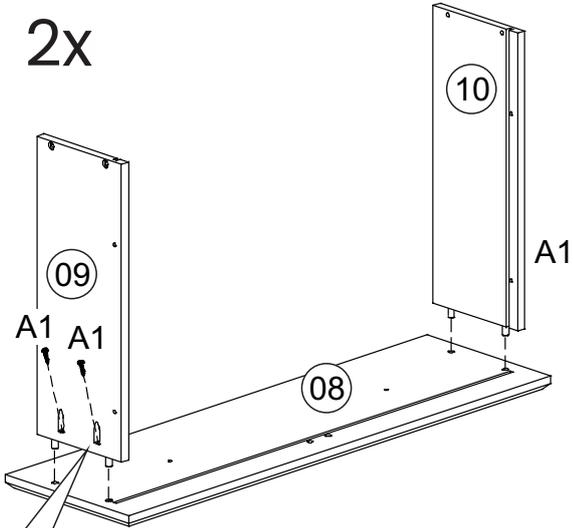


Attention: There are no predrilled holes for the A1 screws on part 08.

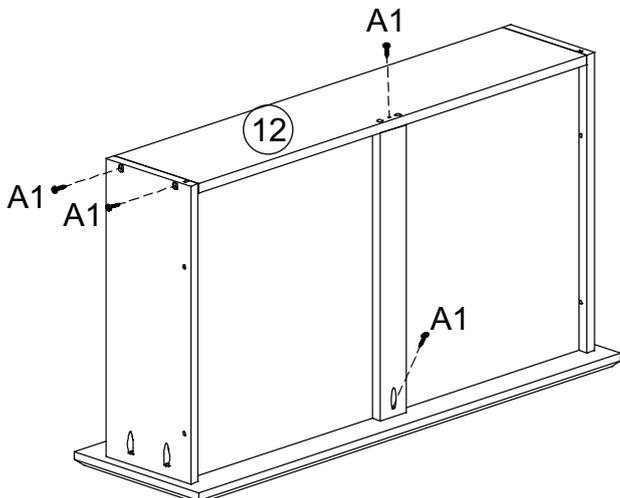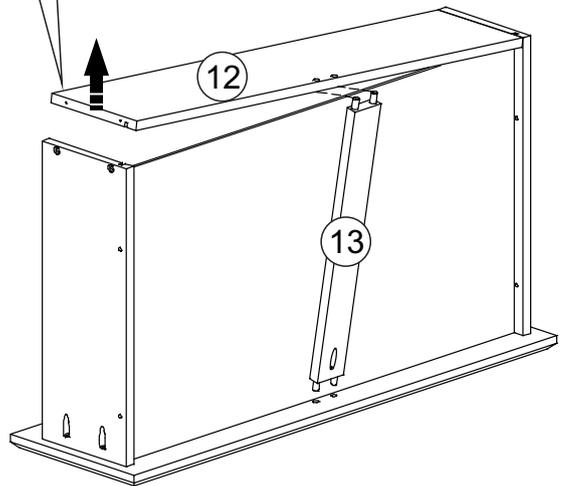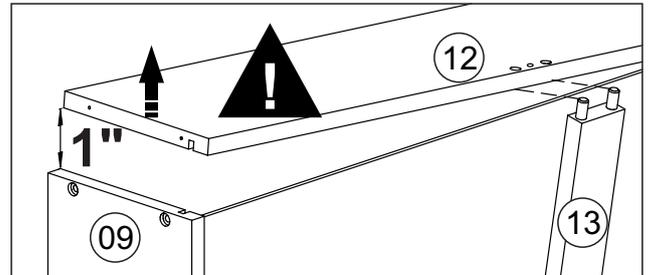
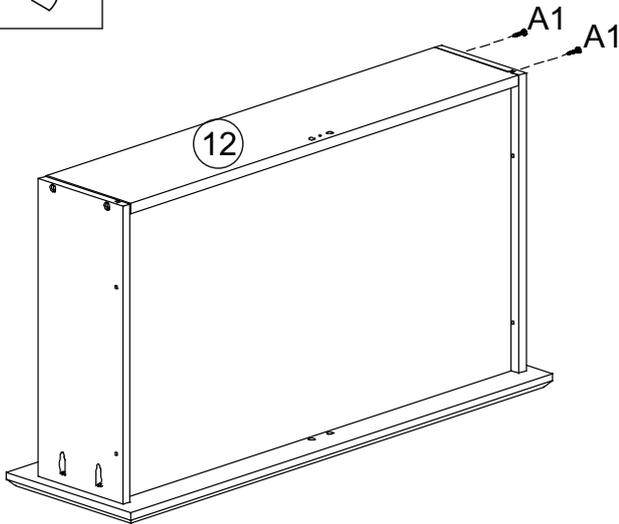


A1		20
		4,0x30


22) Flip the assembled drawer upside down to install glides.


2x

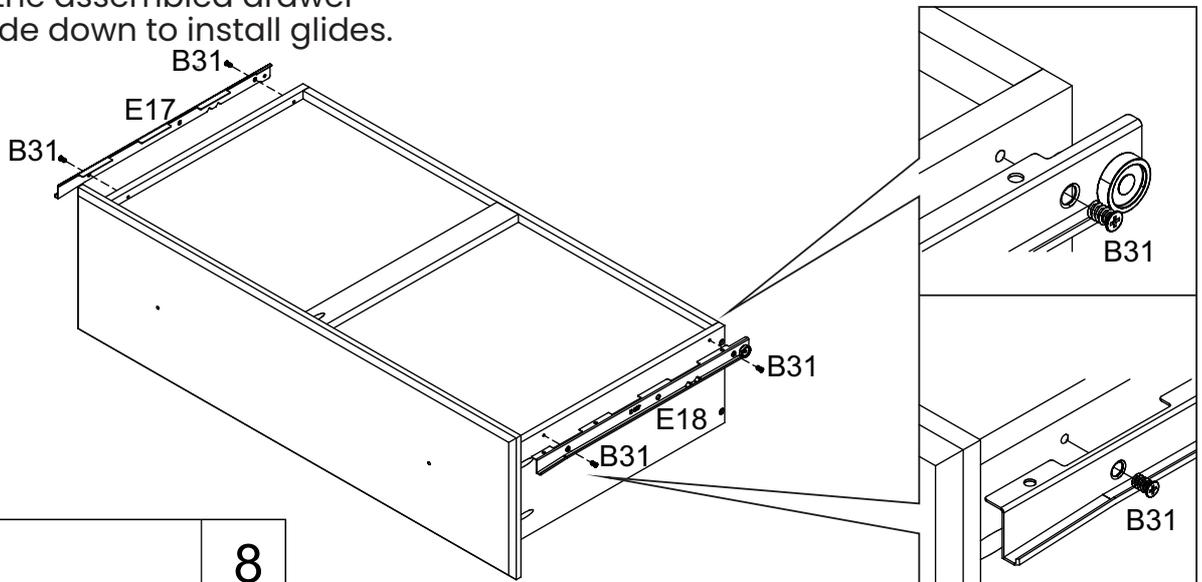


B31		6,0x10	8
E17		Drawer RIGHT	2
E18		Drawer LEFT	2
	450mm - 17 3/4"		

23) 2x

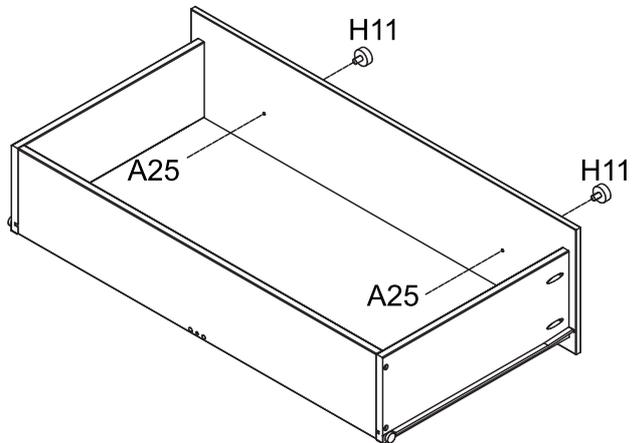


A25		M4x25	4
H11			4

24)





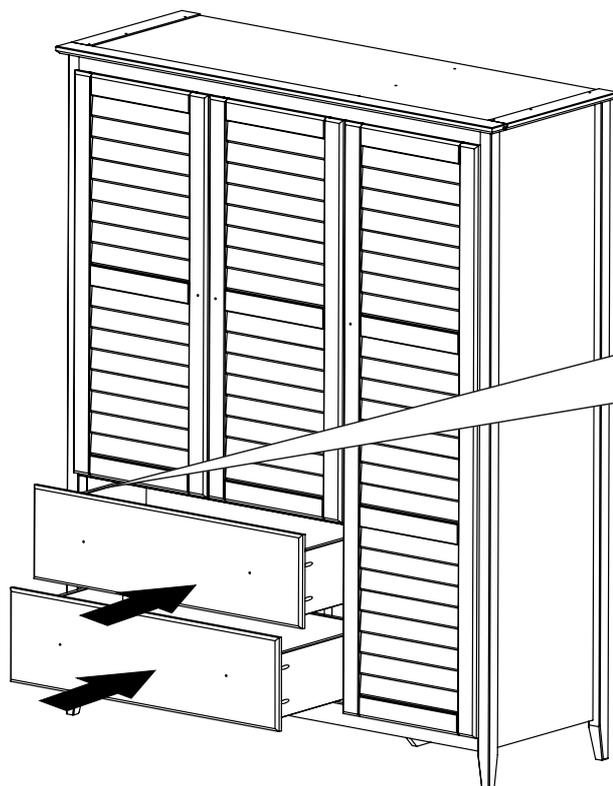



Place the labeled drawer on the top position.

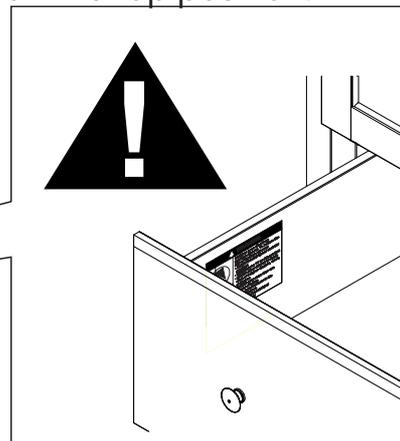

25)

# ANTI-TIPPING RESTRAINT KIT

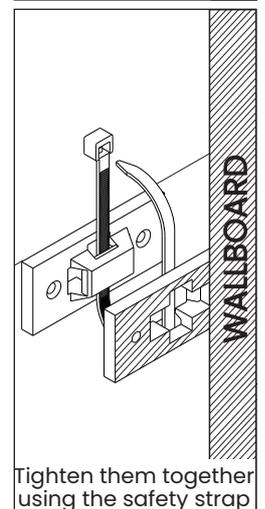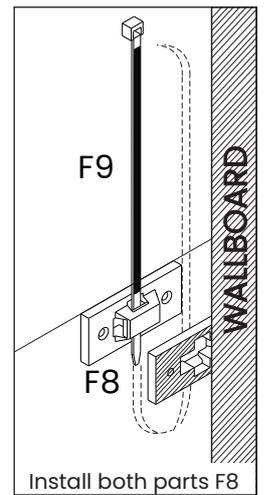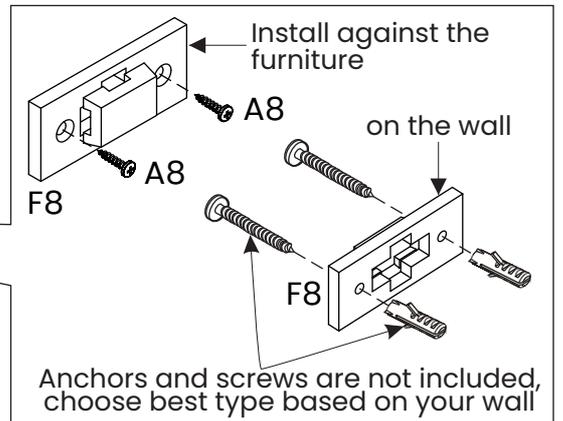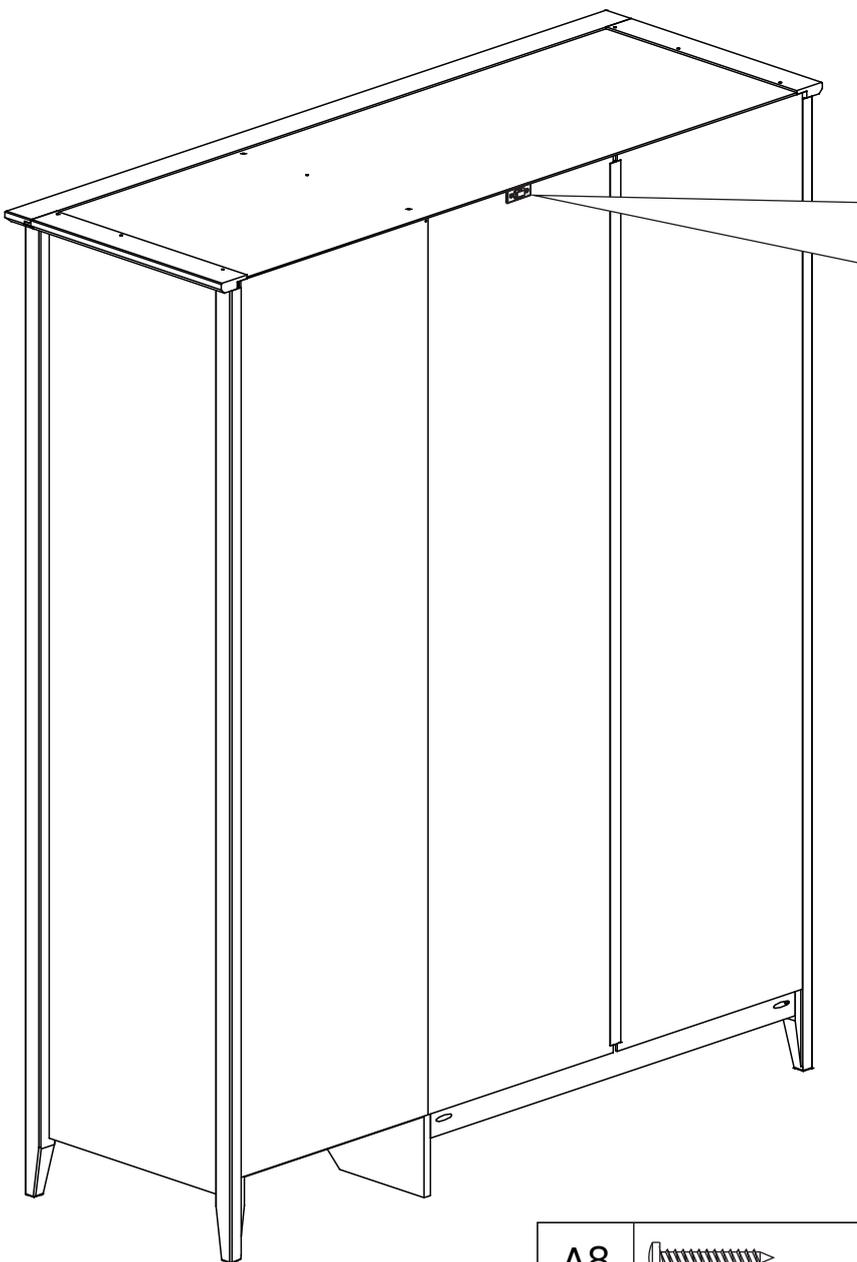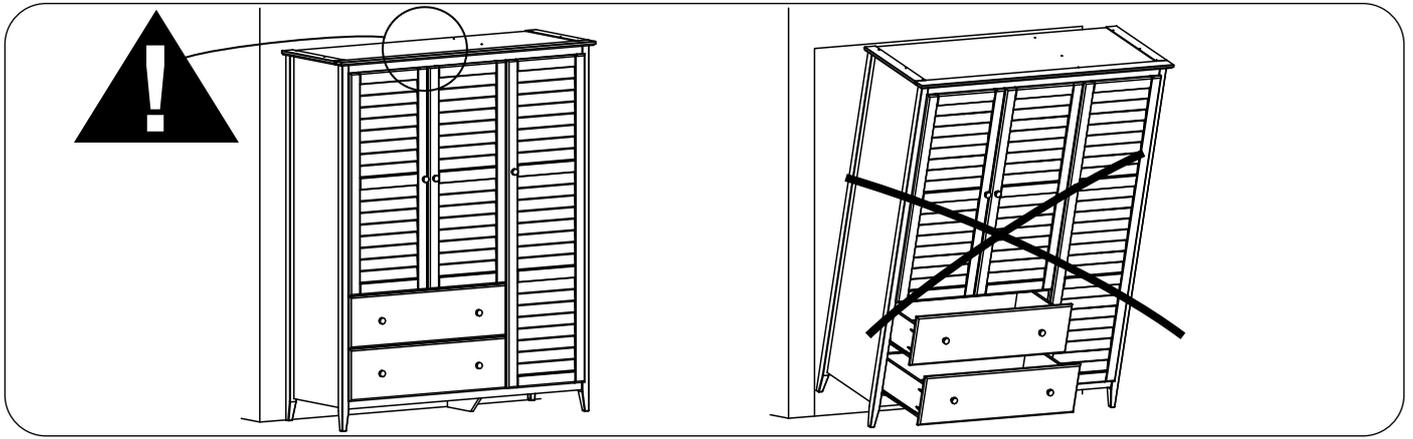

A8		3,0x20	2
F8			2
F9			1