

STANDARD HEADBOARD ASSEMBLY

HEADBOARD COMPONENTS



(1) Headboard*



(2) metal legs

*images might vary from actual product

HEADBOARD HARDWARE



(4) 5/8" x 5/16" bolts



(12) 1/4" washers



(4) 1" x 1/4" bolts



(4) 1/4" nuts

You will need:

- flat head screwdriver
- pliers


*Open all hardware packets in both packages before starting assembly.

LIMITED WARRANTY

LIMITE DE GARANTIA

GARANTIE LIMITÉE

STEP 1

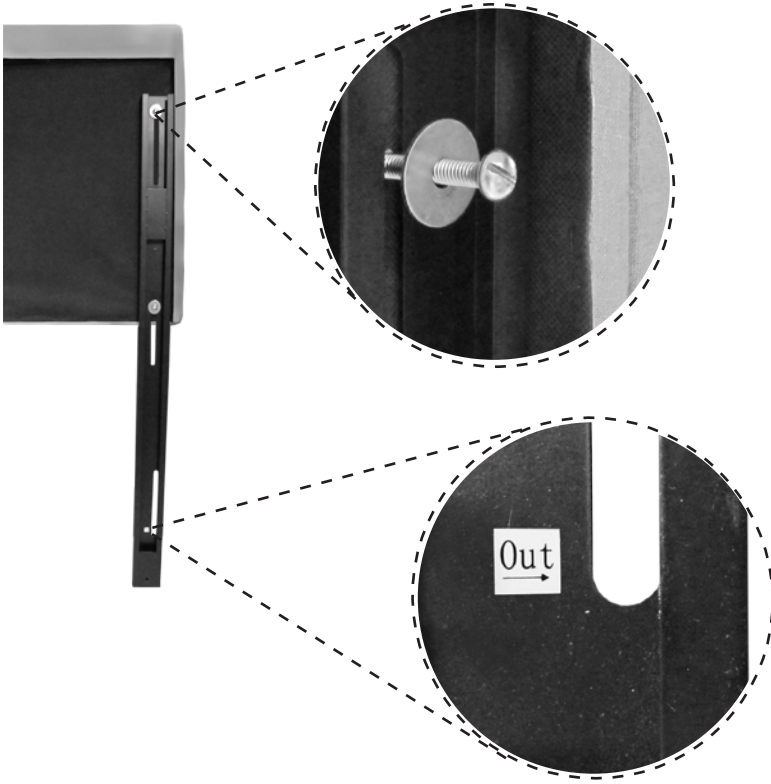

Place metal legs on the headboard, line up the slots to the holes in the headboard. Make sure that you place the correct leg facing “Out.”

Attach the metal legs to the headboard with (2) 5/8” x 5/16” bolts and (2) 1¼” washers for each leg.