

# STANDARD HEADBOARD ASSEMBLY

## HEADBOARD COMPONENTS



(1) Headboard\*



(2) metal legs

\*images might vary from actual product

## HEADBOARD HARDWARE



(4) 5/8" x 5/16" bolts



(12) 1 1/4" washers



(4) 1" x 1/4" bolts



(4) 1/4" nuts

You will need:

- flat head screwdriver
- pliers

\*Open all hardware packets in both packages before starting assembly.


LIMITED WARRANTY

LIMITE DE GARANTIA

GARANTIE LIMITÉE

## STEP 1

---

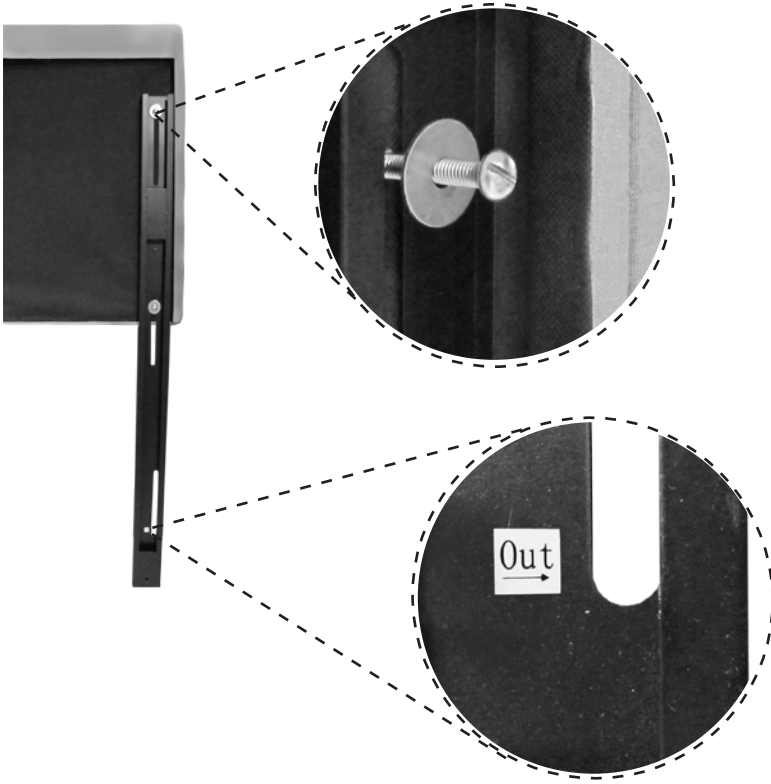

*Place metal legs on the headboard, line up the slots to the holes in the headboard. Make sure that you place the correct leg facing “Out.”*

*Attach the metal legs to the headboard with (2)  $\frac{5}{8}$ ” x  $\frac{5}{16}$ ” bolts and (2)  $1\frac{1}{4}$ ” washers for each leg.*