


BARSTOOL

HARDWARE LIST

- A (7) Allen Bolts 1/4" x 5/8"
- B (7) Spring Washers
- C (7) Flat Washers
- D (1) Allen Wrench M4

PARTS LIST

- E (1) Seat Base
- F (1) Stool Base
- G (1) Stool Stand
- H (1) Foot Rest
- J (1) Gas Lift

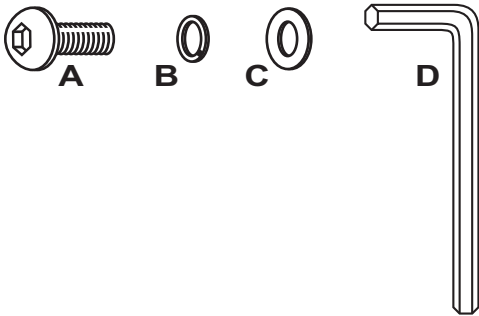

STEP 1

Begin assembly by turning the Seat Base (E) upside down and securing the Stool Stand (G) to the bottom with 4 Allen Bolts (A) to secure in place. Tighten all bolts using the Allen Wrench (B) that has been provided.

STEP 2

Attach the Foot Rest (H) to the Stool Stand (G) using 3 Allen Bolts (C) to secure in place. Tighten all bolts.

STEP 3

Next, attach the Stool Base (F) to the Stool Stand (G) by inserting in place using the Gas Lift (J). The assembly is complete.

