





ASSEMBLY INSTRUCTIONS

GRAND 3-DOOR WARDROBE










SKU 5692 - Mahogany











SKU 5694 - Honey Pine


SKU 5696 - Java

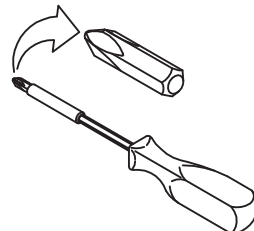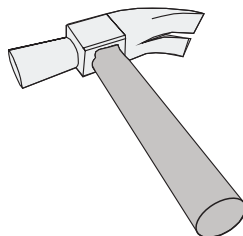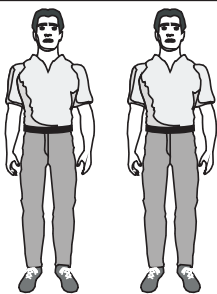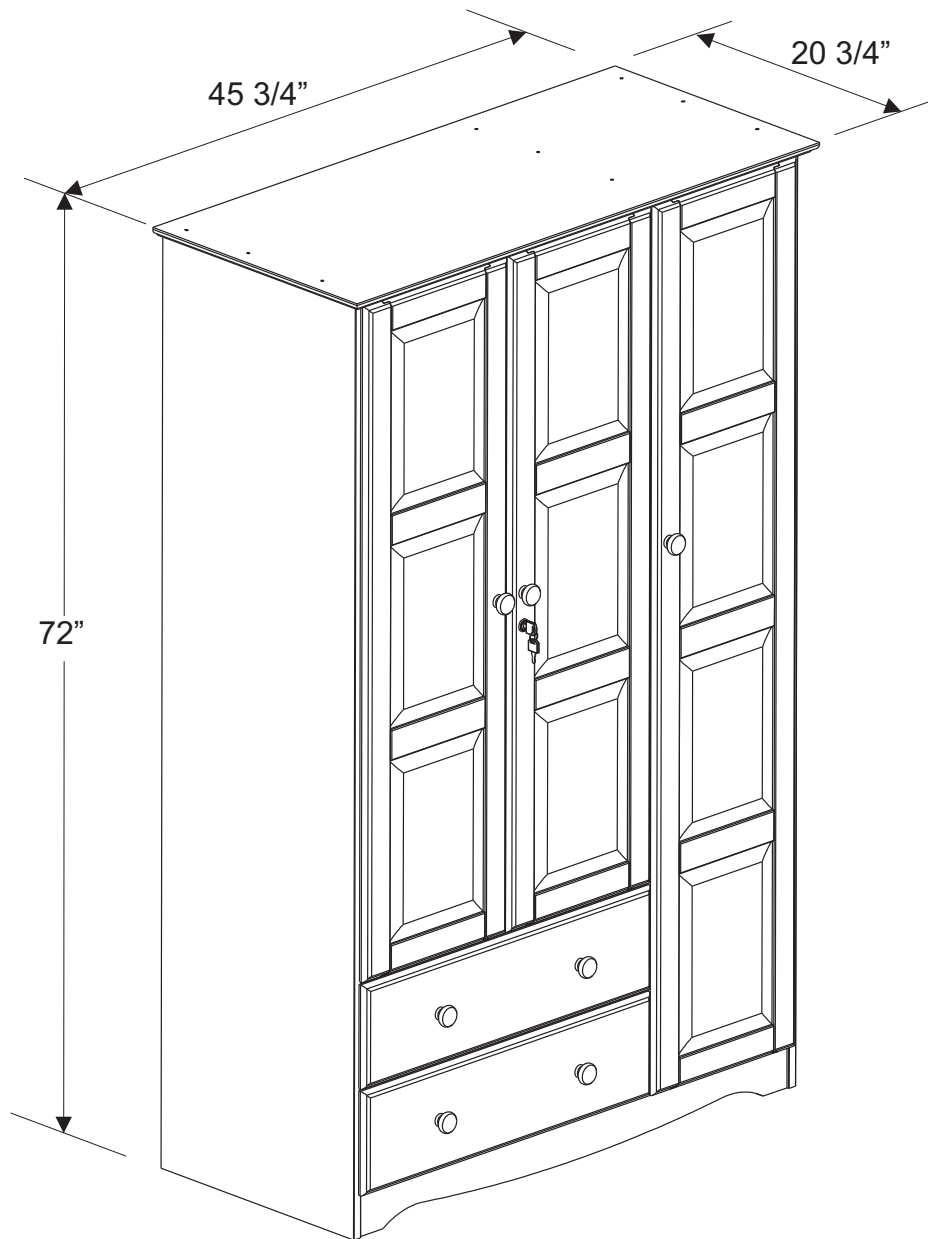


SCREWS ARE SHOWN IN ACTUAL SIZE




A1	 4.0x30	55
A4	 3.5x14	18
A9	 3.5x16	53
A16	 4.0x40	09
C2	 8.0x25	51
D3		02
D4		12
D10		02
D16		01



D27		05
E3	 400mm - 15 3/4"	02
E4	 400mm - 15 3/4"	02
F1	 31mm	01
F2		01
F3		02
F4		09
F5		09
G1	 10x10	70
H1		07

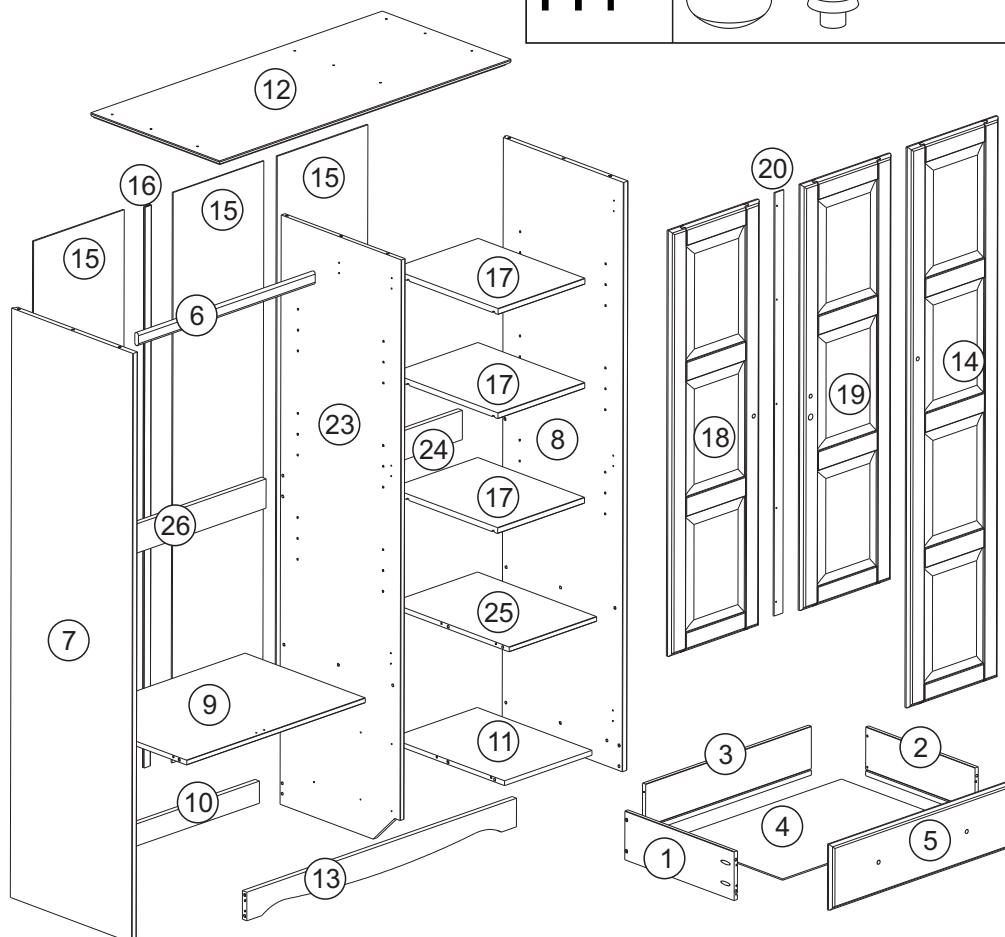

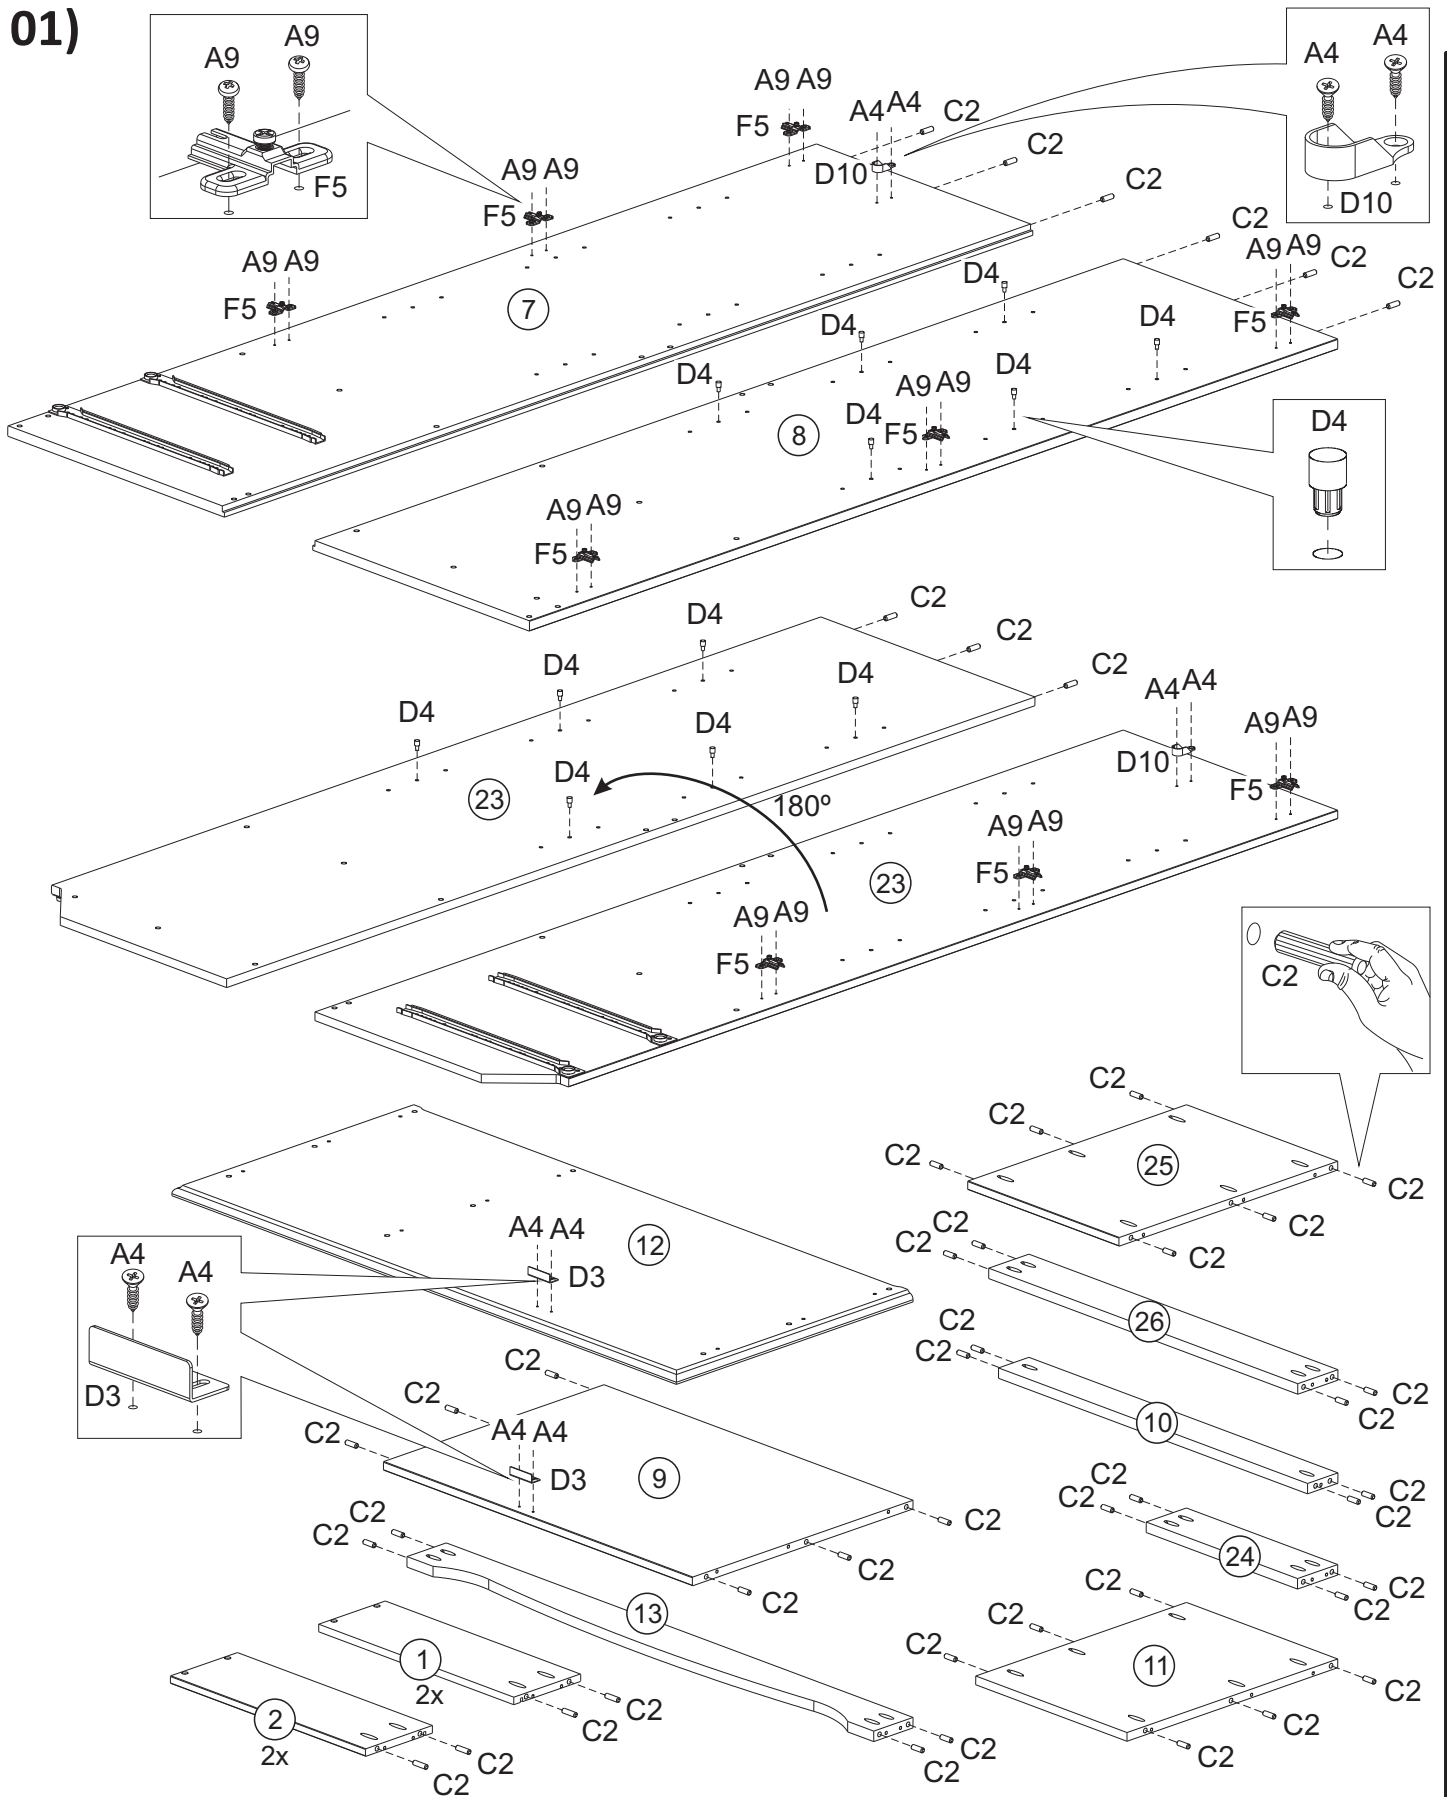

01)




A4		08
	3,5x14	
A9		18
	3,5x16	
C2		51
	8,0x25	


D3		02
D4		12

D10		02
F5		09


02)

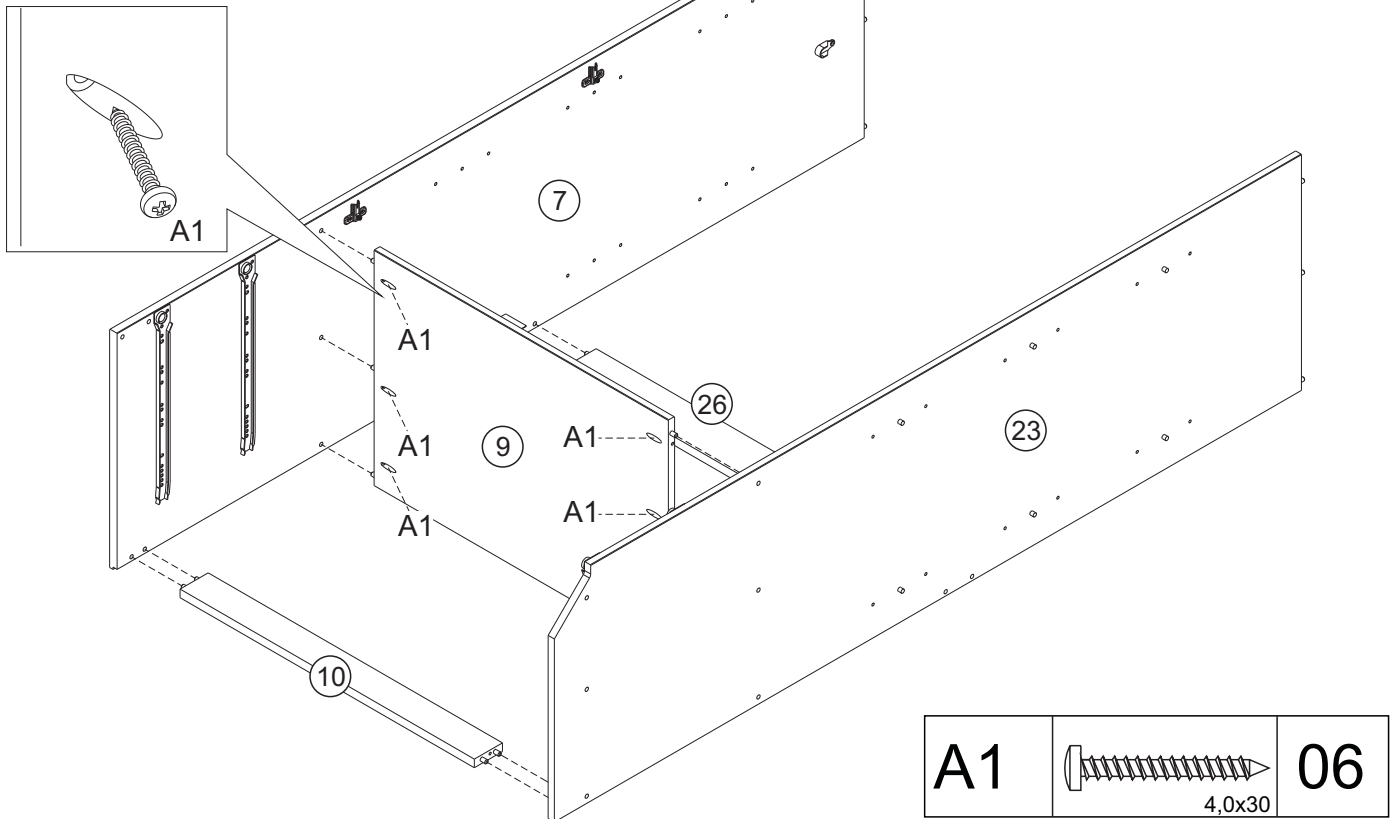


03)

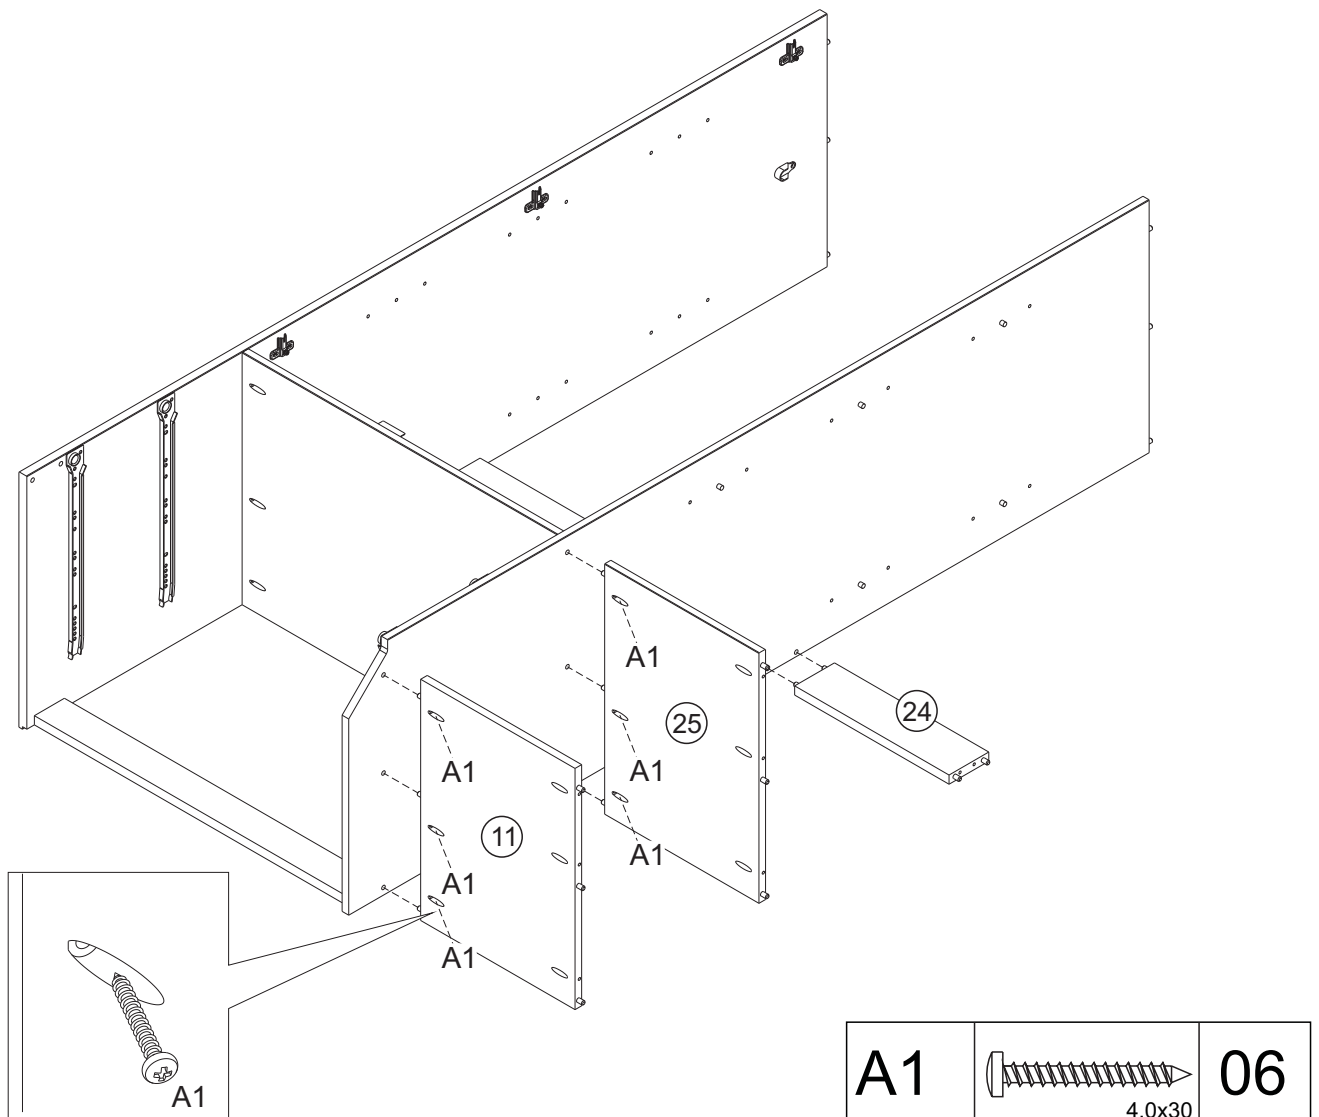


04)

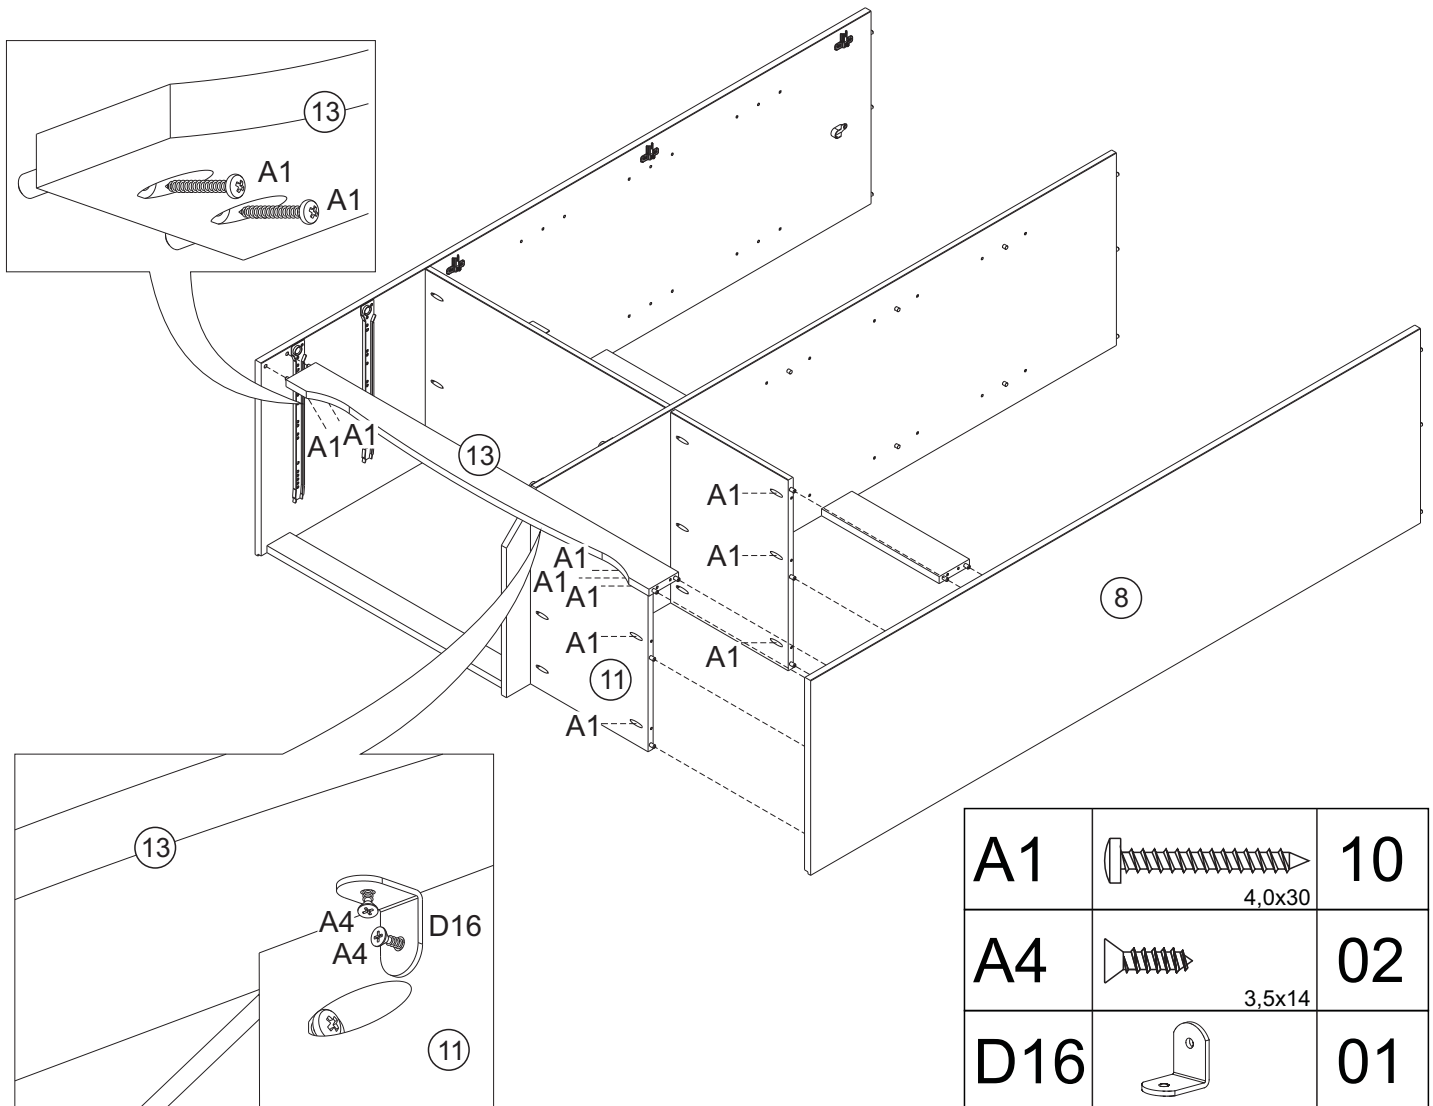


05)

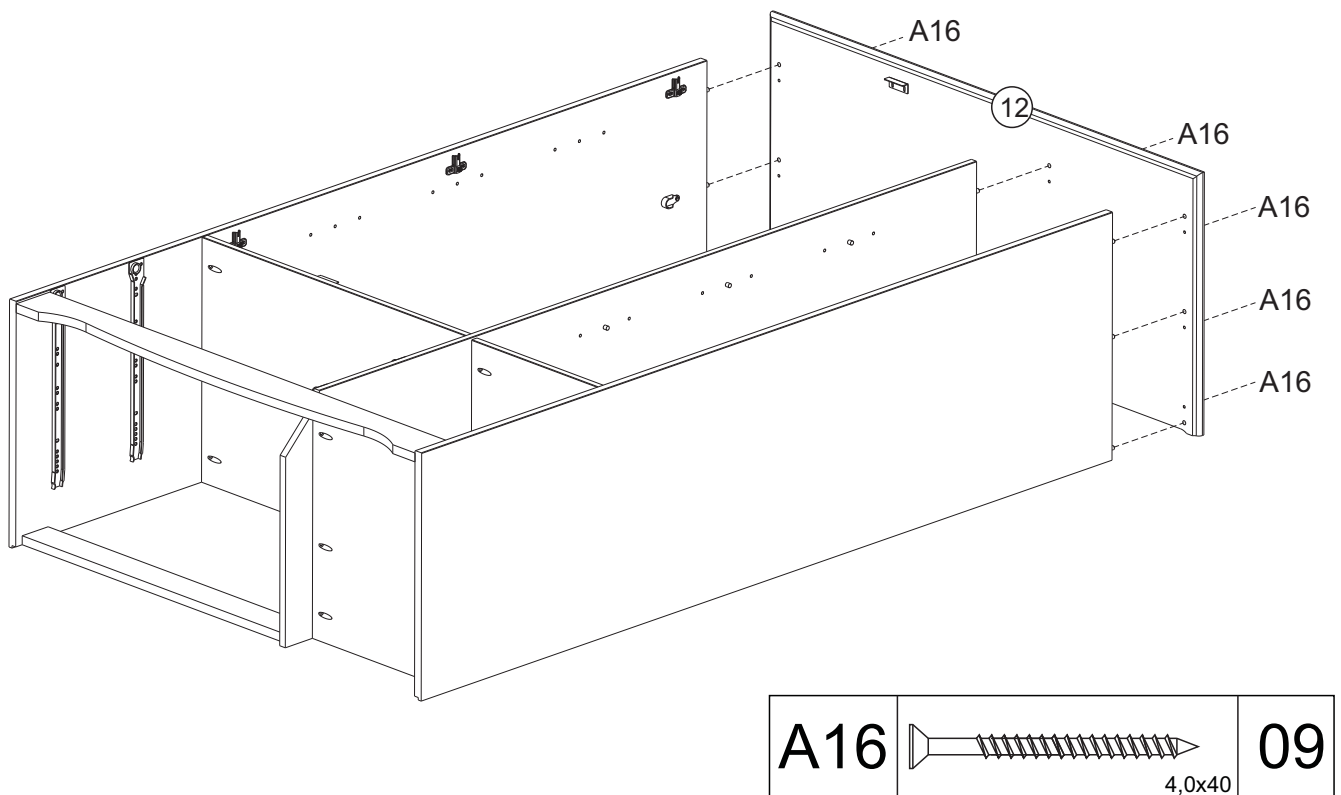





06)

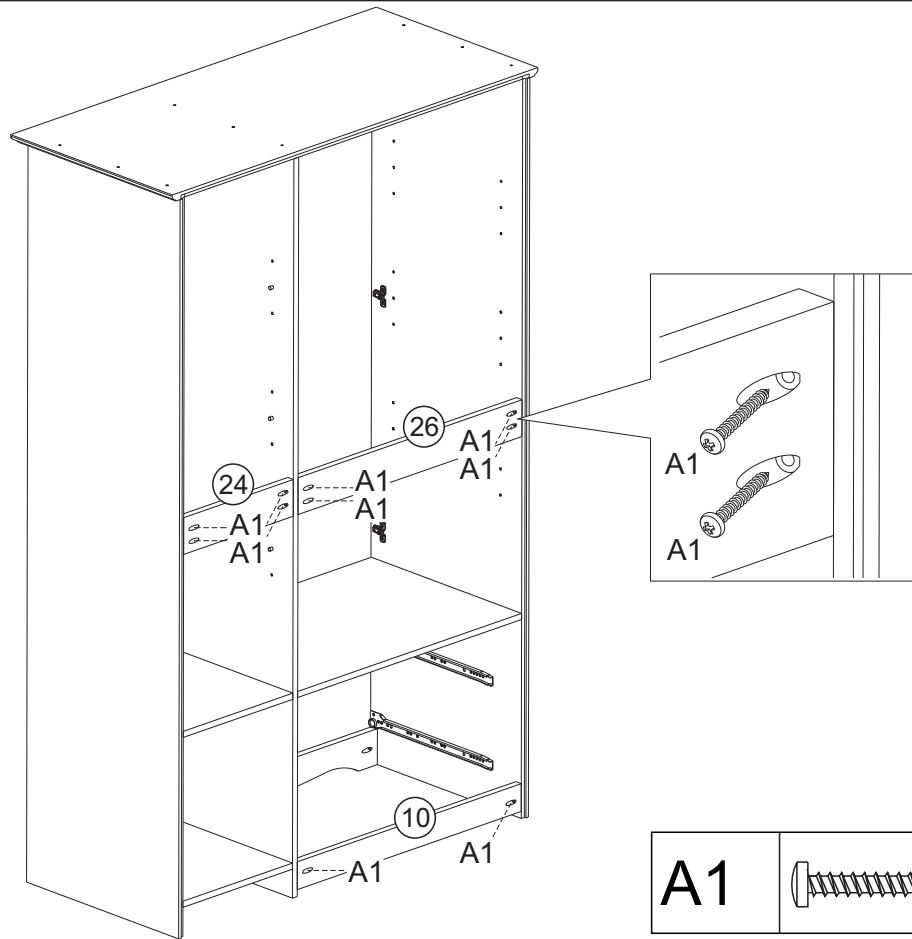


A1		10
	4,0x30	

07)

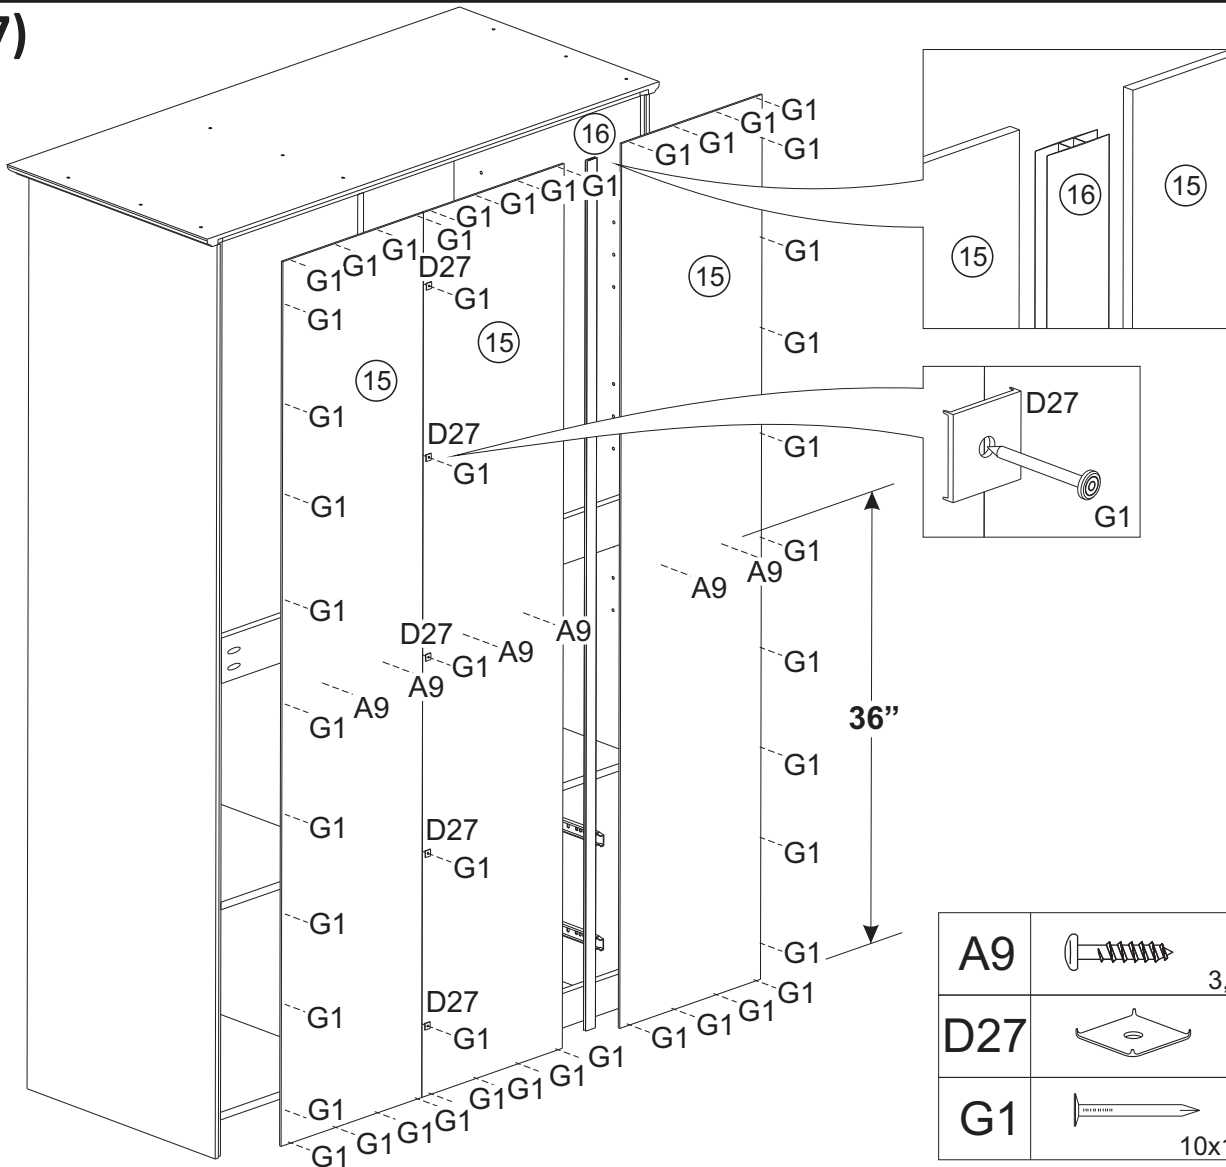


A9		3,5x16	06
D27			05
G1		10x10mm	70

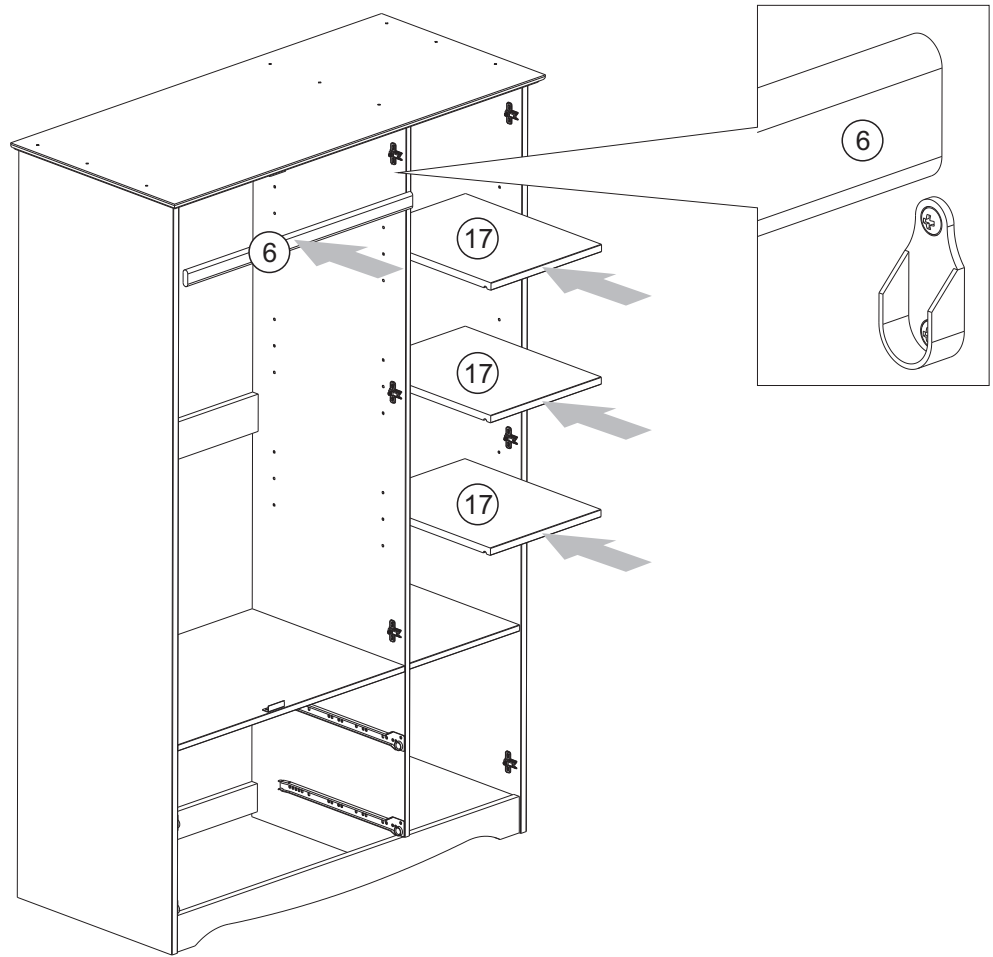


08)

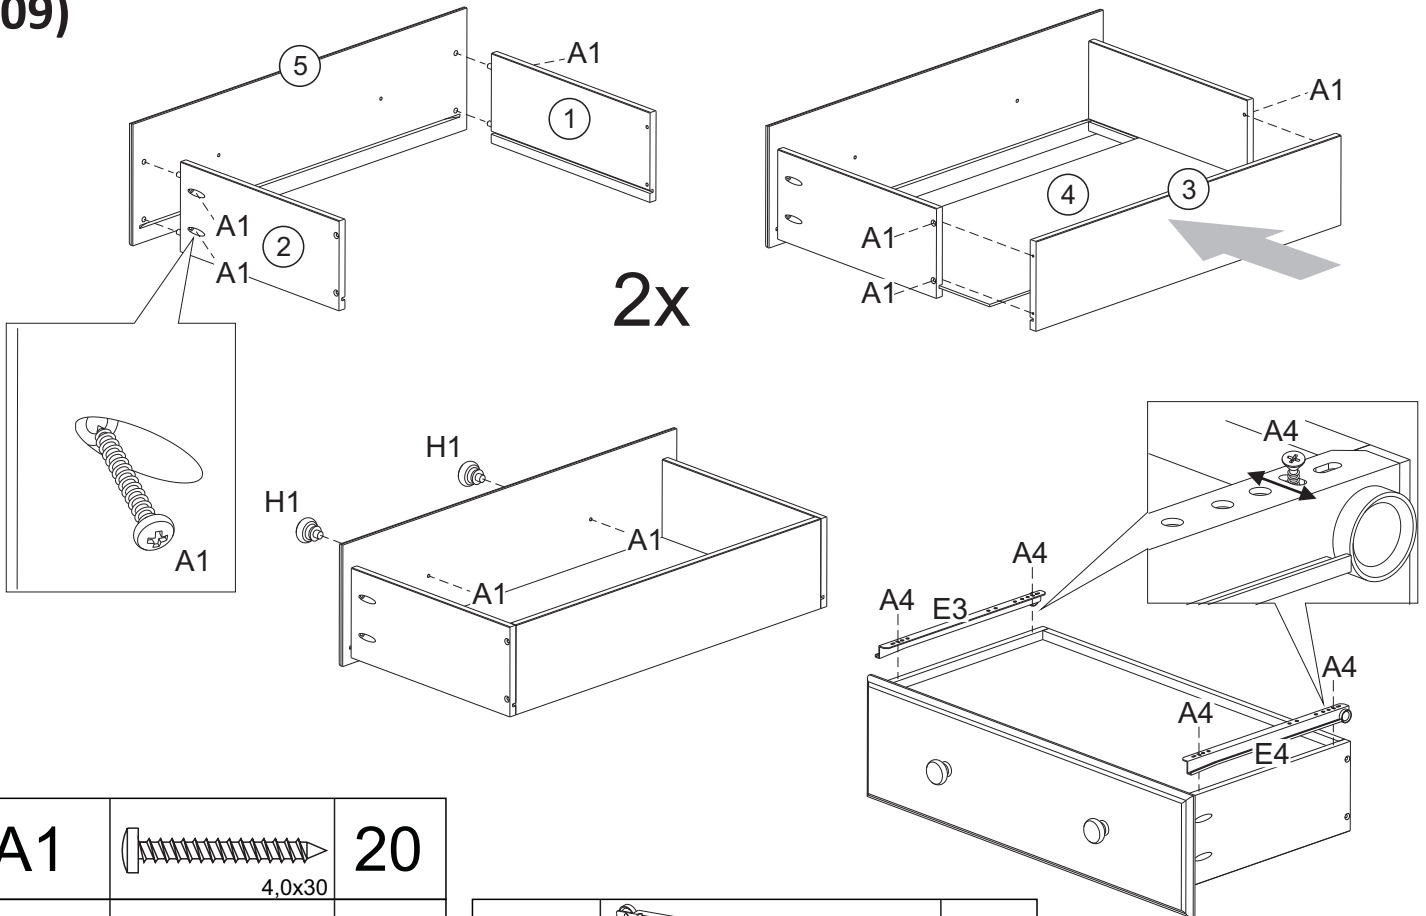



09)





2x



A1	 4,0x30	20
A4	 3,5x14	08
H1		04

E3	 400mm - 15 3/4"	02
E4	 400mm - 15 3/4"	02


10)

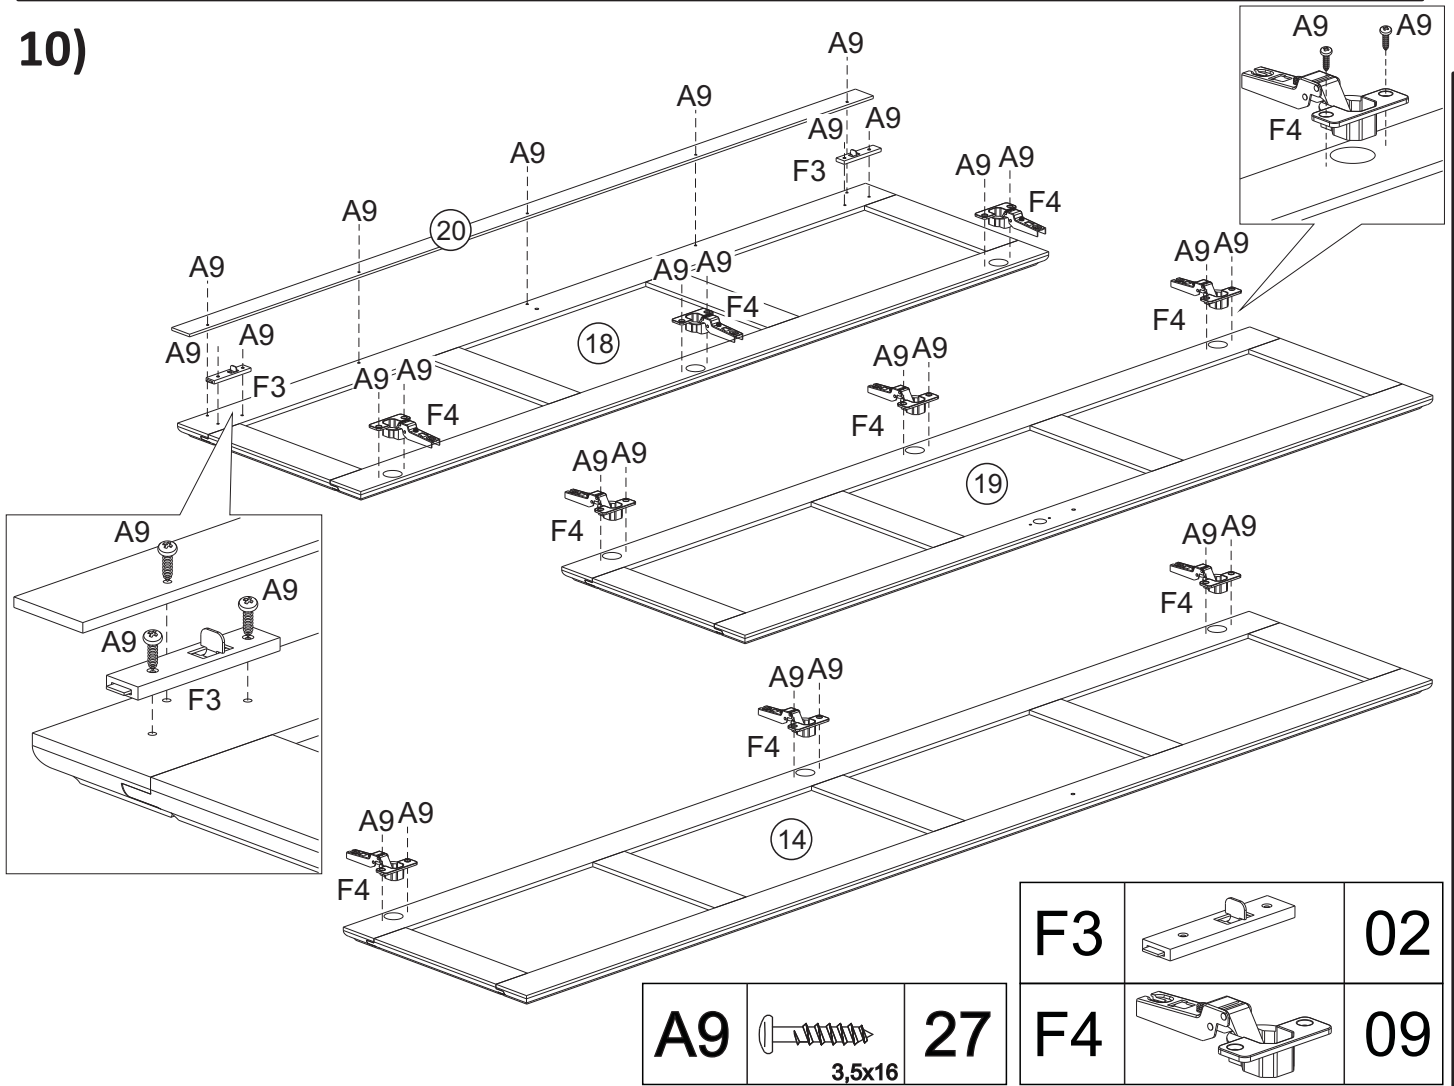






A9		27
	3,5x16	

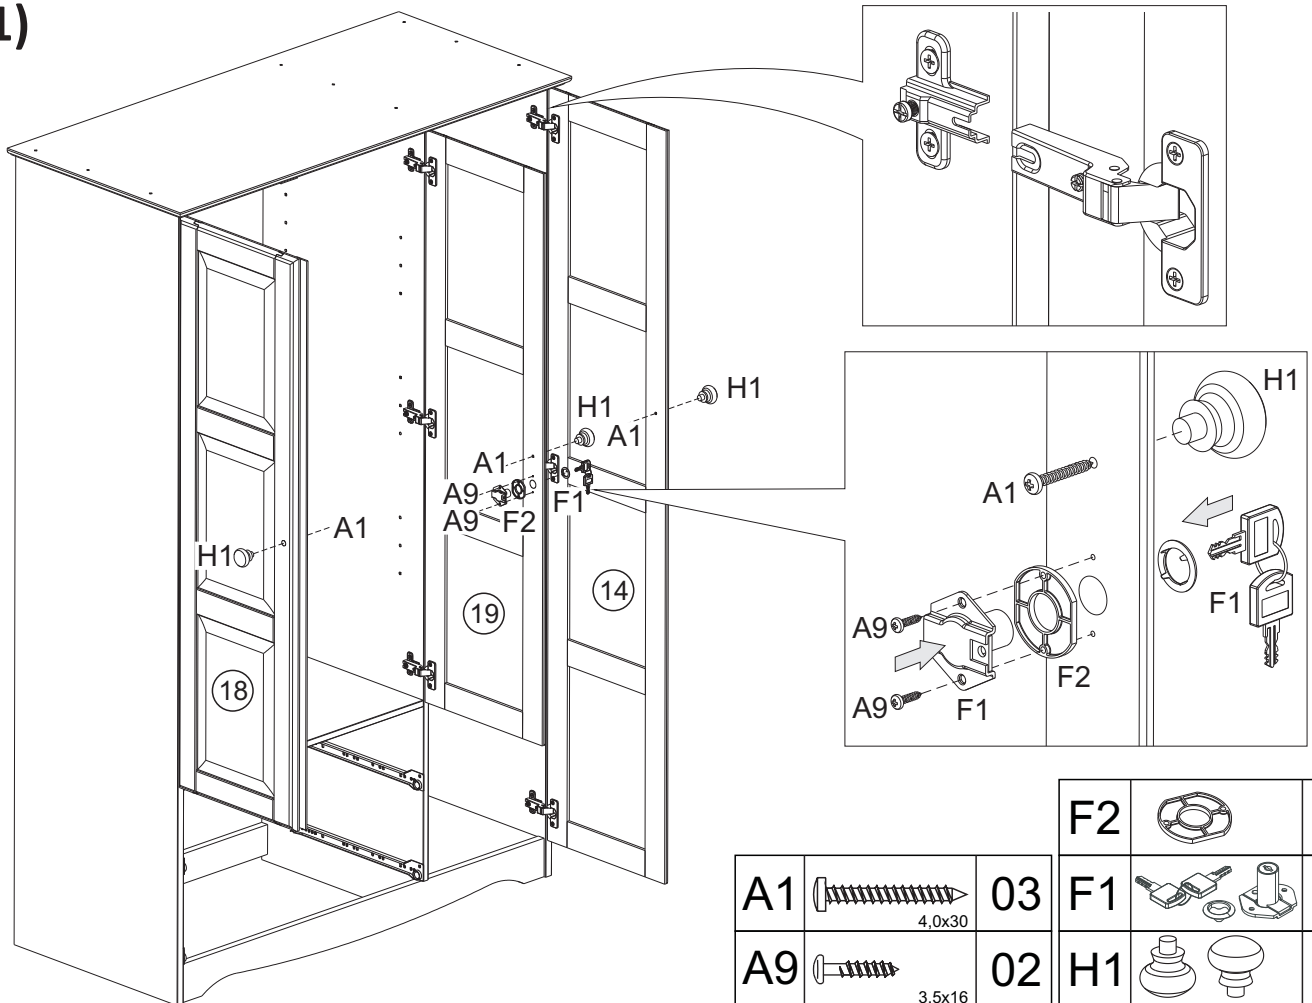F3		02
F4		09


11)



A1		03
	4,0x30	
A9		02
	3,5x16	

F2		01
F1		01
H1		03

12)

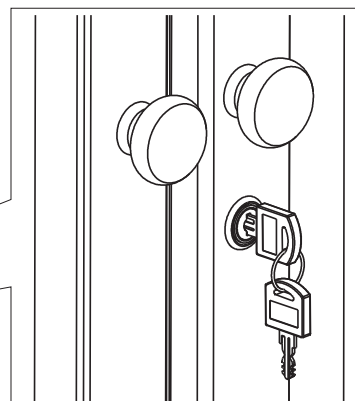

To adjust the glides' vertical position please follow the steps below

