


For ages 5 and up.
Holds up to 4 kids; maximum weight capacity: 400 lbs.
Adult assembly and installation required.
Takes 2 adults approximately 30 minutes to assemble.

SkyCurve Platform Swing

Safety and Assembly Instructions

Make sure you have all the necessary parts:

- 2 long curved steel poles
- 2 short straight steel poles
- 2 sets of 2 thick plastic corner connectors with rope attached
- 16 screws with washers
- 2 Allen wrenches
- 1 polypropylene mesh mat

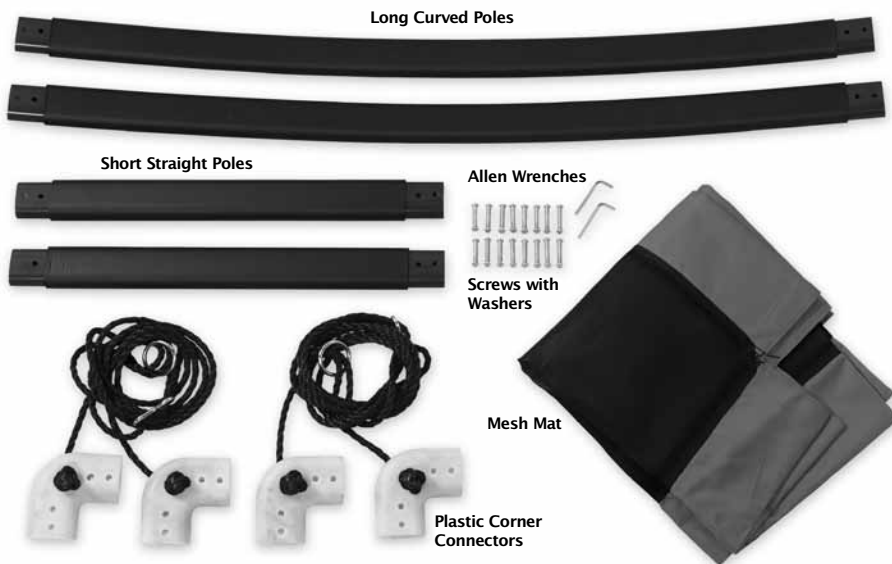

Please note: The SkyCurve Platform Swing is intended solely for family and domestic use, not for a commercial playground or daycare.

Hanging hardware not included. Hang the SkyCurve Platform Swing on level ground, not less than 6' (1.8m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires. Ideally, the Sky-Curve Platform Swing should be hung over grass, sand, wood chips, or other soft surfaces. Under no circumstances should it be hung over concrete, asphalt, or other hard surfaces. Distance from ground should not exceed 18". Children must not use the SkyCurve Platform Swing until it has been properly installed. Can be hung on an A-frame or swing set or on a tree limb of a diameter of at least 10"-12".

Please be sure to examine the ropes regularly to check for wear. Rope will, in time, degrade. If the rope looks pale, frays easily, or gives off a powdery material when rubbed between the fingers, we recommend you replace the swing.



1. Lay mat out on the ground.



2. Slip the two long poles into the mat's two long sleeves, making sure the pole curves are going the same way.



3. Slip one short, straight pole into a short sleeve at one end of the swing.



4. Working at the end with the short pole, connect a plastic corner connector to the end of one long pole and one end of the short pole. (Make sure the large knots are on the swing's bottom.)



5. Use the corner connector from the second set of corner connectors (i.e., with a different rope attached) to connect the other long pole to the other end of the short pole.



6. Loosely screw each corner connector to the poles: push the long end of the screws up through the bottom of the connector (where the knot should be) and screw the short end down from the top.



7. Moving to the other end of the swing, slide the short pole into the short sleeve.



8. Screw the two remaining corner connectors loosely to the ends of the remaining short piece, making sure their knots are facing downward.



9. Invite a second person to help with attaching this short piece to the swing. Have each person grasp a corner connector in one hand and a long rail in the other. Simultaneously join the ends while aligning the holes so the ends "snap" into place. Tighten all screws, and enjoy!

Safety Guidelines

Clearance distance should be 6' around the swing.

A fall onto a hard surface can result in serious injury to the equipment user.

Do not use the equipment until properly installed.

This swing is not to be used in any other manner other than its intended use.

Adult supervision is required.

Adults should verify that the hanging ropes are secured and cannot be looped back on the swing.

Do not use this equipment in a manner other than intended.

It is important for adults to instruct children to:

- Dress appropriately while using the swing (avoid ponchos, scarves, and other loose-fitting clothing that is potentially hazardous).
- Instruct children when swinging alone to put their full weight in the center of the swing.
- Warning! Please be sure children wear well-fitting footwear that fully encloses the foot when using this swing. Clogs, flip-flops, and sandals are considered inappropriate footwear.

It is important for adults to instruct children NOT to:

- Walk close to, in front of, behind, or between moving items.
- Twist ropes or loop them over the top support bar since such action may reduce the strength of the rope.
- Get off of the swing while it is in motion.
- Climb on the swing when it is wet.
- Attach additional items to the swing that might cause a strangulation hazard.
- Wear a bicycle or sport helmet while on the swing.

Maintaining the Swing

At the beginning of each play season, adults should:

- Tighten all hardware.
- Check all protective coverings on pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seat, ropes for wear, rust, or other deterioration. Replace as needed. The hardware used for this swing (binding post, screw, S hook, lock washer, flat washer, and metal ring) can be found at a local hardware store.
- Check metal parts for rust. If found, sand and repaint using a non-lead-based paint meeting the requirements of 16 CFR 1303.

- Lubricate all metallic moving parts per manufacturer's instructions. If the swing is hung from swing set frame, then lubricate all metallic moving parts that are attached by a metal connection.
- If the swing is hung from a tree branch, then rake and check depth of loose-fill protective surfacing materials (such as mulch or sand) to prevent compaction and to maintain appropriate depth (minimum amount is 9"). Replace as needed.

Twice a month during play season, adults should:

- Tighten all hardware.
- Check all protective coverings on pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- If the swing is hung from a tree branch, then rake and check depth of loose-fill protective surfacing materials (such as mulch or sand) to prevent compaction and to maintain appropriate depth (minimum amount is 9"). Replace as needed.

Once a month during play season, adults should:

- Check all moving parts including ropes for wear or other deterioration. Replace as needed.
- Lubricate all metallic moving parts per manufacturer's instructions.
- If the swing is hung from a tree branch, then rake and check depth of loose-fill protective surfacing materials (such as mulch or sand) to prevent compaction and to maintain appropriate depth (minimum amount is 9"). Replace as needed.

At the end of each play season or when the temperature falls below 40°F, adults should:

- Remove the swing from its outdoor location.
- Store the swing in a dry environment.
- If the swing is hung from a tree branch, then rake and check depth of loose-fill protective surfacing materials (such as mulch or sand) to prevent compaction and to maintain appropriate depth (minimum amount is 9"). Replace as needed.
- To clean, spot clean.

Disposing of the Swing

To dispose of the swing, first disassemble it. Dispose of it in such a way that no unreasonable hazards will exist at the time that the swing is discarded.

This conforms to ASTM F1148, Consumer Safety Performance Specification for Home Playground Equipment.

Please retain these instructions for future use.



hearthsong.com

Item #730687 Made in China exclusively for Hearthsong®.
©2016. Hearthsong®, Madison, VA 22727 (800) 533-4397